


PS36SS

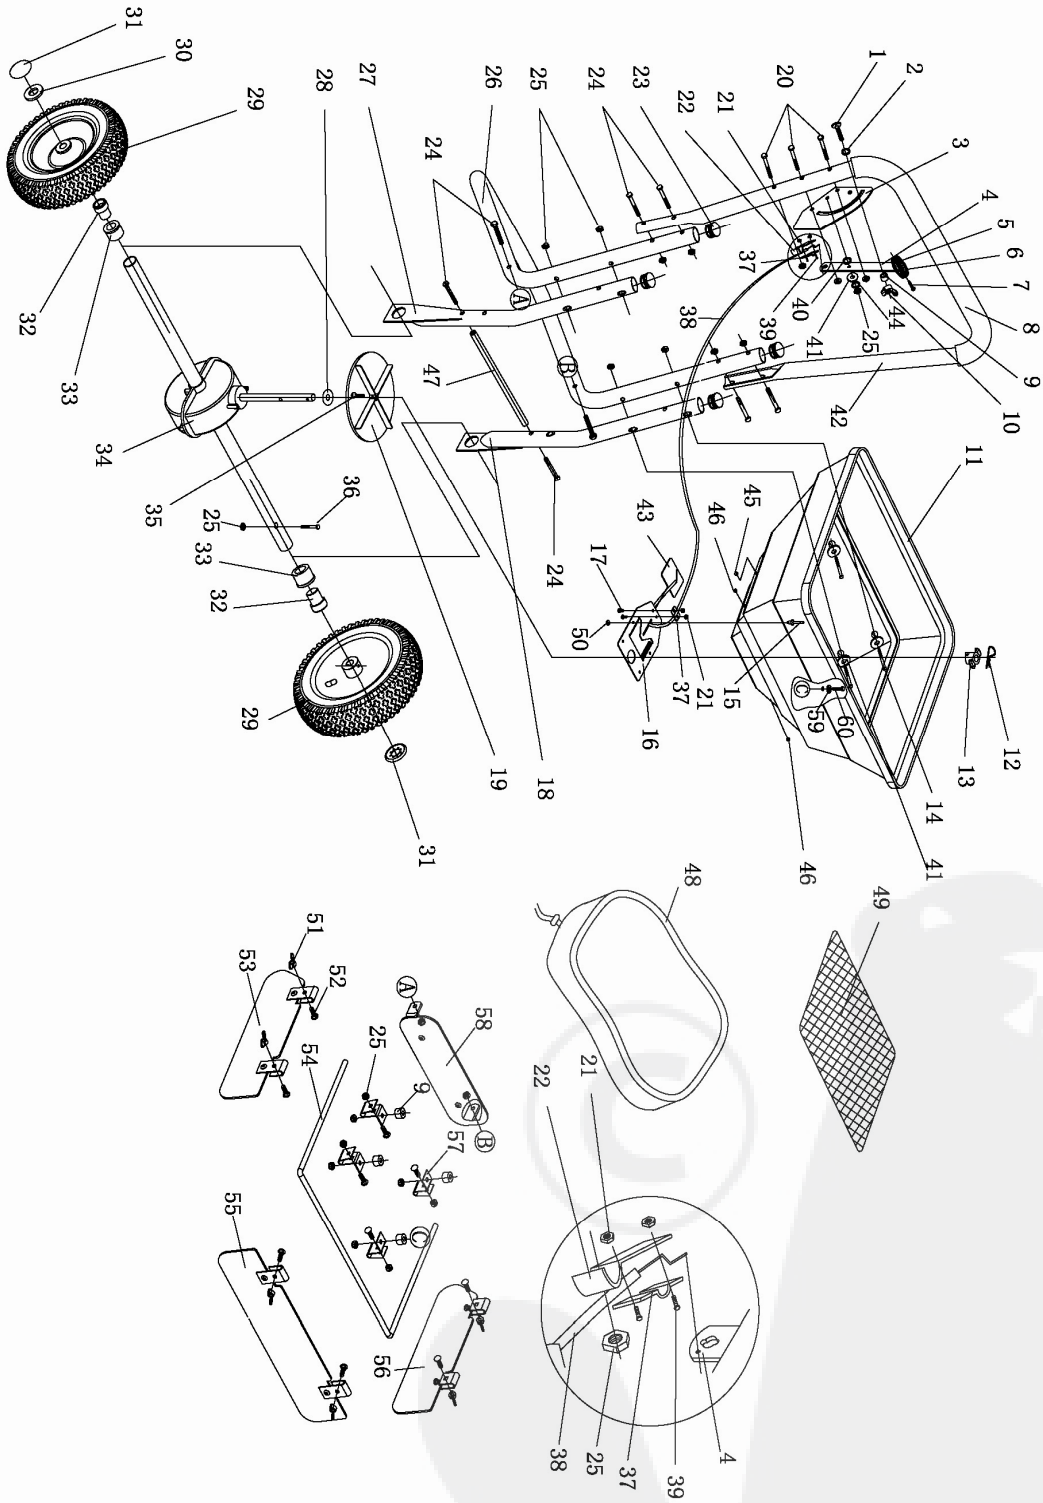

PS36SS

Ref#		Description	Ref#		Description
1	PS36SS-1	Carriage Bolt M6x25	31	PS36SS-31	Axle End Cover
2	PS36SS-2	External-tooth Washer Ø8	32	PS36SS-32	Inner Axle Bushing
3	PS36SS-3	Gauge and Lever Assembly	33	PS36SS-33	Outer Axle Bushing
4	PS36SS-4	Adjust Handle Pole	34	PS36SS-34	Gear Box & Axle Assembly
5	PS36SS-5	Adjust Handle A	35	PS36SS-35	Screw M4x20
6	PS36SS-6	Adjust Handle B	36	PS36SS-36	Hex Bolt M6x60
7	PS36SS-7	Screw M4x18	37	PS36SS-37	Clamp Plate
8	PS36SS-8	Handle Grip	38	PS36SS-38	Adjustable Control Cable
9	PS36SS-9	Spacer Bush	39	PS36SS-39	Hex Bolt M5x10
10	PS36SS-10	Wing Nut M6	40	PS36SS-40	Nylon Washer
11	PS36SS-11	Hopper	41	PS36SS-41	Big Flat Washer Ø6
12	PS36SS-12	R Pin Ø2.5x80	42	PS36SS-42	Handle
13	PS36SS-13	Center Cover	43	PS36SS-43	Active Adjustable Plate
14	PS36SS-14	Hex Bolt M6x70	44	PS36SS-44	Spring Washer Ø6
15	PS36SS-15	Rivet Ø5X13	45	PS36SS-45	Big End Cover
16	PS36SS-16	Fixed Adjustable Plate	46	PS36SS-46	Small End Cover
17	PS36SS-17	Hex Bolt M5x12	47	PS36SS-47	Fixing Connecting Rod
18	PS36SS-18	Wheel Assembly Frame(Left)	48	PS36SS-48	Rain Cover
19	PS36SS-19	Impeller	49	PS36SS-49	Hopper Screen
20	PS36SS-20	Hex Bolt M6x35	50	PS36SS-50	Flat Washer Ø5
21	PS36SS-21	Hex Lock Nut M5	51	PS36SS-51	Wing Nut M6
22	PS36SS-22	Pivot Bracket	52	PS36SS-52	Carriage Bolt M6x20
23	PS36SS-23	Tube End Cap	53	PS36SS-53	Left Deflector
24	PS36SS-24	Hex Bolt M6x40	54	PS36SS-54	Boom stick
25	PS36SS-25	Lock Nut M6	55	PS36SS-55	Front Deflector
26	PS36SS-26	Support Leg	56	PS36SS-56	Right Deflector
27	PS36SS-27	Wheel Assembly Frame(Right)	57	PS36SS-57	Clevis
28	PS36SS-28	Thin Washer	58	PS36SS-58	Rear Deflector
29	PS36SS-29	Pneumatic Wheel	59	PS36SS-59	Flat Washer Ø6
30	PS36SS-30	Flat Washer Ø16	60	PS36SS-60	Hex Bolt M6x30

Hardware bag