



# PS57SS

Ref#		Description	Ref#		Description
1	PS57SS-1	Hopper Assembly	32	PS57SS-32	Gear
2	PS57SS-2	Ø6 Big Flat Washer	33	PS57SS-33	Swivel Axle Base
3	PS57SS-3	M6x40 Hex Bolt	34	PS57SS-34	Connecting Rod
4	PS57SS-4	Hopper Screen	35	PS57SS-35	M8x75 Hex Bolt
5	PS57SS-5	Swivel Axle Bushing	36	PS57SS-36	Wheel Bushing
6	PS57SS-6	Fixed Adjustable Plate	37	PS57SS-37	Fixed Crossover Tube
7	PS57SS-7	Active Adjustable Plate	38	PS57SS-38	End Cap
8	PS57SS-8	Base for Spring	39	PS57SS-39	Support Leg
9	PS57SS-9	M6 Lock Nut	40	PS57SS-40	M6x35 Hex Bolt
10	PS57SS-10	Spring	41	PS57SS-41	Handle Connecting Tube
11	PS57SS-11	M8 Lock Nut	42	PS57SS-42	Sponge Handle
12	PS57SS-12	Ø8 Flat Washer	43	PS57SS-43	Ø5x8 Rivet
13	PS57SS-13	Fixed Plate for Connecting	44	PS57SS-44	Rain Cover
14	PS57SS-14	Impeller	45	PS57SS-45	Swivel Axle Base
15	PS57SS-15	Pneumatic Wheel	46	PS57SS-46	Gauge Level Plate
16	PS57SS-16	Ø5x35 Cotter Pin	47	PS57SS-47	M6x20 Hex Bolt
17	PS57SS-17	Ø16 Flat Washer	48	PS57SS-48	M6x25 Round Head Bolt
18	PS57SS-18	Stainless Steel Wing Nut	49	PS57SS-49	Ø8 Gear Lock Washer
19	PS57SS-19	Wheel Bushing	50	PS57SS-50	Connecting Rod Plate
20	PS57SS-20	Inner Axle Bushing	51	PS57SS-51	Spacer
21	PS57SS-21	Outer Axle Bushing	52	PS57SS-52	Wing Nut
22	PS57SS-22	Support Frame Assembly	53	PS57SS-53	Adjustable Handle
23	PS57SS-23	Hopper Assembling Tube	54	PS57SS-54	Handle Grip
24	PS57SS-24	M6x60 Bolt	55	PS57SS-55	Ø6 Spring Washer
25	PS57SS-25	Swivel Axle	56	PS57SS-56	Nylon Washer
26	PS57SS-26	Small Gear	57	PS57SS-57	Rear Back Plate
27	PS57SS-27	Ø3x16 Spring Pin	58	PS57SS-58	Hanging Plate
28	PS57SS-28	M4x20 Screw	59	PS57SS-59	Side Back Plate
29	PS57SS-29	R-Pin	60	PS57SS-60	M6x20 Round Head Bolt
30	PS57SS-30	Axle	61	PS57SS-61	Front Back Plate
31	PS57SS-31	Ø4x30 Spring Pin	62	PS57SS-62	Hanging Rod

HARDWARE