



PARTS LIST

REF	PART NO.	DESCRIPTION	QTY.
1	B-1673P	Hex Lock Nut- 1/4"	4
2	B-1674P	Hex Lock Nut- 5/16"	16
3	B-3385	Hex Lock Nut- #10	2
4	B-3861	Hitch Pin- 1/2"x2 1/4"	1
5	B-3718	Hex Lock Nut- 3/8"	2
6	B-5925	Logo Decal	1
7	D-146P	Hair Pin Cotter	1
8	R-618	Special Washer- 5/16"	4
9	R-644A-01	Frame Latch	2
10	R-646	Latch Spring	2
11	R-2330	Brush Axle	1
12	R-892-10	Drawbar Clevis	2
13	R-1287-10	Rear Tube- Top & Bottom	2
14	R-1288	Stop Rod	1
15	R-2279-LH	Drive Pinion, Left Hand	1
16	R-2279-RH	Drive Pinion, Right Hand	1
17	R-2395	Drive Pin- 3/16"x3/4"	2
18	R-1882	Handle Grip	1
19	R-1039	Pull Rope	1
20	R-1502	Machine Screw- #10 x 7/8"	2
21	R-1509	Brush holder Half	4
22	R-1523	Hex Screw- #10 x 1/2"	8
23	R-1584	Drive Gear	2
24	R-1595	Shoulder Bolt- 1/2"	2
25	R-1721	Height Adjust Decal	1
26	R-1722	Pan Head Screw- 1/4" x 3/4"	6
27	R-1723-SP	Wheel & Tire Assembly	2
28	R-1738-10	Dust Shield	2
29	R-1805 -10	Side Tube	2
30	R-2331	Flange Bearing	2

STS-361 BH

REF	PART NO.	DESCRIPTION	QTY.
31	R-1806-10	Lower Tube	2
32	R-1866-10	Baffle	1
33	R-1860-10	Housing Assembly	1
34	R-1815	Hamper Spring Rod	2
35	R-1816-10	Hamper Support Bar	2
36	R-2225	Hamper Spacer	2
37	F-782	Adjusting Knob	1
38	R-1865	Hamper & Wind Screen	1
39	R-1862	Brush Section	4
40	R-1843-10	Tow Bar Support Tube	1
41	R-1845-10	Wheel Support Tube	1
42	R-1846-10	Handle Assembly	1
43	R-1848-10	Tow Bar Assembly	1
44	R-1856-SP	Bronze Bearing-Short	2
45	1M0824P	Hex Bolt- 1/4"x1-1/2"	2
46	2M0832P	Hex Bolt- 1/4"x2"	2
47	2M1012P	Hex Bolt- 5/16"x3/4"	6
48	2M1016P	Hex Bolt- 5/16"x1"	2
49	2M1020P	Hex Bolt- 5/16"x1-1/4"	4
50	10M1020P	Carriage Bolt- 5/16"x1-1/4"	2
51	10M1032P	Carriage Bolt- 5/16"x2"	2
52	30M0600P	Hex Nut- #10	8
53	30M1200P	Hex Nut- 3/8"	2
54	45M0909P	Flat Washer- 1/4"	6
55	45M1111P	Flat Washer- 5/16"	2
56	45M1717P	Flat Washer- 1/2"	5
57	B-1675P	Hex Lock Nut-3/8"	2
58	R-1946	Instructions Decal	1
59	R-2226	Machinery Bushing, 1/2"	2
60	R-2398	External Retaining Ring, 1/2"	2
61	B-4713	Washer	2

L-1526-BH -2