
# PRECISION PRODUCTS, INC.

## Pavement/Leaf/Lawn Sweeper

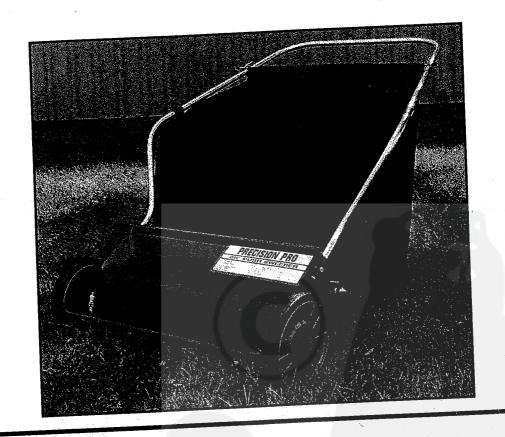

Owner's Manual and Parts List


26" DELUXE PUSH LAWNSWEEPER MODEL SW26PRE

Created 03-2000

-1-

Form No. M1-000

5m26 8816

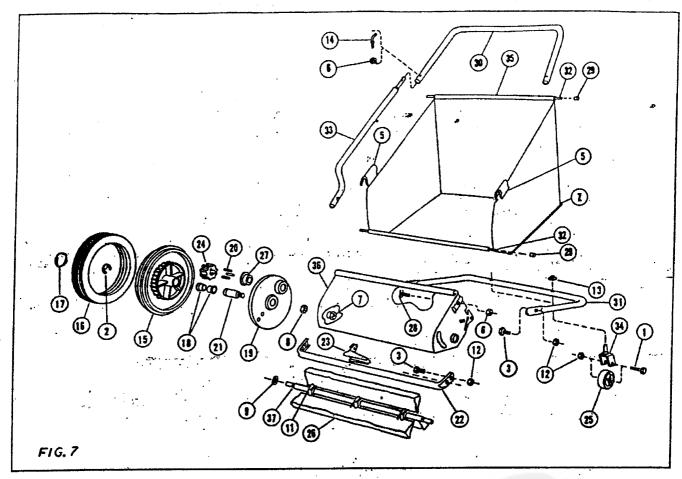


Your Lawnsweeper box contains the following items: 1- Chassis, 1- Steering handle, 2- Side Handles (R.H & L.H.), 1- Parts Kit, (Four bolts and four nuts), 1- Manual, & 1- Hamper assembly.

#### PARTS LIST

| KEY | NUMBER  | QTY | DESCRIPTION                     | KEY | PART NO. | QTY | DESCRIPTION                |
|-----|---------|-----|---------------------------------|-----|----------|-----|----------------------------|
| 1   | L-127   | 2   | 5/16-18 X 1-1/2 HEX HD. CP. SC. | 22  | L-6102   | 1   | BUMPER TUBE                |
| 2   | L-262   | 2   | 5/8 TYPE "E" RETAINING RING     | 23  | L-6151   | 1   | SPRING ADJUSTMENT          |
| 3   | L-279   | 6   | 5/16-18 X 1/2 HEX HD. SC.       | 24  | L-6157   | 2   | PINION GEAR                |
| 6   | L-73    | 4   | 1/4-20 NUT                      | 25  | L-6190B  | 2   | CASTER WHEEL               |
| 7   | L-5485  | 2   | 3/8-24 PILOT NUT                | 26  | I-1060   | 3   | BRUSH STRIP                |
| 8   | L-5486M | 2   | 3/8-24 LOCK NUT (SPEC.)         | 27  | I-1080   | 2   | FLANGE BEARING             |
| 9   | X-1041  | 2   | 1/2 PUSH ON                     | 28  | X-1182   | 2   | 1/4-20 X 1-1/4 BOLT        |
| 11  | X-1043  | 9   | BRUSH HOLDER SPRING             | 29  | I-1287   | 4   | RUBBER CAP                 |
| 12  | X-1107  | 8   | 5/16-18 CENTER LOCK NUT         | 30  | I-1354   | 1   | STEERING HANDLE            |
| 13  | X-1348  | 2   | 5/16" PUSH ON CAP               | 31  | I-1336   | 1   | CARRIAGE TUBE              |
| 14  | X-1360  | 2   | HOOK BOLT                       | 32  | I-1344   | 2   | HAMPER ROD                 |
| 15  | L-5464  | 2   | 10" PLASTIC WHEEL               | 33  | I-2274   | 1   | SIDE HANDLE TUBE R.H.      |
| 16  | I-1418  | 2   | TIRE                            | Ni  | I-2275   | 1   | SIDE HANDLE TUBE L.H.      |
| 17  | L-5471B | 2   | HUB CAP                         | 34  | IA-1311  | 2   | CASTER BRACKET ASSEMBLY    |
| 18  | L-5472  | 4   | WHEEL BUSHING                   | 35  | IA-1815  | 1   | HAMPER ASSEMBLY            |
| 19  | I-2399  | 2   | WHEEL SHIELD                    | 36  | IA-2277  | 1   | SHIELD ASSEMBLY            |
| 20  | L-5480  | 6   | PINION PAWL                     | 37  | IA-1346  | 1   | BRUSH AXLE & DISC ASSEMBLY |
| 21  | L-5496  | 2   | WHEEL STUD AXLE                 |     |          |     |                            |

### **OPERATION**

- 1. BRUSH HEIGHT ADJUSTMENT. You can sweep both lawn and paved areas by a simple adjustment of the brush. To raise brush to sweep your lawn, merely squeeze brush control and push down on front of bumper tube. At the same time, with the other hand, pull up on right corner of chassis. To lower brush, just reverse above instructions. See figure 5. Whenever sweeper seems to push hard, merely raise brush one notch higher. For best operation on lawns the brush should merely flick the top of grass blades.
- DUMPING SWEEPER. Release hamper hanger from side hamper tubes. Then, lift front hamper rod up and to rear of sweeper. Now, remove rear hamper rod from hooks (14) and lift hamper from sweeper. If dumping location is far from sweeping area, it may be desirable to pile 5. several hamper loads of debris on a tarpaulin for faster removal to dumping location.
- 3. STORAGE. Just fold stand forward under chassis. Hamper will fold itself when sweeper is hung on wall or set in corner against wall for compact winter storage.
- 4. NO LUBRICATION REQUIRED. Brush axle bearings are lubricated and sealed during factory assembly. No other lubrication is necessary. DO NOT OIL OR GREASE GEARS IN WHEELS. If oil or grease is applied to these parts the brush will not rotate. Then it is necessary to remove wheel and wipe parts clean.

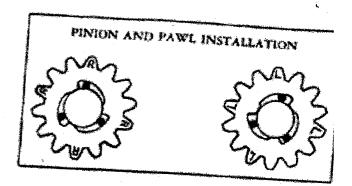

Your lawnsweeper is precision manufactured by experienced craftsmen, using the very finest in tools an materials. Although it is ruggedly constructed, do not subject it to misuse. CAUTION :DO NOT PUSH SWEEPER TOO CLOSE TO FIRE - the brushes will burn. BE SURE TO WIPE OFF YOUR LAWNSWEEPER AFTER EACH USE. Store in a dry place out of direct sunlight. Don't permit the sweeper to stand in the hot sun unless it is in actual use.

You will find many work-saving uses for your lawn- sweeper. Use it in the early spring to give your lawn a good healthful scrubbing. Use it throughout the spring and summer both before and after mowing. Sweeping before mowing stands up the grass for a clean, even mowing - and protects your mower from sticks, stones, or nuts which might damage the blades of your mower. After mowing, your lawnsweeper will whisk away unsightly grass clip- pings - leaving your lawn velvety smooth.

PLEASE DO NOT RETURN THIS MERCHANDISE TO THE STORE CALL US AND WE WILL TAKE CARE OF ANY PROBLEMS YOU MIGHT HAVE WITH THIS PRODUCT. **HOW TO ORDER PARTS:** 

When ordering parts, always give model #, part #, part description, and inspector #.

SENT TO:

SERVICE DEPARTMENT

316 LIMIT STREET

LINCOLN, IL 62656

OR CALL:

800-225-5891

OR FAX:

217-735-2435

#### **GUARANTEE**

The merchandise you have purchased from us has been carefully engineered and manufactured under PRECISION PRODUCTS'S INC. rigid quality standards and should give you satisfactory dependable operation. However, like all mechanical merchandise, it may occasionally require adjustment or maintenance.