


OWNER'S MANUAL

11 H.P.
36" RIDING
LAWN TRACTOR
MODEL NUMBER L1219AR

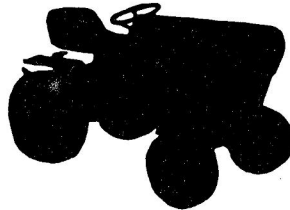

FC Tihange



LAWN AND GARDEN
POWER EQUIPMENT

ROPER

OUTDOOR POWER PRODUCTS


DIVISION OF ROPER CORPORATION

1905 WEST COURT STREET
KANKAKEE, ILLINOIS 60901

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

ELECTRIC & ENGINE

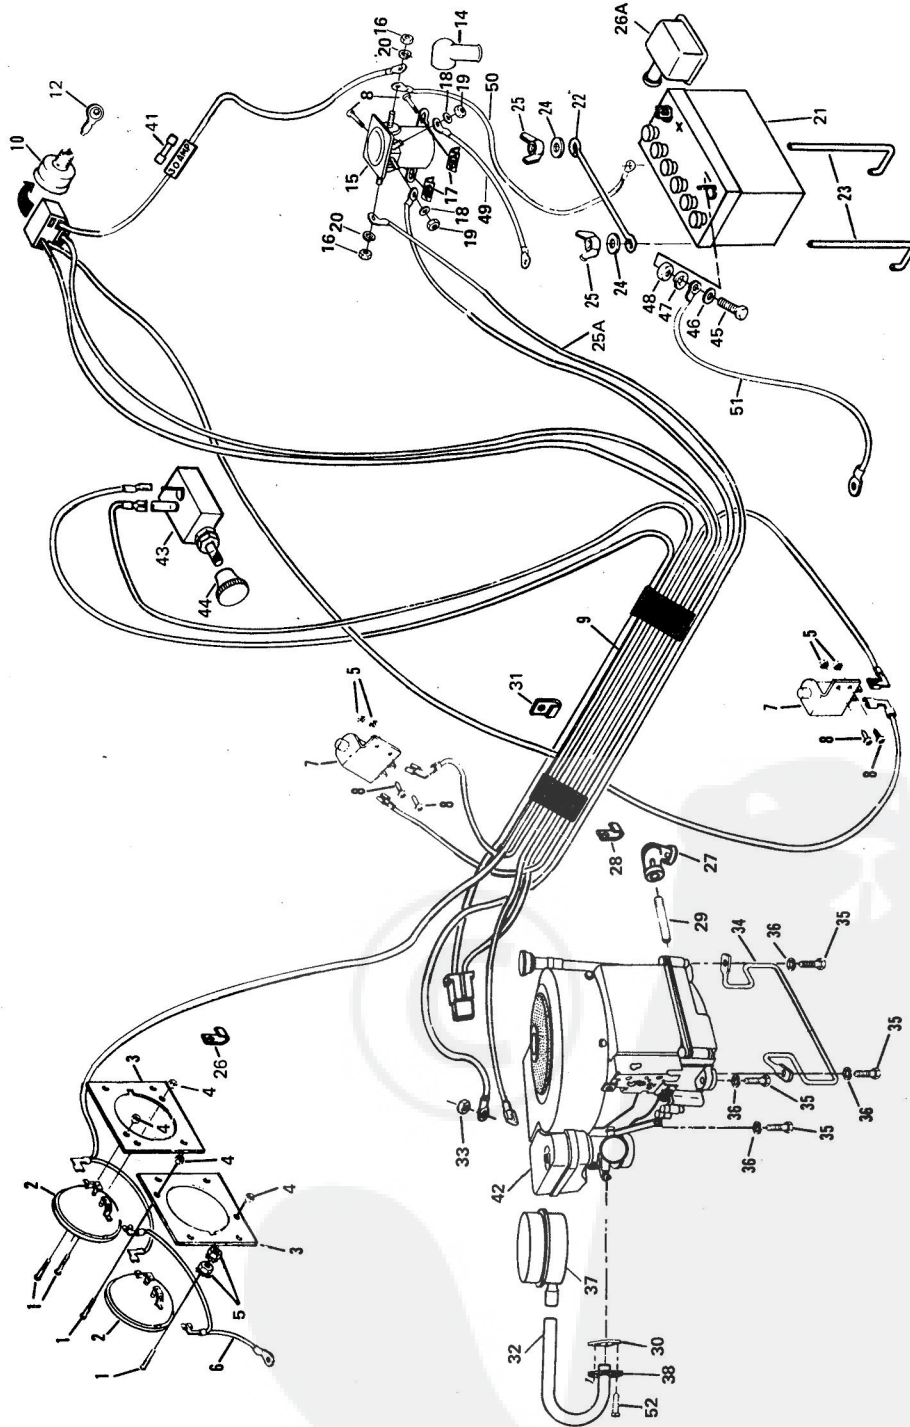

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR


ELECTRIC & ENGINE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	3226P	Screw, Machine Truss Head No. 10 - 24 x 1	27	4017P	Std. Elbow 90° 3/8 - 18 NPT
2	6452R	Headlight	28	5320R	Insulated Clip
3	73025	Headlight Support	29	73458	Nipple
4	4632H	Nut, Lock No. 10 - 24	30	1407J	Exhaust Gasket
5	561P	Nut, Lock No. 10 - 24 UNC	31	6794R	Insulated Clip
6	71706	Wire Assembly	32	1386J	Exhaust Tube
7	7755R	Safety Switch	33	53490	Nut, Lock 1/4 - 20 UNC
8	3359P	Screw, Machine Phillips Head No. 10 - 24 x 1/2	34	1795J	Belt Keeper
9	1797J	Wire Harness	35	5608P	Screw, Hex Hd. Thd. Rolling 3/8 - 16 x 1 - 1/2
10	4406R	Ignition Switch (Inc. Ref No. 12)	36	1004P	*Washer, Lock 3/8
12	7552H	Key Set	37	677A86	Muffler
14	719J	Terminal Cover	38	1429J	Exhaust Flange
15	7754R	Solenoid	41	6347R	Fuse - 30 Amp.
16	538P	*Nut, Hex Jam 5/16 - 24 UNF	42	252707	Engine - Briggs and Stratton 11 H.P. Type No. 0172-01 (See pages 26 thru 28)
17	578P	Nut, Speed No. 10 - 24 UNC	43	7793R	Light Switch
18	1006P	*Washer, Lock No. 10	44	7794R	Knob, Light Switch
19	543P	*Nut, Hex No. 10 - 32 UNF	45	3003P	*Hex Bolt 1/4 - 20 x 3/4
20	1003P	Battery	46	1506P	*Washer 9/32 x 5/8 x 16 Ga.
21	228J	Battery Rod	47	1002P	*Lockwasher 1/4 Heavy
22	67187	Battery Bolt	48	503P	*Hex Nut 1/4 - 20 UNC
23	70456	Washer 9/32 x 3/4 x 16 Ga.	49	8027R	Wire - Ground Solenoid
24	1507P	Wing Nut 1/4 - 20 UNC	50	597J	Battery Cable
25	577P	Wire - Solenoid to Starter	51	596J	Ground Cable
25A	1347J	Insulated Clip	52	3134P	*Hex Bolt 5/16 - 18 x 3/4 Gr. 5
26	2521R	Terminal Cover	...	1807J	Fact and Warranty Tag
26A	225J	Terminal Cover	...	1790J	Owners Manual

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

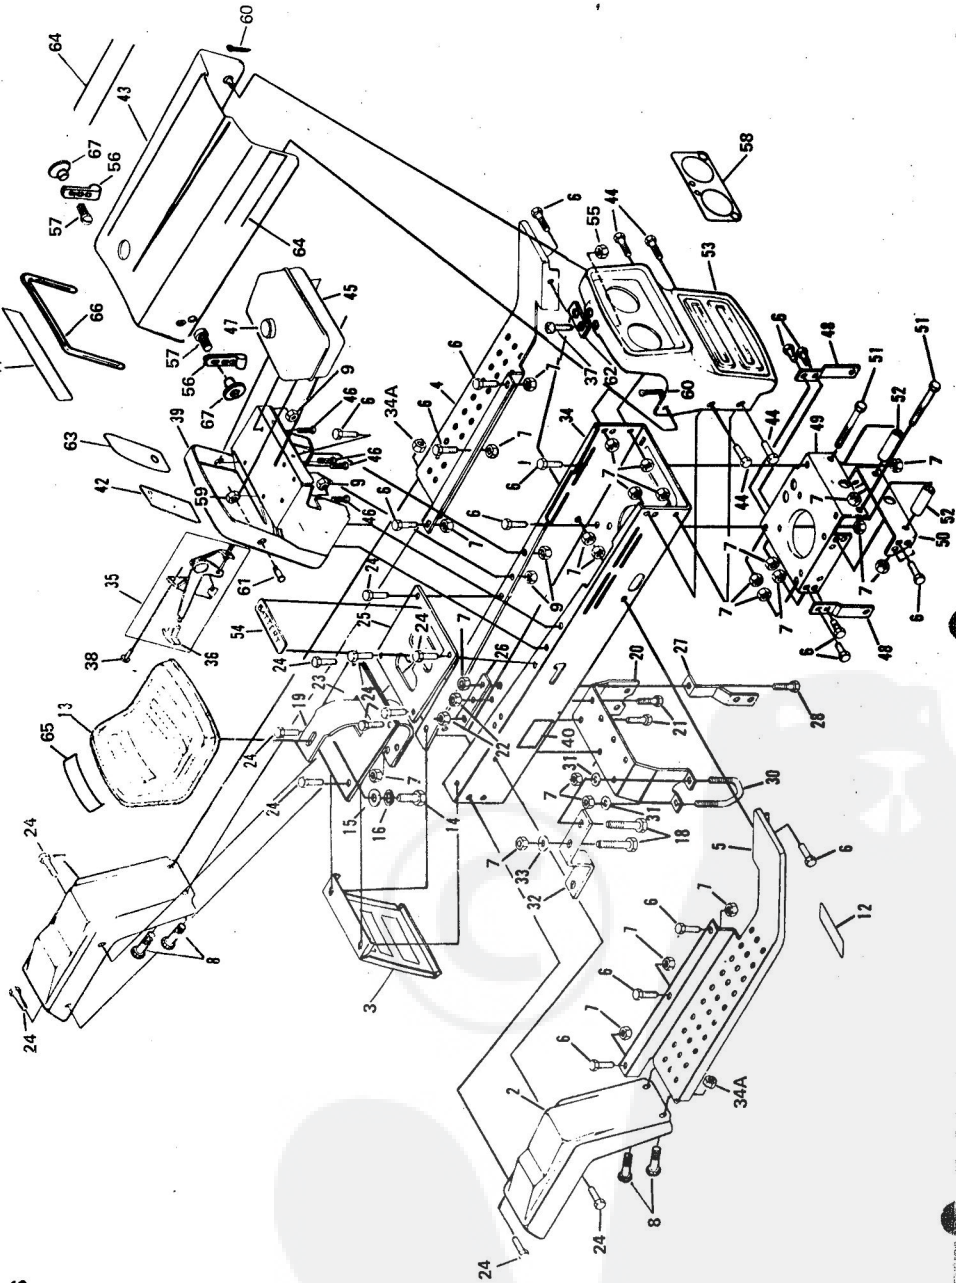

CHASSIS

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

CHASSIS


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	388J	Fender - L.H.	35	1544J	Remote Control Ass'y. (Inc. Ref. No. 36)
2	389J	Rear Cover	36	61159	Knob - Remote Control
3	1538J	Foot Rest, L.H.	37	3320P	*Screw, Pan Hd. Machine No. 10 - 24 x 1/2
4	1539J	Foot Rest, R.H.	38	5606P	Screw, Hex Washer Hd. Thd. Cutting 1/4 - 20 x 1/2
5	1540J	*Bolt, Hex Head 5/16 - 18 x 3/4	39	677A93	Dash Ass'y.
6	3010P	Nut, Lock 5/16 - 18 UNC	40	243J	Decal, "11"
7	575P	Nut, Hex Head 5/16 - 18 x 1/2	41	655J	Decal - Dash, Instructions
8	3008P	Nut, Keps 5/16 - 18 UNC	42	482J	Decal - Dash, Controls
9	532P	Decal - Clutch and Brake	43	677A12	Hood Ass'y.
12	376J	Seat	44	3386P	Screw, Hex Washer Hd. 5/16 - 18 x 3/4
13	2126J	*Bolt, Hex Head 1/2 - 13 x 1	45	73427	Fuel Tank
14	3042P	Washer 17/32 x 1 - 3/16 x 11 Ga.	46	5547P	Screw, Thd. Cutting 1/4 - 20 x 3/4
15	1546P	*Washer, Lock 1/2	47	74145	Fuel Cap
16	1000P	*Bolt, Hex Head 5/16 - 18 x 1 - 1/4 Gr. 5	48	71190	Brake Rod Bracket
18	3012P	Seat Spring	49	1839J	Engine Base
19	73790	Transaxle Support	50	71178	Rocker Bar Support
20	73791	*Bolt, Hex Head 3/8 - 16 x 1	51	3271P	*Bolt, Hex Head 5/16 - 18 x 2 - 3/4
21	3023P	Nut, Lock 3/8 - 16	52	71431	Bushing
22	545P	Cover Plate	53	374J	Grill Frame
23	1750J	Screw, Hex Hd. Thd. Rolling 5/16 - 18 x 1/2	54	74307	Battery Cap
24	5612P	Support	55	4632H	Locknut No. 10 - 24 UNC
25	677A53	Axle Strap	56	8889R	Hood Latch
26	71507	*Bolt, Hex Head 5/16 - 18 x 1	57	3088P	Screw, Phillips P.H. Machine No. 10 - 24 UNC x 3/8
27	71198	Clamp	58	602J	Decal - Headlight
28	3011P	Tow Hitch	59	561P	Nut, Keps No. 10 - 24 UNC
30	71606	Washer, 5/16 x 3/4 x 11 Ga.	60	2503P	*Cotter Pin 3/32 x 3/4
31	1609P	Washer, 3/8 x 1 - 1/4 x 6 Ga.	61	8753R	Hood Latch Pin
32	71205	Chassis	62	470J	Hood Bumper
33	1610P	Keps Jam Nut 5/16 - 18 UNC	63	481J	Decal - Dash, L.H.
34	1320J		64	242J	Decal, Hood
34A	585P		65	245J	Decal, Seat Back
			66	892J	Hood Strip
			67	2029J	Weidnut

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

CLUTCH-BRAKE & DRIVE

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

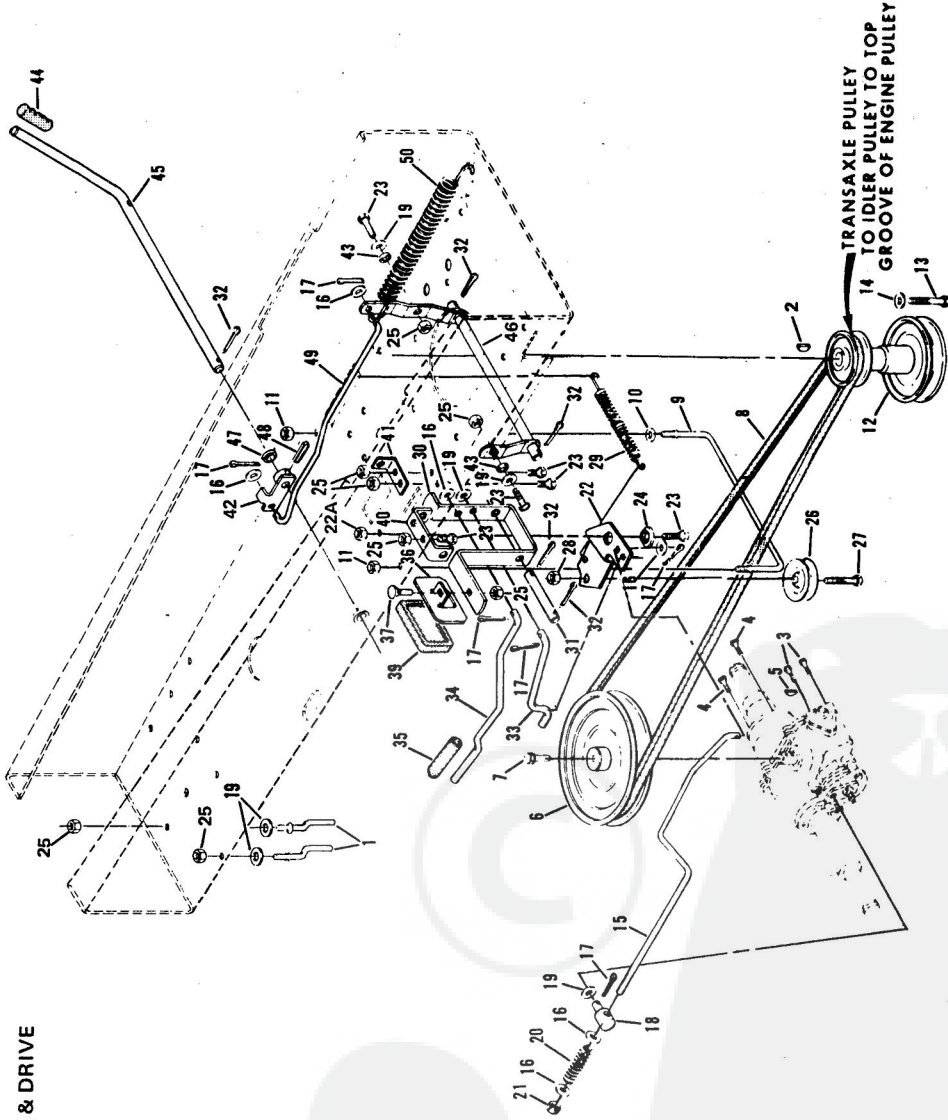

REPAIR PARTS

CLUTCH-BRAKE & DRIVE

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	71200	Belt Guide	23	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4
2	65053	Key, Woodruff No. 6	24	71202	Bushing
3	6059P	Screw, Hex Head w/Washer 5/16 - 18 x 7/8	25	575P	Nut, Lock 5/16 - 18 UNC
4	6060P	Screw, Hex Head w/Washer 5/16 - 18 x 1 - 1/8	26	67400	Pulley - Idler
5	52859	Key, Woodruff No. 61	27	3027P	*Bolt, Hex Head 3/8 - 16 x 1 - 1/2
6	73542	Pulley - Transaxle	28	579P	Nut, Lock 3/8 - 16 UNC
7	6058P	Screw, Machine w/Washer 1/4 - 20 x 3/4 Gr. 5	29	2044J	Spring - Idler
8	73794	V-Belt	30	390J	Pedal Shaft
9	71241	Mid Belt Guide	31	71223	Foot Pedal
10	1611P	Washer, 13/32 x 7/8 x 16 Ga.	32	2506P	*Cotter Pin 1/8 x 1
11	545P	Locknut 3/8 - 16	33	74419	Clutch Rod
12	71923	Pulley - Engine	34	373J	Park Brake Rod
13	6063P	Screw, Machine w/Ext. Lockwasher 3/8 - 24 x 1 - 3/8	35	71226	Grip
14	1610P	Washer, 3/8 x 1 - 1/4 x 6 Ga.	36	71222	Pedal Plate
15	73792	Brake Rod	37	16P	*Bolt, Carriage 5/16 - 18 x 3/4
16	1507P	Washer, 13/32 x 3/4 x 16 Ga.	39	67365	Foot Pad
17	2503P	*Cotter Pin 3/32 x 3/4	40	71199	Pedal Bracket
18	71238	Trunion	41	71204	Switch Bracket
19	1599P	Washer, 11/32 x 3/4 x 16 Ga.	42	73229	Clutch Arm Assembly
20	71239	Brake Spring	43	71195	Spacer
21	514P	Nut, Lock 3/8 - 16 UNC	44	71246	Grip
22	71201	Idler Bracket	45	71242	Clutch Handle
22A	580P	Locknut w/Nylon Insert 5/16 - 18 UNC	46	71191	Clutch Arm Assembly
			47	1545P	Washer, 17/32 x 1 x 16 Ga.
			48	52379	Spring Pin 3/16 x 1
			49	74474	Blade Clutch Rod
			50	71248	Spring


*STANDARD HARDWARE--PURCHASE LOCALLY

FC Tibony

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

REPAIR PARTS

STEERING AND WHEELS

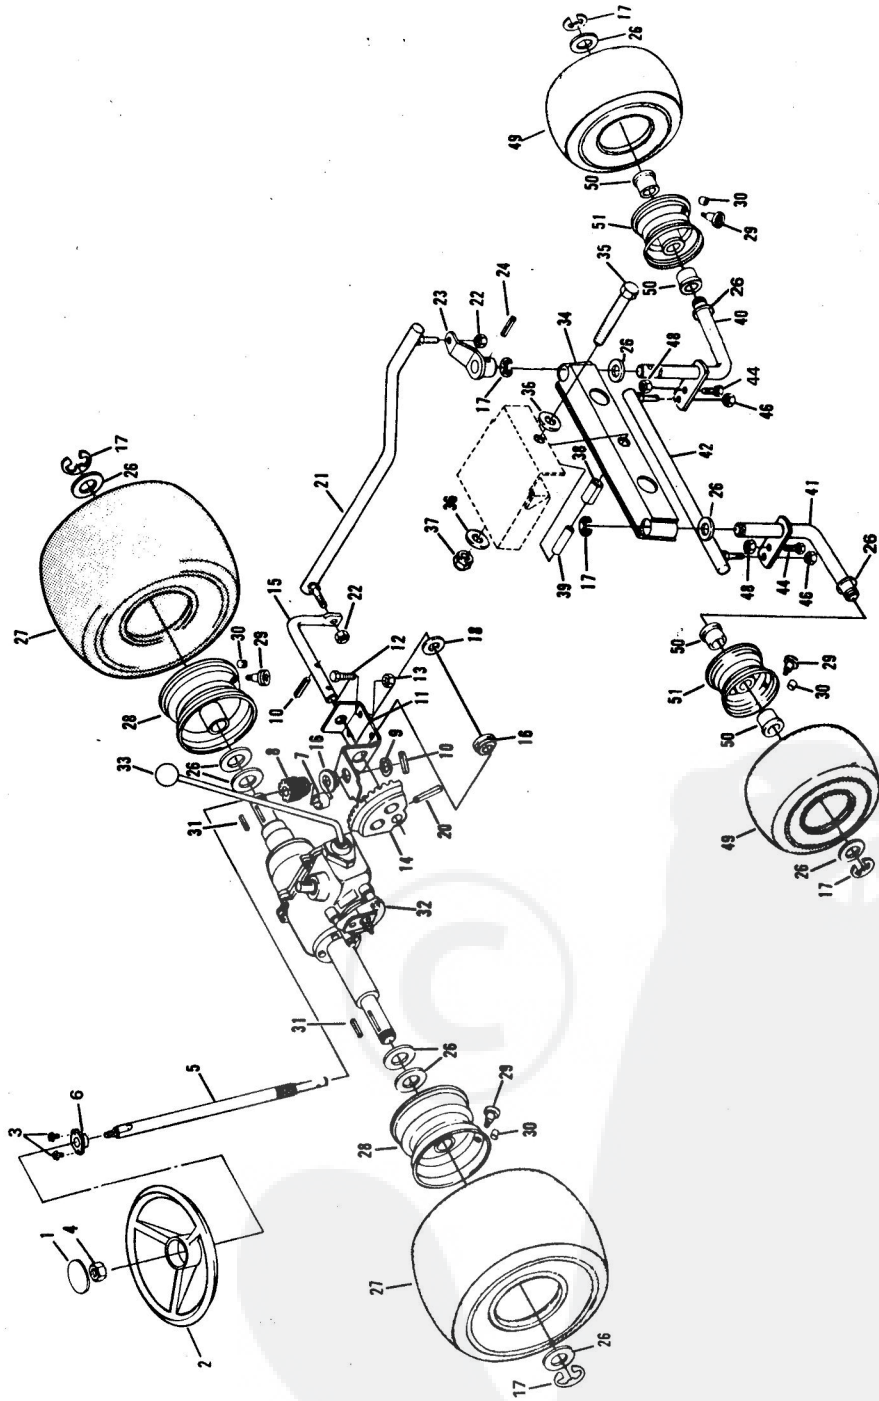

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

STEERING AND WHEELS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	1114J	Steering Wheel Insert	29	65139	Valve Stem
2	506J	Steering Wheel	30	59192	Valve Cap
3	5614P	Hex Washer Hd. Sht. Metal Screw No. 10 x 1/2 Type AB	31	66414	Square Key 3/16 x 2
4	568P	*Nut, Hex Jam 1/2 - 20 UNF	32	794191A	Transaxle Assembly Model 143.658A (See Pages 24 and 25)
5	1595J	Steering Shaft	33	55862	Knob - Transmission
6	1554J	Bushing	34	677A91	Rocker Bar Assembly
7	74580	Shaft Spacer	35	3385P	Bolt, Hex Head 1/2 - 13 x 3
8	74581	Pinion Gear	36	1613P	Washer, 17/32 x 7/8 x 16 Ga.
9	1612P	Washer, 5/8 x 1-1/2 x 11 Ga.	37	581P	Nut, Lock 1/2 - 13 UNC
10	52379	Spring Pin 3/16 x 1	38	67151	Bushing
11	74577	Steering Bracket	39	71188	Pivot Spacer
12	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4	40	73236	Kingpin Assembly - L.H.
13	575P	Nut, Lock 5/16 - 18 UNC	41	73237	Kingpin Assembly - R.H.
14	71172	Gear	42	73240	Tie Rod
15	1528J	Steering Rod	44	3021P	*Bolt, Hex Head 3/8 - 16 x 3/4
16	71208	Bushing	46	582P	Nut, Lock 5/16 - 24 UNF
17	5000P	E-Ring	48	579P	Nut, Lock 3/8 - 16 UNC
18	1618P	Washer, 21/32 x 1 - 1/4 x 13 Ga. (0 - 2 as Req'd.)	49	71651	Tire (15 x 6.00 x 6)
20	73446	Drive - Lock Pin	50	625J	Bearing
21	71219	Drag Link	51	677A98	Rim Ass'y, (Inc. Ref. No. 50)
22	7810H	Locknut, Hex 3/8 - 24 UNF			
23	71185	Steering Arm Assembly			
24	62079	Spring Pin 1/4 x 1 - 1/4			
26	1552P	Washer 25/32 x 1 - 1/4 x 16 Ga.			
27	71652	Tire (16.00 - 9.50 x 8)			
28		Rim			


* STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

MOWER

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR

JACKSHAFT PULLEYS TO BOTTOM GROOVE OF ENGINE PULLEY

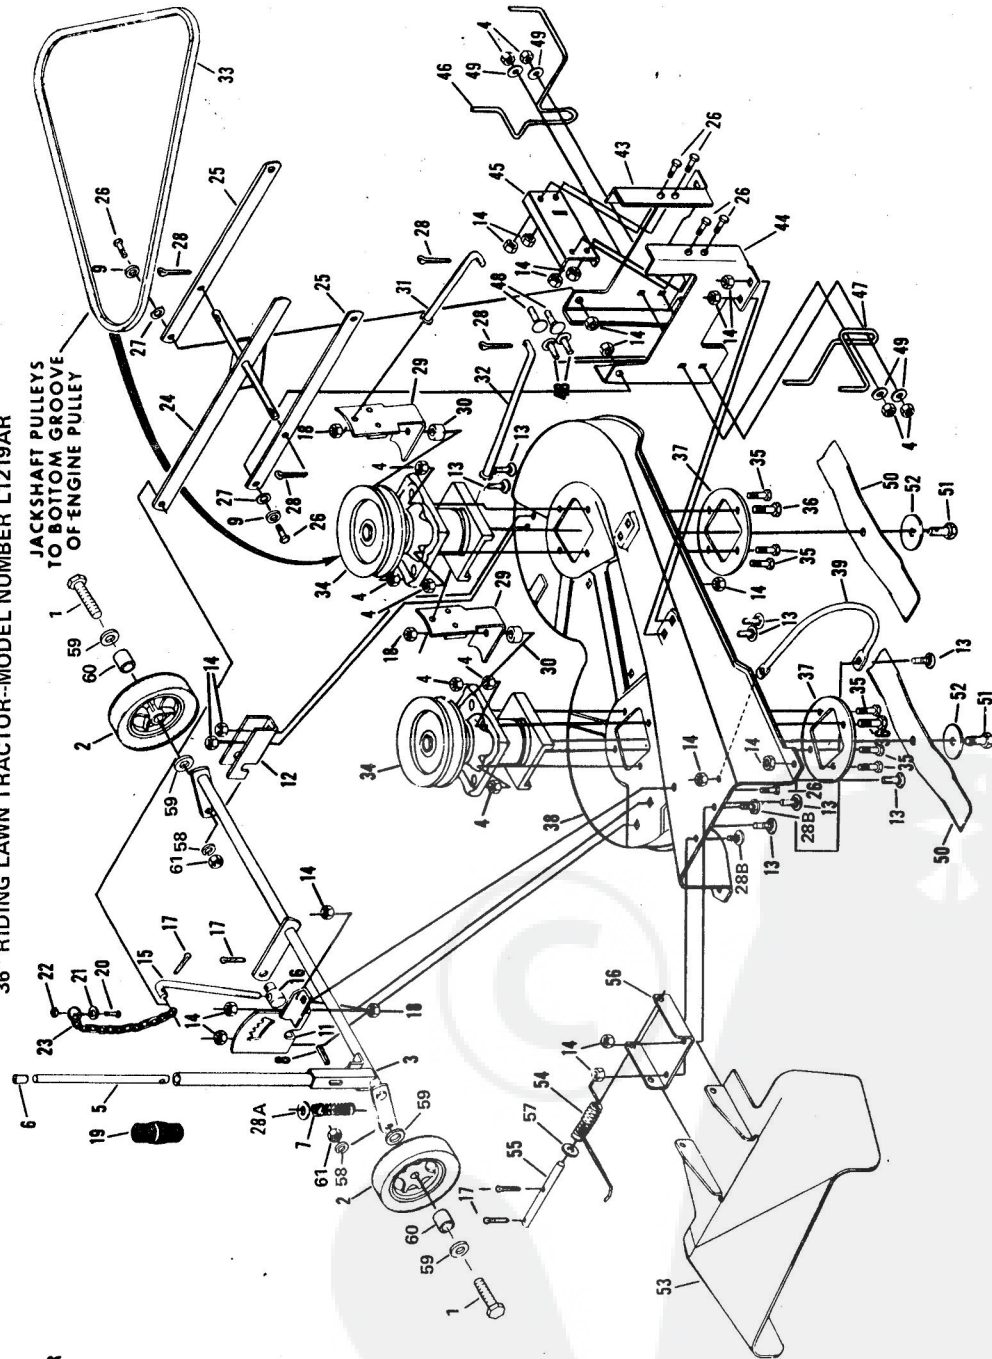

REPAIR PARTS

MOWER

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	3199P	Hex Bolt 3/8 - 24 x 2 - 3/4 Gr. 5	29	677A46	Brake Assembly
2	9536H	Gauge Wheel	30	71522	Spacer, Brake Spring
3	677A134	Pivot Rod Assembly	31	71525	Brake Rod - L.H.
4	545P	Nut, Lock 3/8 - 16 UNC	32	71524	Brake Rod - R.H.
5	1663J	Rod - Plunger	33	62828	Belt
6	9479R	Cap - Lever Plunger	34	677A181	Jackshaft Assembly
7	71669	Spring	35	3023P	*Bolt, Hex Head 3/8 - 16 x 1
8	8540R	Pin - Drive Lock	36	3329P	*Bolt, Hex Head 3/8 - 16 x 1 - 1/2
9	1598P	Washer, 11/32 x 3/4 x 16 Ga.	37	71575	Plate
11	72937	Quadrant Assembly	38	677A51	Housing w/Silk Screening
12	67337	Pivot Rod Support	39	71647	Housing Skid
13	16P	*Bolt, Carriage 5/16 - 18 x 3/4	43	71276	Housing Bracket - L.H.
14	575P	Nut, Lock 5/16 - 18 UNC	44	71277	Housing Bracket - R.H.
15	71300	Adjustment Rod	45	71278	Channel
16	71301	Trunion	46	71298	Belt Keeper - L.H.
17	2503P	*Cotter Pin 3/32 x 3/4	47	71299	Belt Keeper - R.H.
18	514P	Nut, Lock 3/8 - 16 UNC	48	20P	*Bolt, Carriage 3/8 - 16 x 1
19	1747J	Grip, Handle	49	1614P	Washer, 13/32 x 7/8 x 13 Ga.
20	3224P	*Screw, Pan Hd. Machine 1/4 - 20 x 1	50	71285	Blade
21	1575P	Washer, 9/32 x 1 x 16 Ga.	51	6062P	Screw, Hex Head w/Washer - Nylon Insert 3/8 - 24 x 7/8 Gr. 5
22	574P	Nut, Hex Lock 1/4 - 20 UNC	52	67354	Washer, 25/64 x 2 - 3/8 x 5/32
23	74014	Sway Chain	53	677A52	Deflector (Discharge Guard)
24	72915	Parallel Rod Assembly	54	71526	Deflector Spring
25	71297	Parallel Link	55	71555	Hinge Rod
26	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4	56	71528	Bracket-Deflector
27	71616	Spacer	57	1623P	Washer, 11/32 x 7/8 x 16 Ga.
28	2506P	*Cotter Pin 1/8 x 1	58	1004P	Lockwasher 3/8
28A	1615P	Washer, 15/32 x 3/4 x 16 Ga.	59	1513P	Washer 13/32 x 13/16 x 16 Ga.
28B	5P	*Bolt, Carriage Sh. Shoulder 5/16 - 18 x 3/4	60	7375H	Bushing
			61	515P	Hex Nut 3/8 - 24 UNF

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR
TRANSAXLE--MODEL NUMBER 143.658A

ALL TRANSAXLE PARTS MUST
BE PURCHASED THROUGH AND
SERVICE PERFORMED BY YOUR
LOCAL TECUMSEH DEALER.

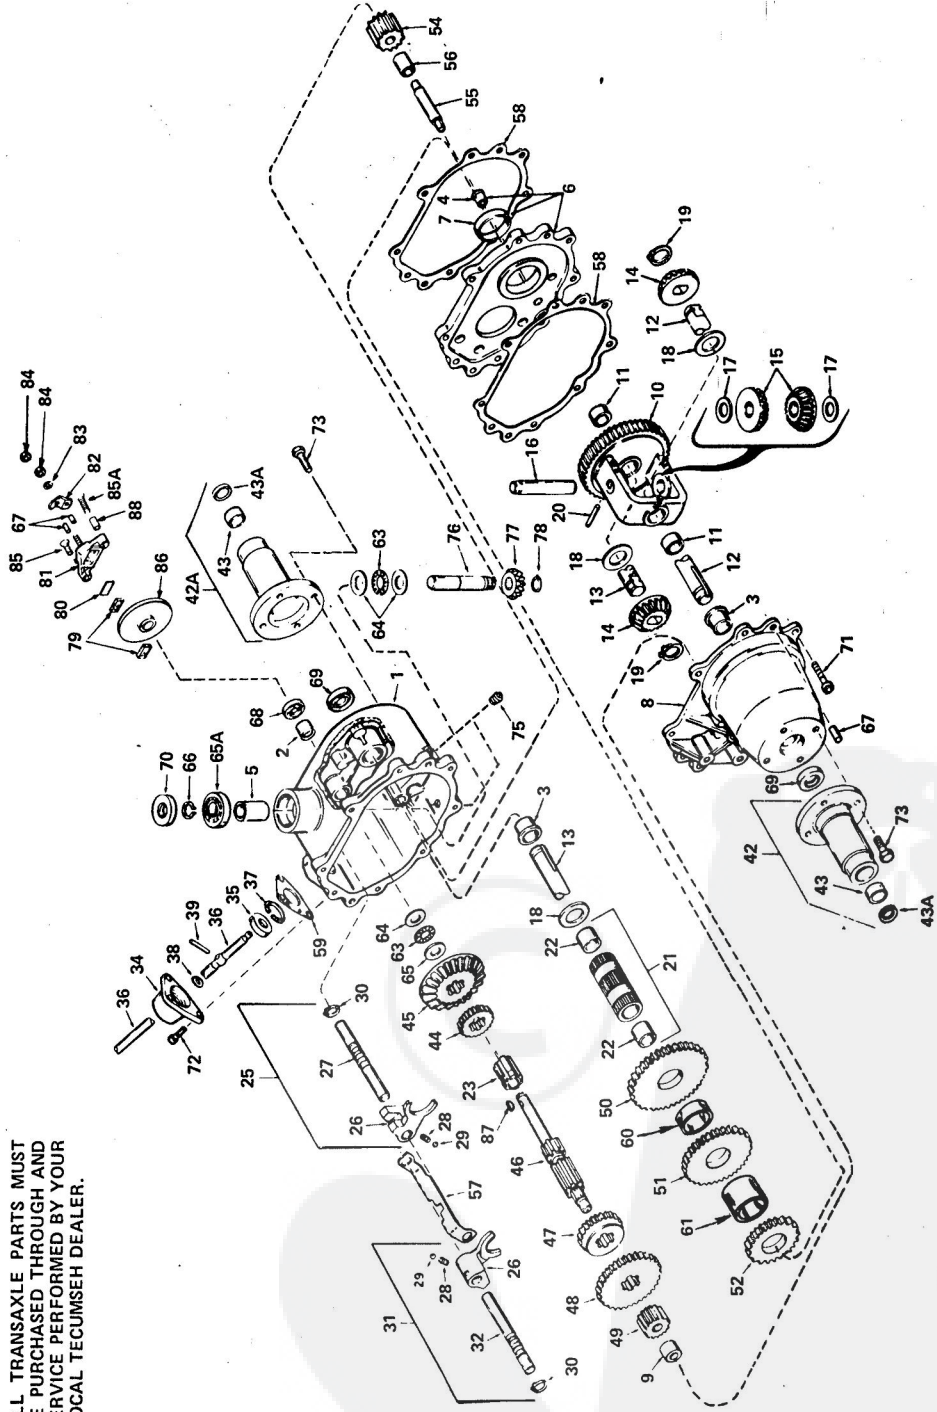

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR TRANSAXLE--MODEL NUMBER 143.658A


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	794191A	Complete Transaxle	45	778057	Gear, Bevel (33 Teeth)
2	770063	Case Ass Y., Transaxle (Inc. No's. 2, 3 & 5)	46	776138	Shaft, Shifter & Brake
3	780086	Bearing, Needle	47	778058	Gear, Shifting (2nd & 3rd)
4	780059	Bearing, Bronze	48	778059	Gear, Shifting (1st & Rev.)
5	780060	Bearing, Bronze	49	778060	Gear, Spur (12 Teeth)
6	780061	Plate Ass Y., Center (Inc. No's. 4 & 7)	50	778140	Gear, Countershaft Drive (39 Teeth)
7	780062	Bearing, Bronze	51	778141	Gear, Countershaft (34 Teeth)
8	772042	Cover, Ass Y., Transaxle (Inc. No's. 3 & 9)	52	778142	Gear, Countershaft (25 Teeth)
9	780063	Bearing, Needle	54	778064	Gear, Reverse Idler
10	778053	Gear Ass Y., Differential (Inc. No. 11)	55	778057	Shaft, Reverse Idler
11	780086	Bearing, Bronze	56	786036	Spacer, Reverse Idler
12	74221	Axle, Left Hand	57	784087	Stop, Shifter
13	774220	Axle, Right Hand	58	788033	Gasket, Case & Cover
14	778067	Gear, Bevel	59	788003	Gasket, Shift Lever Housing
15	778068	Pinion, Bevel	60	786079	Spacer
16	786034	Pin, Drive	61	786078	Spacer
17	780065	Washer, Thrust	63	780071	Bearing, Thrust
18	780001	Washer, Thrust	64	780072	Washer, Thrust
19	788038	Ring, Snap	65	780073	Washer, Thrust
20	792040	Pin, Roll	66A	780093	Bearing, Ball
21	786080	Sleeve Ass Y., Countershaft (Inc. 2 of No. 22)	66	792035	Ring, Snap
22	780066	Bearing, Bronze	67	786026	Pin, Dowel
23	776090	Shaft, Idler	68	788043	Seal, Oil
25	784079	Rod Ass Y., Shift (1st & Rev.) (Inc. No's. 26 thru 30)	69	788009	Seal, Oil
26	784004	Fork, Shift	70	788035	Seal, Oil
27	784083	Rod, Shift	71	792036	Screw, Flanged Hex Hd, 1/4 - 20 x 1 - 1/4
28	792003	Spring	72	792007	Screw, Socket Hd, Cap, 1/4 - 20 x 3/4
29	792004	Ring, Snap	73	792037	Screw, Hex Hd, Sems 5/16 - 18 x 1
30	792017	Ball, Steel	75	792039	Plug, Pipe 1/8
31	784084	Rod Ass Y., Shift (2nd & 3rd) (Inc. No's. 26, 28, 29, 30 & 32)	76	792039	Shaft, Input
32	784085	Rod, Shift	77	778077	Pinion, Input
34	784088	Housing, Shift Lever	78	788040	Ring, Retaining
35	784094	Keeper, Shift Lever	79	790006	Pad, Brake
36	784284	Lever, Shift	80	790007	Plate, Brake Pad
37	792016	Ring, Snap	81	790005	Holder, Brake Pad
38	792001	Ring, Quad	82	790004	Lever, Brake
39	792049	Pin, Drive	83	792076	Washer, Flat
42	782036A	Housing Ass Y., Axle (Inc. No's. 43 & 43A)	84	792075	Nut, Lock
42A	782043	Housing Ass Y., Axle (Inc. No's. 43 & 43A)	85	792073	Screw, Hex Hd, Cap, 1/4 - 20 x 1 - 1/4
43	530105	Bearing, Needle	85A	792085	Thrd, Forming
43A	788042	Seal, Oil	86	790009	Screw, Hex Hd, Cap 1/4 - 20 x 2 - 1/4
44	778024	Gear (16 Teeth)	87	792045	Disk, Brake
			88	786066	Key, Woodruff No. 61 Spacer

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR
BRIGGS & STRATTON 11 H.P. ENGINE--MODEL NO. 2527Q7, TYPE NO. 0172-01

CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

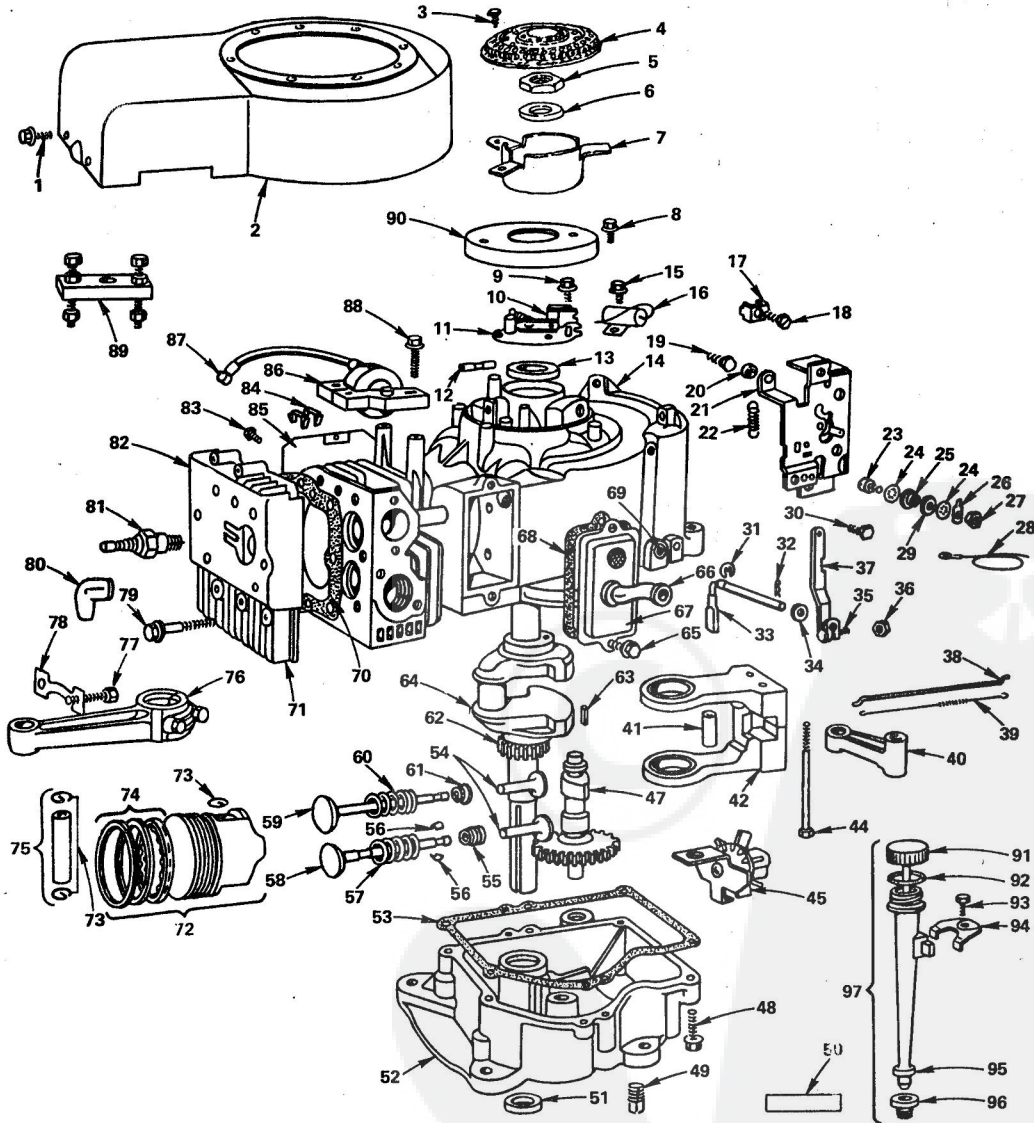

**36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR
BRIGGS & STRATTON 11 H.P. ENGINE--MODEL NO. 252707, TYPE NO. 0172-01**


CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	93158	Screw - Blower Housing Mounting Sem	51	291675	Seal - Oil
2	391556	Housing - Blower	52	391784	Sump - Oil (Inc. No's. 51 & 53)
3	93308	Screw - Sem	53	270808	*Gasket - Crankcase Cover - 1/64" Thick
4	222562	Screen - Flush Rotating		270915	*Gasket - Crankcase Cover - .005" Thick
5	92284	Nut - Hex		270916	*Gasket - Crankcase Cover - .009" Thick
6	220865	Washer - Spring	54	261183	Tappet - Valve
7	222561	Cup - Screen Mounting	55	292260	Rotocoil - Exhaust Valve
8	93014	Screw - Sem	56	93630	Retainer - Exhaust Valve Rotocoil
9	93226	Screw - Breaker Adjusting Sem	57	26828	Spring - Exhaust Valve
10	26018	Spring - Breaker Arm	58	261185	Valve - Exhaust
11	391284	Breaker Ass'y - Ignition (Inc. No. 10)	59	261462	Valve - Intake
12	65704	Plunger - Breaker Point	60	65906	Spring - Intake Valve
13	391086	Seal - Oil	61	221596	Retainer - Intake Valve
14	393409	Cylinder Ass'y. (Inc. No. 13)	62	261196	Gear - Timing
15	93042	Screw - Sem	63	61760	Key - Flywheel
16	391792	Condenser	64	391794	Crankshaft
17	221535	Clamp - Casing	65	93394	Screw - Sem
18	93496	Screw - Sem	66	280100	Tube - Breather
19	93686	Screw - Control Bracket Mounting	67	391406	Breather Assembly
20	231039	Spacer - Control Bracket Mounting	68	27803	*Gasket - Valve Cover
21	390662	Plate - Gov. Control	69	231055	Bushing - Gov. Crank (1/4" I.D.)
22	261306	Spring - Governor	70	271075	*Gasket - Cylinder Head
23	91920	Screw - Terminal	71	212300	Head - Cylinder
24	92791	Washer - Lock - Shakeproof	72	391285	Piston Ass'y. - Standard (Inc. No's. 73 & 74)
25	66554	Collar - Insulating		391287	Piston Ass'y. - .010" O.S.
26	93722	Terminal - Spade		391288	Piston Ass'y. - .020" O.S.
27	90576	Nut - Hex 8 - 32		391289	Piston Ass'y. - .030" O.S.
28	391602	Wire - Ground	73	260924	Lock - Piston Pin
29	66068	Washer - Insulating	74	391780	Ring Set - Piston - Std.
30	93572	Screw		391781	Ring Set - Piston - .010" O.S.
31	93307	Retainer - E-Ring		391782	Ring Set - Piston - .020" O.S.
32	93306	Cotter - Hair Pin		391783	Ring Set - Piston - .030" O.S.
33	231058	Crank - Governor (1/4" Dia.)		299691	Pin Ass'y. - Piston - Std. (Inc. No. 73)
34	222450	Washer - Gov. Crank (1/4" I.D.)	75	391286	Pin Ass'y. - Piston - .005" O.S.
35	92613	Bolt - Governor Lever	76	391775	Rod Ass'y. - Connecting (Inc. 77 & 78)
36	231082	Nut - Hex 10 - 24	77	92909	Screw - Conn. Rod
37	391733	Lever Ass'y. - Governor (for 1/4" Dia. Crank) (Inc. No's. 35 & 36)	78	222299	Lock - Conn. Rod Screw
38	261198	Link - Governor	79	93723	Screw - Cylinder Head (3" Long)
39	261197	Spring - Governor Link			NOTE: 93781 Stud - Cylinder Head
40	211675	Link - Counterweight			22963 Washer
41	298909	Pin - Counterweight	80	66538	Elbow - Spark Plug
42	391373	Counterweight Ass'y. (Inc. No. 41)	81	298809	Plug - Spark (1 - 1/2" High - 37 - 42 MM)
44	93875	Screw - Counterweight			NOTE: Spark Plugs use Ignition Cable Terminal No. 221798.
45	391764	Oil Slinger, Gov. Gear & Bracket Ass'y.	82	222725	Cover - Cylinder Head
47	212296	Gear - Cam	83	93163	Screw - Cylinder Shield Mtg. Sem
48	93585	Screw - Sump Mounting Sem	84	221907	Clip - Wire
49	91084	Plug - Oil Drain	85	222744	Shield - Cylinder
50	393411	Gasket Set	86	298968	Armature Ass'y.
			87	221798	Terminal - Ignition Cable
			88	93381	Screw - Armature Mounting Sem
			89	19203	Puller - Flywheel
			90	222309	Cover - Breaker Point
			91	391841	Cap and Dipstick - Oil Filler
			92	270920	Seal - Filler Cap
			93	93804	Screw - Clamp Mtg.
			94	222502	Clamp - Oil Filler Tube
			95	280134	Tube - Oil Filler
			96	68838	Seal - Filler Tube
			97	392067	Filler Group - Oil

*STANDARD HARDWARE--PURCHASE LOCALLY

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219A
BRIGGS & STRATTON 11 H.P. ENGINE--MODEL NO. 252707, TYPE NO. 0172-01

AIR CLEANER AND CARBURETOR

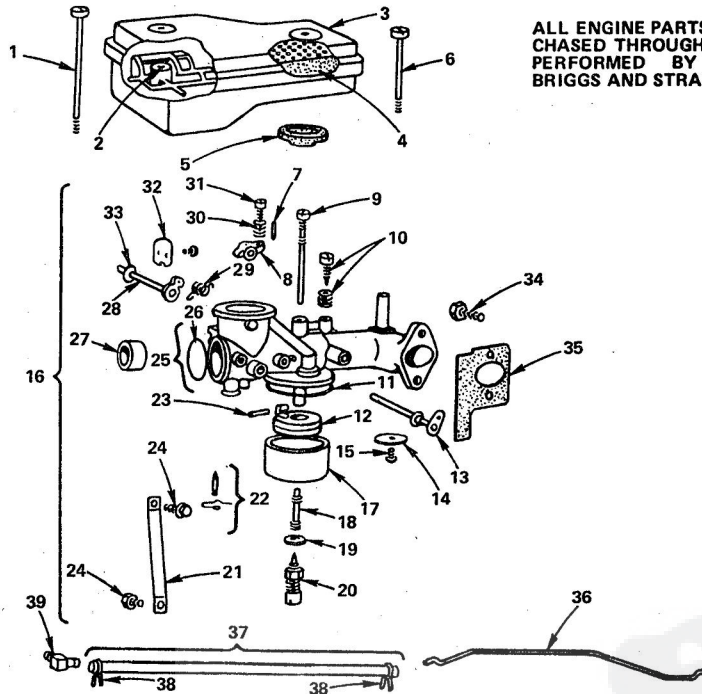

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	93323	Screw - Air Cleaner	24	93572	Screw
2	280118	Support - Air Cleaner Element	25	391787	Body Ass'y. - Carburetor (Inc. No. 26)
3	391786	Cleaner Ass'y. - Air (Inc. No's. 2 & 4)	26	221997	+Plug - Welch
4	270843	Element - Air Cleaner	27	211960	Venturi - Carburetor
5	270853	Gasket - Air Cleaner	28	390684	Shaft & Lever - Choke
6	93622	Screw - Air Cleaner	29	261116	Spring - Choke Return
7	93043	Pin - Throttle Stop	30	26157	Spring - Throttle Adjustment
8	211712	Stop - Throttle	31	91920	Screw - Machine, Fill. Hd. 8 - 32 x 5/8"
9	299740	Nozzle - Carburetor	32	222010	Valve Choke
10	292681	+Valve Ass'y. - Carburetor Idle	33	270382	Washer - Choke Shaft
11	270511	+Gasket - Float Bowl	34	93357	Screw - Carburetor Mtg.
12	299707	Float - Carburetor	35	270872	*Gasket - Carburetor Mtg.
13	391512	Shaft & Lever - Throttle	36	261274	Link - Choke
14	222858	Valve - Throttle	37	296004	Pipe - Fuel (Inc. No. 38)
15	93499	Screw - Throttle & Choke Valve Mtg. Sem	38	93053	Clamp - Fuel Pipe
16	393410	Carburetor Ass'y. (Choke-A-Matic) (Inc. No's. 7 thru 33)	39	67218	Connector - Fuel Pipe
17	221995	Bowl - Float			
18	230932	+Screw - Nozzle			
19	222014	+Washer - Float Bowl			
20	391233	+Valve - Needle			
21	222311	Bracket - Carburetor			
22	299096	+Valve - Fuel Inlet			
23	230896	+Pin - Float Hinge			

+INCLUDED IN CARBURETOR OVERHAUL KIT - PART NO. 299852

*INCLUDED IN GASKET SET - PART NO. 393411

36" RIDING LAWN TRACTOR--MODEL NUMBER L1219AR
BRIGGS & STRATTON 11 H.P. ENGINE--MODEL NO. 252707, TYPE NO. 0172-01

ALTERNATOR AND STARTER MOTOR GROUP

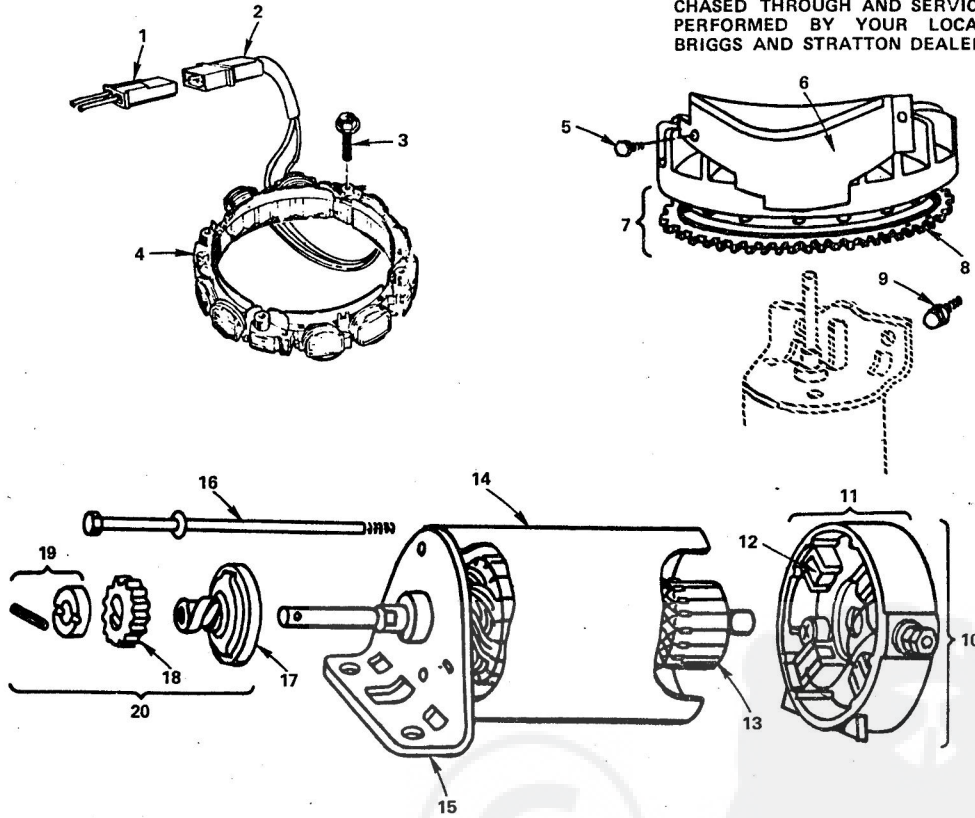

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	393362	Alt. Harness Assembly	10	392749	Motor and Drive Ass'y. (12 Volt) (Inc. No's. 11 thru 20)
2	393456	Diode and Conn. Assembly	11	390846	End Cap Ass'y. Commutator (Inc. No. 12).
3	93621	Screw - Sem	12	391705	Brush Ass'y.
4	393474	Stator - Alternator	13	390837	Armature Ass'y.
5	93410	Screw - Sem	14	392744	Housing Ass'y.
6	390233	Cover and Shield - Starter	15	392061	End Cap Ass'y. Drive
7	391988	Flywheel & Ring Gear Ass'y. - Magneto (Inc. No. 14)	16	391706	Thru Bolt Ass'y.
8	392134	Gear - Ring (Inc. Mounting Parts)	17	391135	Clutch Ass'y.
9	93523	Screw - Sem	18	280104	Gear
			19	391462	Retainer & Pin
			20	391461	Drive Ass'y. (Inc. No's. 17, 18 & 19)