

MASTER PARTS MANUAL

GARDEN TRACTORS

MODELS:

T82251R0
T02251R0
T32241R4
T32341R0
T62241R3
T63241R5
T63361R0
T63361R1
T93261R0

LAWN AND GARDEN
POWER EQUIPMENT

 
ROPER SALES

1905 WEST COURT STREET
KANKAKEE, ILLINOIS 60901

617J
6.1.77
PRICE \$2.00

Click Here to upgrade to Unlimited Pages and Expanded Features


repair parts ROPER RT-8 GARDEN TRACTOR- HOOD, GRILL & FRONT FRAME

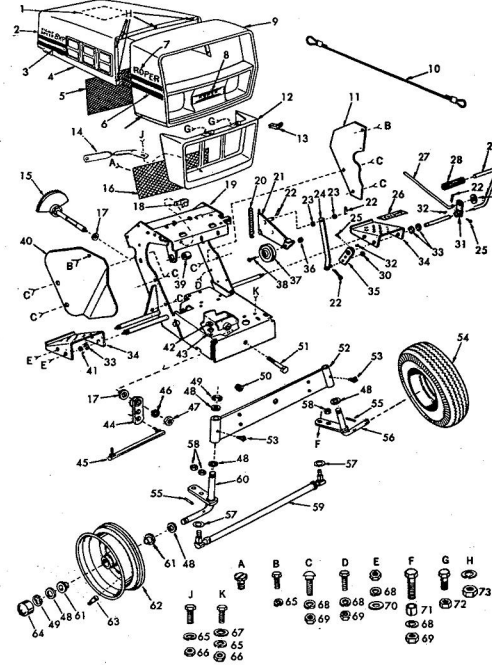

ROPER RT-8 GARDEN TRACTOR- HOOD, GRILL & FRONT FRAME

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	4821R	Decal	40	8212H	Belt Guard
2	6966R	Decal (8 Speed 8 H.P.)	41	1549P	Washer 41/64 x 1/2 Co.
3	7000R	Hood & Grill Strip	42	1506P	Washer 9/32 x 5/8 x 16 Co.
4	626A39I	Hood Assembly	43	6842M	Grease Fitting
5	3831R	Grill Screen-Upper	44	626A254	Steering Arm Assembly
6	7001R	Hood & Grill Strip	45	6137H	Steering Link
7	6956R	Grill Decal	46	1544P	Washer 15/32 x 15/16 x 16 Co.
8	6955R	Upper Decal	47	7762H	Lock Nut 7/16-14 UNC
9	3821R	Grill-Upper	48	1532P	Washer 49/64 x 1/2 x 16 Co.
10	6654R	Grill Cable	49	3006P	E-Ring
11	846R	Tie Plate Cover	50	6966P	Hydraulic Nut 5/8-11 UNC
12	4332R	Grill Base	51	3217P	Hex Bolt 5/8-11 x 3/8
13	4171R	Insulated Clip (For Hood Light Wires)	52	626A244	Roller Bar (Front Axle) Assembly
14	5571R	Grill Brace	53	6855H	Grease Fitting
15	626A253	Intermediate Shaft Assembly	54	4410R	Front Tire-Tubeless
16	3294R	Grill Screen-Base	55	5142H	Roll Pin
17	9002H	Thrust Washer	56	626A193	King Pin Assembly-L.H.
18	2231R	Clip-Fuel Line	57	2215R	Hidden Washer
19	626A348	Engine Mount and Tie Plate Assembly	58	7810H	Griggs Centerlock Nut 3/8-24
20	3100H	Idle Spring	59	816R	Tie Rod-Adjustable
21	626A241	Idle Bracket Assembly	60	626A194	King Pin Assembly-R.H.
22	2250P	Center Pin 1/8 x 1/2	61	9040H	Flanged Bearing
23	1533P	Washer 13/32 x 13/16 x 11 Co.	62	3941R	Front Wheel
24	626A195	Clutch Rod Assembly	64	2118R	Dust Cap
25	4301P	Set Screw, Sq. Hd. 3/16-18 x 1/2	65	1007P	Lockwasher 5/16
26	1064R	Clutch Shaft	66	504P	Hex Nut 5/16-18
27	8811H	Brake Rod-Front	67	1537P	Washer 11/32 x 11/16 x 16 Co.
28	1154H	Brake Rod-Back	68	1004P	Lockwasher 3/8
29	1793R	Foot Pedal Shaft	69	501P	Hex Nut 3/8-16
30	1513P	Washer 13/32 x 13/16 x 16 Co.	70	1554P	Washer 13/32 x 7/8 x 14 Co.
31	626A33A	Brake Arm Assembly	71	3204R	Bushing
32	9658M1	Woodruff Key 3/16 x 5/8	72	1603H	Lock Nut 1/2-20 UNC
33	3001P	Pin 1/8 x 1 1/2	73	5035P	Hex Nut 3/8-20 UNC
34	8172H	Foot Rest	A	3554P	Phillips Pan Hd. Thread Cutting Screw No. 10-16 H.T. Thd. x 1/2
35	626A31A	Steering Arm Assembly	B	3010P	Hex Bolt 5/16-18 x 1
36	548P	Hex Jam Locknut 3/8-24	C	8P	Carriage Bolt 3/8-16 x 1
37	1342R	Idle Pulley	D	3022P	Hex Bolt 3/8-16 x 1
38	1345R	Idle Stud	E	501P	Hex Nut 3/8-16
39	8094H	Bearing	F	3028P	Hex Bolt 3/8-16 x 1 1/2
			G	3031P	Hex Bolt 3/8-16 x 1 1/4
			H	1002P	Lockwasher 1/2
			I	3010P	Hex Bolt 5/16-18 x 1/2
			J	3016P	Hex Bolt 5/16-18 x 3/4
			K	6064R	Owners Manual

 
ROPER RT-8 GARDEN TRACTOR- SEAT, FENDERS, DASH & REAR FRAME

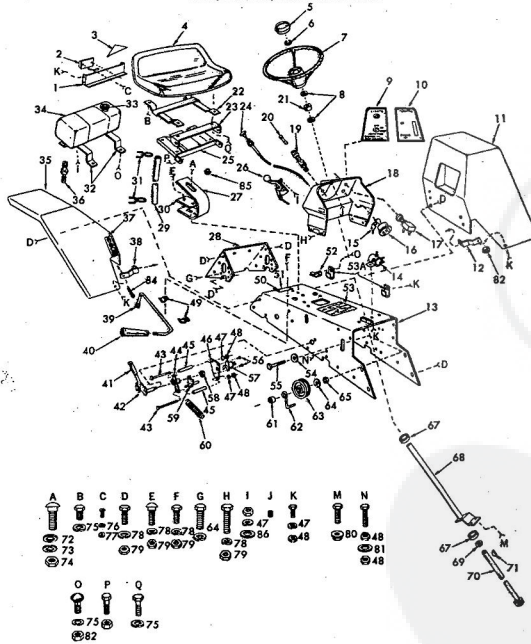

ROPER RT-8 GARDEN TRACTOR SEAT, FENDERS, DASH & REAR FRAME

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	3625R	Tail Light Bracket	54	1544P	Washer 15/32 x 59/64 x 16 Co.
2	4063R	Tail Light	55	3197P	Hex Bolt 7/16-14 x 3/4
3	3299R	Safety Str. Sticker	56	5501P	Pin Hd. Phillips Thrd. Cutting Screw Type I No. 10-24 x 3/8
4	4987R	Seat	57	2256R	Insulation Safety Switch
5	3000P	E-Ring	58	7810H	Griggs Centerlock Nut 3/8-24
6	6561R	Steering Wheel	59	626A346	Clutch Lever Stop Weldment
7	9007H	Cap	60	2255R	Clutch Return Spring
8	3819R	Dash Panel L.H.	61	8209H	Idle Spacer
9	3818R	Dash Panel R.H.	62	6479H1	Belt Guide Finger
10	626A397	Fender and Insert L.H.	63	6633P	Flat Idle
11	626A398	Fender and Insert R.H.	64	1001P	Lockwasher 7/16
12	4164R	Fender Bracket L.H.	65	500P	Hex Nut 7/16-14
13	6405R	Chassis Channel	67	4437H	Steering Bushing
14	103R	Solenoid	68	626A109	Steering Column Assembly
15	7252H	Key Set	69	1537P	Washer 47/64 x 1/2 x 16 Co.
16	2210R	Ignition and Starter Switch	70	626A79	Steering Shaft Assembly
17	7251H	Light Switch	71	9658M1	Woodruff Key
18	2213R	Dashboard less Panels	72	1560P	Washer 17/32 x 1 1/4 x 11 Co.
19	2211R	Fuse Holder	73	1006P	Lockwasher 1/2
20	2212R	Fuse 15 amp.	74	503P	Hex Nut 3/8-16
21	5949H	Rubber Bushing	75	1007P	Lockwasher 5/16
22	626A532	Seat Bracket Weldment	76	1006P	Lockwasher No. 2
23	2663R	Bracket Seat Pivot	77	503P	Hex Nut 3/8-16
24	6391R	Choke Control	78	1004P	Lockwasher 1/2
25	626A533	Seat Plate	79	501P	Hex Nut 3/8-16
26	6392R	Throttle Control	80	8679H	Flange Locknut
27	6393R	Seat Spring	81	1405P	Internal Tooth Lockwasher
28	626A101	Drawbar and Weldments	82	504P	Hex Nut 5/16-18
29	3564R	Fuel Line	83	5744H	Locknut 1/2-16
30	8141H	Seat Spring Reinforcement	84	2511P	Corner Pin 1 1/8 x 1
31	9772H	Fuel Line Clip	85	5404R	Recessed Bumper
32	6407R	Bracket Fuel Tank	86	1560P	Washer 5/32 x 5/8 x 16 Co.
33	6355R	Fuel Gauge	A	25P	Hex Bolt 3/8-13 x 1 1/2
34	6277R	Fuel Tank	B	3009P	Hex Bolt 3/8-18 x 3/8
35	626A395	Fender and Insert R.H.	C	3073P	Slotted Texas Head Nuts, Screw No. 10-24 x 1/2
36	8106R	Hi-Lo Decal	D	3072P	Hex Bolt 3/8-16 x 1/2
37	8191R	Fender Bracket R.H.	E	8P	Carriage Bolt 3/8-16 x 1
38	4165R	Fender Bracket L.H.	F	3072P	Hex Bolt 3/8-18 x 1/2
39	6472H	Shift Rope Rod	G	3015P	Hex Bolt 7/16-14 x 1 1/2
40	4462R	Control Knob	H	3072P	Hex Bolt 3/8-16 x 1 1/2
41	4297H	Handle Grip	I	5035P	Hex Nut 3/8-16 x 1 1/2
42	626A347	Clutch Lever Weldment	J	4502P	Hex Socket Hdless. Set Screw 5/16-18 x 5/16 Nylon
43	3254P	Hex Bolt 1/2-20 x 3/8	K	3114P	Hex Bolt 1/2-20 x 1/2
44	626A445	Clutch Hd. Weldment	L	3022P	Hex Bolt 3/8-16 x 1 H.T.
45	2215R	Spacer	M	3215P	Hex Bolt 5/16-18 x 1/2
46	2218R	Lockwasher 1/2	N	16P	Carriage Bolt 5/16-18 x 1/2
47	503P	Hex Nut 3/8-16	O	3022P	Hex Bolt 3/8-16 x 1/2
48	6402H	Shift Rod Bracket	Q	3010P	Hex Bolt 5/16-18 x 1/2
49	9521H	Drive Rivet			
50	9522H	Model Number Plate			
51	2521R	Insulated Clip			
52	6365R	Shift Pattern Plate			
53	2951R	Clip-Fuel Line			

 
ROPER RT-8 GARDEN TRACTOR-
TRANSAXLE, BRAKE & ENGINE

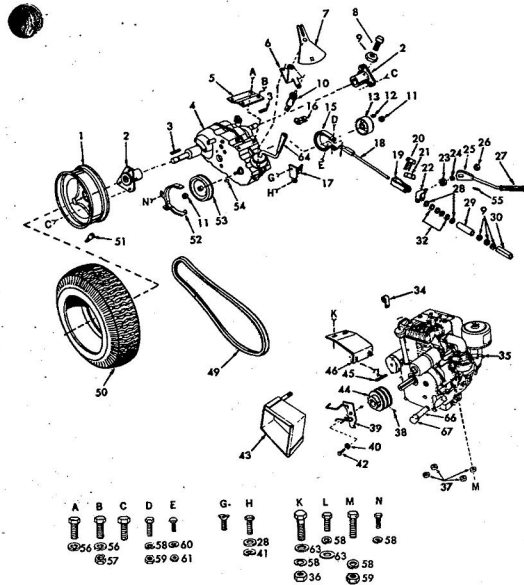


ROPER RT-8 GARDEN TRACTOR
TRANSAXLE, BRAKE & ENGINE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	7226H	Rear Wheel	40	1000P	Lockwasher 1/2
2	8827H	Wheel Hub-Rear	41	1004P	Lockwasher 3/8
3	8327H	Sq. Key 1/2x3	42	3001P	Hex Bolt 1/2x20x3/8
4	633A45	Transmission (Transmission) with Brake Drum	43	626A288	Heat Shield Assembly
5	6459H	Transcure Bracket	44	615A40	Engine Pulley
6	634A535	Neutral Safety Support Assembly	45	939E	Square Key 1/2x2
7	634A534	Neutral Safety Arm Assembly (Use on Model Number TR2251R1 Only)	46	1759R	Engine Tie Bracket
8	4524P	Set Screw-Std. Hd. 3/8-16x1/2	47	8853H	Yd.Bolt (Engine to Trans axle-Transmission)
9	501P	Hex Nut 3/8-16	50	3783R	Rear Tire-Tubeless
10	2229R	Neutral Safety Switch (Use on Model Number TR2251R1 Only)	51	795R	Voive-Tire
11	9204I	Locknut 1/2-20	52	626A209	Rear Ball Guard Assem
12	2229H	Woodruff Key	53	8640H	Transmission (Transmission)
13	7648H1	Brake Drum and Lining	54	9858M1	Woodruff Key 3/16x5/8
14	634A167	Brake Band and Lining	55	175H	Roll Pin (In Channel & Parking Brake Stop)
15	232R	Insulated Clip	56	1001P	Lockwasher 7/16
16	626A208	Brake Bracket Assembly	57	500P	Hex Nut 7/16-14
17	626A265	Brake Rod Assembly	58	1007P	Lockwasher 5/16
18	2197R	Park Brake Yoke	59	1685H	Locknut 5/16-18
19	3254P	Hex Bolt 3/8-16x3/8 Heat Treated	60	1002P	Lockwasher 1/2
20	9071H	Hublock Nut 3/8	61	503P	Hex Nut 1/2-20
21	634A489	Lock Bracket Assembly	62	1537P	Washer 1/2x2x11/16x
22	2221R	Park Brake Spacer	63	1537P	Control Knob
23	3097H	Spring Washer	64	4462R	Pipe Cap
24	626A394	Assembly	65	4011P	Pipe
25	7810H	Gripco Centerlock Nut 3/8-24	66	4011P	Pipe Cap
26	4379H	Handle Grip	67	4010P	Pipe Cap
27	1537P	Washer 17/32x13/16x11 Go.	A	3034P	Hex Bolt 7/16-14x1
28	2201R	Bushing	B	3034P	Hex Bolt 7/16-14x1
29	6417H	Turnbuckle	C	1304H	Hub Bolt
30	2263R	Spring Washer	D	3129P	Hex Bolt 5/16-18x7/8
31	9776H	Choke Control Clip	E	119P	Carriage Bolt 1/2x20x5/8
32	196407	Engine 8 H.P. (Order from your local Briggs and Stratton service dealer)	F	3164P	Under-Cut Flat Hd. Me Screw 3/8-18x3/8
33	504P	Hex Nut 5/16-18	G	3022P	Hex Bolt 3/8-16x7/8
34	844R	Mounting Spacer	H	3129P	Hex Bolt 5/16-18x7/8
35	4525P	Set Screw, Hex Socket Headless 3/8-16x3/8	K	3129P	Hex Bolt 5/16-18x7/8
36	626A267	Belt Guide Assembly	L	3016P	Hex Bolt 5/16-18x2 1/2
37			M	3016P	Hex Bolt 5/16-18x2 1/2
38			N	3016P	Hex Bolt 5/16-18x2 1/2

 ROPER RT-8 GARDEN TRACTOR-
ELECTRICAL & WIRING DIAGRAM

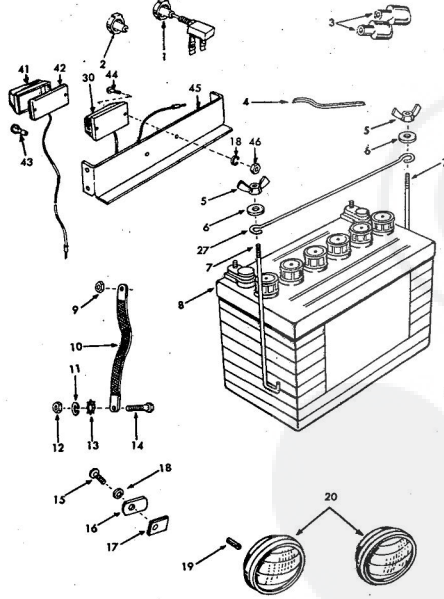


 ROPER R.T.-8 H.P. GARDEN TRACTOR
ELECTRICAL & WIRING DIAGRAM

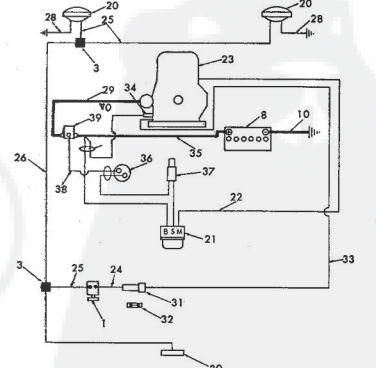

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	5239H	Light Switch	23	190407	Engine 8 H.P. (Order from your local Briggs and Stratton service dealer)
2	9367H	Black Knob (for light switch)	24	2224R	Eye No. 0828
3	5746P	Wire Connector	25	6136H	Electrical Wire
4	6441H	Wing Nut	26	3827E	Lead Wire
5	3748H	Washer 5/16x3/8x16 Go.	27	5110H	Battery Clamp
6	1207H	Battery	28	2954E	Ground Wire
7	5072H	Battery	29	2226R	Battery Cable
8	6623H	Ground Strap	30	4063R	Fuse
9	503P	Hex Nut 3/8-20	31	2211R	Fuse Holder
10	5114I	Lockwasher 5/16	32	2212R	Fuse
11	1007P	Hex Nut 5/16-18	33	2233R	Electrical Wire
12	504P	Lockwasher-External	34	2255R	Electrical Wire
13	1402P	Hex Bolt 5/16-18x3/8	35	626A244	Cable and Cover
14	2159P	*Phillips Pan Hd. Thread Cutting Screw No. 10-16 Hi-Lo Thread 1/2 Blunt Point	36	2256R	Insulation Safety Swit
15	5554P	Phillips Pan Hd. Thread Cutting Screw No. 10-16 Hi-Lo Thread 1/2 Blunt Point	37	2329R	Neutral Safety Switch (Use on Model Number TR2251R1 Only)
16	8268H	Lockwasher 1/2	38	2239R	Neutral Safety Switch (Use on Model Number TR2251R1 Only)
17	8794H1	Lockwasher 3/8	39	101P	Solenoid
18	1095P	Lockwasher No. 10	40	2211R	Electrical Wire
19	9197H	Head Light	41	3849R	Lens - Tail Light
20	7548H	Head Light	42	3849R	Mounting Tail Light
21	2210R	Starter Switch (Inc. Key Listed Below)	43	3847R	Bulb - Tail Light
22	7552H	Electrical Wire	44	3073P	Stripped Truss Hd. Me Screw No. 10-24x1/2
		*If you need the proper wires building the ground wire order 5555P Phillips Pan Hd. Thread Cutting Screw No. 10-16 Hi-Lo Thread 1/2 Blunt Point	45	3675R	Tail Light - Bracket
			46	505P	Hex Nut No. 10-24

 
ROPER RT-8 GARDEN TRACTOR-
TRANSAXLE

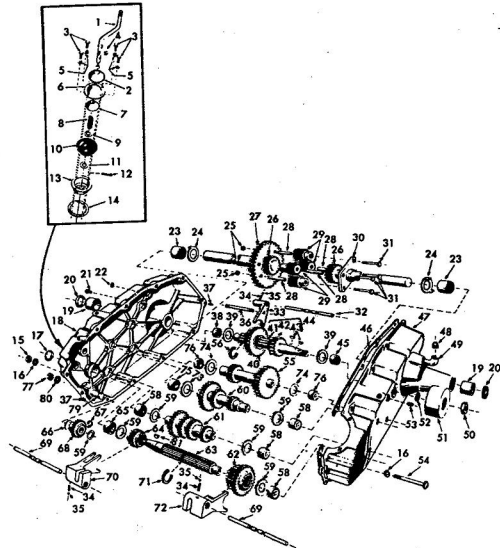

ROPER RT-8 GARDEN TRACTOR
TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
—	633A45	Transaxle Assembly w/Brake Drum	36	6215H	High-Low Range Shift Shaft
1	8735H1	Gear Shift Lever-Bent	37	6277H	Dowel Pin
2	4659H1	Gear Shift Cap	38	8118H	Needle Bearing
3	3159P	Hex Bolt 5/16-18 x 7/8	39	6366H	Thrust Bearing Race
4	7835H	Woodruff Key 1/8 x 1/2	40	633A14	High-Low Range Gears and Hub
5	1003P	Lockwasher 5/16	41	6221H	3rd Reduction Gear Shaft
6	633A39A	Gear Shift Ball Cover and Pin	42	8659H	4th Reduction Pinion
7	8739H1	Shift Lever Guide Ball-Steel	43	2220H	Woodruff Key 5/16 x 3/4
8	4924H	Spring	44	633A32	3rd Reduction Shaft and Gear
9	1544P	Washer 15/32 x 59.64 x 16 Ga.	45	8119H	Needle Bearing
10	6273H	Shift Mechanism Seal	46	6273H	Gasket-Gearcase
11	1569P	Washer 9/16 x 15/16 x 11 Ga.	47	633A41	Gear Case and Bearings I
12	2505P	Center 1/8 x 3/4	48	4002P	Pipe Plug 3/4 N.P.T.
13	633A19	Gear Shift Gate and Reinforcement	49	4003P	90° Street Elbow 1/2-14 N.P.T.
14	6274H	Gasket-Shift Ball Cover	50	9204H	Lock Nut
15	381P	Hex Nut 5/16-18	51	7648H1	Brake Drum
16	1007P	Lockwasher 5/16 Extra Heavy	52	6271H	Oil Seal
17	6270H	Oil Seal	55	633A33	4th Reduction Shaft and Gears
18	633A42A	Gear Case, Reverse Idler Shaft Bearings R.H.	56	6270H	Snap Ring-Crescent Typ
19	992R1	Sintered Iron Bearing	58	4895H	Thrust Bearing Race
20	7882H	DI Seal	59	1370H	2nd Reduction Shaft and Gears
21	3825H	Pressure Relief Valve	60	633A31	Speed Change Gears and Shaft
22	8269H	Oil Seal	61	633A30	Intermediate and High Speed Pinions
23	8745H1	Sintered Iron Bearing	62	633A11	Input Shaft
24	4256H	Chain Link Gripsco Nut 3/8-24	63	6218H	Needle Bearing
25	7810H	Axle Shaft and Gear-Case	64	6221H	Reverse Idler Thrust Washer
26	633A43	Final Drive Gear	65	4894H	E-Ring
27	8662H	Shaft Bearings R.H.	66	7392H	Reverse Idler Gear
28	6329H1	Differential Pinion	67	5001P	Shift Fork-L.H.
29	8657H	Differential Carrier	68	1152H	Shift Fork-R.H.
30	6263H1	Hex Bolt 3/8-24 x 3 1/2	69	6210H	Shift Fork-2.H.
31	3056P	1" Thread Length	70	6362H	Snap Ring-Crescent Typ
32	6217H	Fork Shaft	71	4726H	Thrust Bearing Race
33	6260H	Shift Fork, High-Low Range	72	4219H	Needle Bearing
34	6272H	Shift Fork Detent	73	7392H	Thrust Bearing Race
35	7392H	Steel Ball	74	7390H	Needle Bearing
			75	8117H	Needle Bearing
			76	541P	Hex Nut 7/16-20
			77	7384H	Reverse Idler Shaft
			78	1167R	Sealing Washer
			80	9858H1	Woodruff Key

 
ROPER RT-8 GARDEN TRACTOR-
MOWER LIFT LEVER

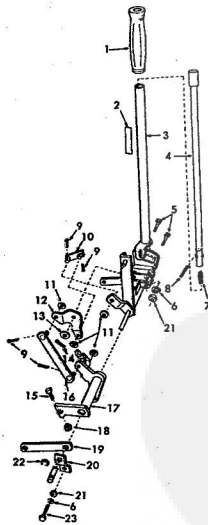

ROPER RT-8 GARDEN TRACTOR
MOWER LIFT LEVER

KEY NO.	PART NO.	DESCRIPTION
1	2895H	Handle Grip
2	4304R	Decal
3	626A360	Lifter Arm Assembly
4	626A336	Lever Plunger and Button
5	3137P	Hex Bolt 3/8-16 x 1 1/2 H.T.
6	1004P	Lockwasher 3/8
7	2874H	Lifter Spring
8	9465H	Roll Pin
9	2585P	Center Pin 1/8 x 1/2
10	626A358	Connecting Link Assembly
11	1513P	Washer 13/32 x 13/16 x 16 Ga.
12	2369R	Ball Crown
13	1577P	Washer 17/32 x 1-1/16 x 13 Ga.
14	1511P	Center Pin 3/16 x 1/2
15	4524P	Sq. Hd. Set Screw C.P. 3/8-16 x 1/2
16	626A373	Lift Link Weldment
17	626A357	Lifter Arm and Tube
18	508P	Hex Jam Nut 3/8-16
19	8720H	Pivot Link Rear
20	5080H	Lifter Bracket
21	501P	Hex Nut 3/8-16
22	6005P	E-Ring Truarc 5133-75
23	3091P	Hex Bolt 3/8-16 x 1 H.T.

 
repair parts ROPER RT-10 GARDEN TRACTOR—MODEL NO. T02251R0

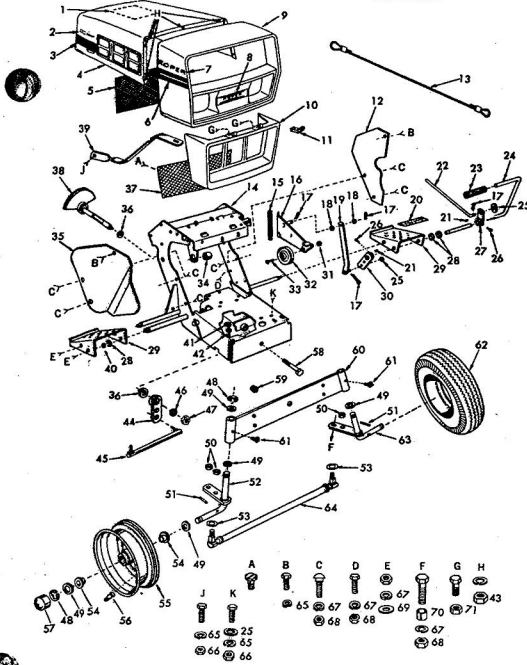

ROPER RT-10 GARDEN TRACTOR—MODEL NO. T02251R0

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	4821R	Decal	42	6827M	Grease Fitting
2	8967R	Decal (8 Speed 10 H.P.)	43	853P	Hex Nut 1/20 UNC
3	7000R	Hood and Grill Strip	44	626A254	Steering Arm Assem
4	626A391	Hood Assembly	45	3137H	Steering Link
5	3631R	Grill Screen-Upper	46	1544P	Washer 15/32x15/16
6	2001R	Hood and Grill Strip	47	7762H	Lock Nut 7/16-14 L
7	6956R	Grill Decal	48	5000P	E-Ring
8	6953R	Rear Decal	49	1552P	Washer 49/64x1 1/8
9	3632R	Grill-Upper	50	7810H	Gripes Centerlock 1
10	2897R	Grill Base	51	3142H	Roll Pin
11	4171R	Insulated Clip (For Hood)	52	626A194	King Pin Assembly
12	664R	Light Wire	53	2513R	Hood Washer
13	5654R	Grill Cable	54	5040H	Flanged Bearing
14	626A349	Engine Mount and Tie Plate Assembly	55	9411R	Front Wheel
15	5102H	Idler Spring	56	795R	Valve
16	626A241	Idler Bracket Assembly	57	2118R	Dust Cap
17	2905P	Center Pin 1/8x3/8	58	3217P	Hex Bolt 5/8-11x3/8
18	1527P	Washer 13/32x13/16x11 Ga.	59	4764H	Huglock Nut 5/8-11
19	626A196	Clutch Rod Assembly	60	106A244	Rocker Bar/Front A Assembly
20	1064R	Decal Clutch-Break	61	685M	Grease Fitting
21	9858M1	Woodruff Key 3/16x3/8	62	4410R	Front Tire-Tubeless
22	8811H1	Brake Rod-Front	63	626A193	King Pin Assembly-1
23	1526H	Foot Pedal Sleeve	64	816R	The Rocker-Adjustable
24	1795R	Foot Pedal Shaft	65	1007P	Lockwasher 5/16
25	1535P	Washer 13/32x13/16x16 Ga.	66	664P	Hex Nut 5/16-18
26	4501P	Set Screw, Sec. Hd. 5/16-18x3/8	67	1004P	Lockwasher 3/8
27	626A338	Brake Arm Assembly	68	1555P	Hex Nut 3/8-16
28	8001P	Foot Rest	69	1004P	Washer 13/32x7/8x1 1/8
29	8172H	Foot Rest	70	3204R	Bushing
30	626A37A	Hex Jam Locknut 3/8-24	71	1405H	Lock Nut 1/2-20 UNC
31	548P	Steering Arm Assembly	A	5554P	Phillips Pan Hd. Tin Cutting Screw No. 10, 1/4x3/8 Blue Point
32	1342R	Idler Stud	B	3010P	Hex Bolt 5/16-18x3/8
33	8094H	Bearing	C	8P	Carriage Bolt 3/8x3/8
34	8092H	Ball Guard	D	3022P	Hex Nut 3/8-16
35	9000H	Thrust Washer	E	3022P	Hex Bolt 3/8-16x1 1/8
36	3374H	Grill Screen-Base	F	3022P	Hex Bolt 3/8-16x1 1/8
37	3374H	Intermediate Shaft Assembly	G	3022P	Hex Bolt 3/8-16x1 1/8
38	626A253	Grill Brace	H	1002P	Lockwasher 1/2
39	4429R	Washer 41/64x1 1/2 Ga.	I	3010P	Hex Bolt 5/16-18x3/8
40	1506P	Washer 9/32x5/8x16 Ga.	J	3010P	Hex Bolt 5/16-18x3/8
41	1506P	Washer 9/32x5/8x16 Ga.	K	3010P	Hex Bolt 5/16-18x3/8
			---	---	Owners Manual

 
ROPER RT-10 GARDEN TRACTOR—MODEL NO. T02251R0

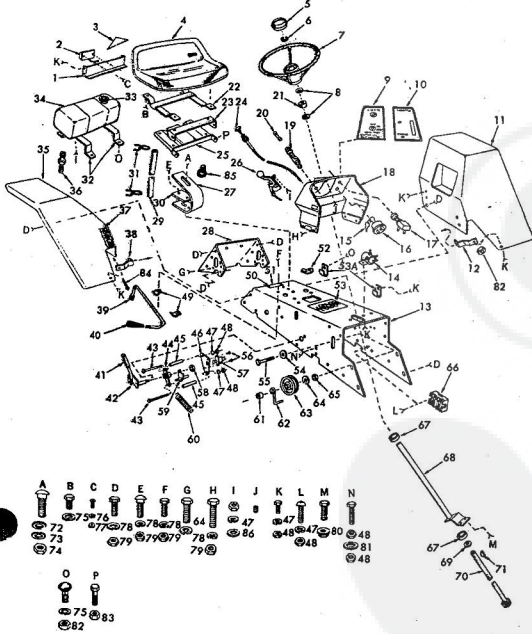

ROPER RT-10 GARDEN TRACTOR—MODEL NO. T02251R0

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	3625R	Tail Light Bracket	54	1544P	Washer 15/32x59/64x16
2	4063R	Tail Light	55	3197P	Hex Bolt 7/16-14x3/8
3	3239R	Safety Std. Sticker	56	3501P	Pan Hd. Phillips Thrd. C.
4	4987R	Seat	57	2256R	Implement Safety Switch
5	6951R	Steering Wheel Cap	58	7810H	Gripes Centerlock 3/8
6	5000P	E-Ring	59	626A346	Clutch Lever Stop Washer
7	9027H	Steering Wheel	60	2256R	Clutch Return Spring
8	3819R	Cap	61	6209H	Idler Spacer
9	3819R	Dash Panel L.H.	62	6479H1	Belt Guide Finger
10	3819R	Dash Panel R.H.	63	6655H	Flat Idler
11	626A297	Fender and Insert L.H.	64	1001P	Lockwasher 7/16
12	4144R	Fender Bracket L.H.	65	500P	Hex Nut 7/16-14
13	6406R	Chassis Choment	66	5436R	Rectifier
14	1038R	Solenoid	67	4437H	Steering Bushing
15	7520R1	Key-Set	68	626A109	Steering Column Assembly
16	4406R	Ignition and Starter Switch	69	1552P	Washer 49/64x1 1/8x16 Ga.
17	3738H	Light Switch	70	626A29	Steering Shaft Assembly
18	2213R	Dashboard Inss Panels	71	9858M1	Woodruff Key
19	2213R	Fuse Holder	72	1566P	Washer 17/32x15x11 Ga.
20	2212R	Fuse 15 amp.	73	1000P	Lockwasher 5
21	5949H	Rubber Bushing	74	5026	Hex Nut 7-15
22	634A532	Seat Bracket Weldment	75	1007P	Lockwasher 5/16
23	2663R	Bracket-Seat Pivot	76	1006P	Lockwasher No. 10
24	6392R	Seat Plate	77	505P	Hex Nut No. 10x24
25	634A533	Clake Control	78	1004P	Lockwasher 3/8
26	6392R	Throttle Control	79	1004P	Hex Bolt 3/8-16
27	6098R	Seat Spring	80	8698H	Flange Locknut
28	634A101	Drawer and Weldments	81	1405P	Internal Tooth Lockwasher
29	3664R	Fuel Line	82	824P	Hex Nut 5/16-18
30	8141H	Seat Spring Reinforcement	83	5394H	Locknut 3/8-16
31	2731R	Fuel Line Clip	84	2511P	Cotter Pin 3/16x1
32	6407R	Bracket Fuel Tank	85	5424R	Recessed Busher
33	6365R	Fuel Gauge	86	1506P	Washer 9/32x5/8x16 Ga.
34	6277R	Fuel Tank	A	25P	Carriage Bolt 3/8x1 1/8
35	4764396	Fender and Insert R.H.	B	3009P	Hex Bolt 5/16-18x5/8
36	4764396	Fender and Insert R.H.	C	3073P	Stained Texa 3/8x3/8
37	3919R	Fuel Line Fitting	D	3022P	Screw No. 10x24x1 1/2
38	4165R	Fender Bracket R.H.	E	8P	Hex Bolt 3/8-16x1
39	6477H	Shift Range Rod	F	3022P	Hex Bolt 3/8-16x1 1/2
40	4482R	Control Knob	G	3035P	Hex Bolt 3/8-16x1 1/2
41	4279H	Handle Grip	H	3027P	Hex Bolt 3/8-16x1 1/2
42	626A347	Clutch Lever Weldment	I	503P	Hex Bolt 3/8-16
43	3254P	Hex Bolt 3/20x39	J	4502P	Hex Socket Hdless Set Screw
44	626A345	Clutch Hub Weldment	K	3114P	5/16-18x5/16 Nylock
45	2218R	Spacer	L	3153P	Hex Bolt 3/20x1 1/8 H.T.
46	2218R	Switch Plate	M	3022P	Hex Bolt 3/8-16x1 1/2
47	1002P	Lockwasher 1/2	N	3022P	Hex Bolt 3/8-16x1 1/2
48	503P	Hex Nut 1/20	O	16P	Carriage Bolt 5/16-18x1 1/2
49	6442H1	Shift Rod Bracket	P	3022P	Hex Bolt 3/8-16x7/8
50	9521H	Drive Rivet			
51	2521R	Model Number Plate			
52	2521R	Insulated Clip			
53	6945R	Shift Pattern Plate			
53A	2751R	Clip-Fuel Line			

 
ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251RO

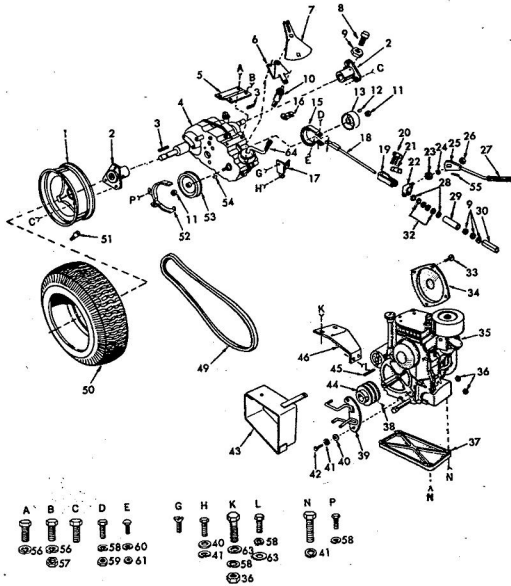

ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251RO

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	7226H	Rear Wheel	38	4525P	Set Screw, Hex Socket Headless, 3/8x16x3/8
2	8827H	Wheel Hub-Rear	39	626A18B	Belt Guide Assembly
3	8327H	Sq. Key 1/2x3	40	1513P	Washer 13/32x13/16x16 Ga.
4	633A45	Transaxle (1 Transmission) with Brake Drum	41	1004P	Lockwasher 3/8
5	6459H	Transaxle Bracket	42	3021P	Hex Bolt 3/8-16x3
6	634A535	Neutral Safety Support Assembly	43	626A317	Heat Shield Assembly
7	634A534	Neutral Safety Arm Assembly	44	626A221	Engine Pulley
8	4524P	Set Screw-5/16, 3/8-16x1 1/4	45	9256E	Sq. Key 1/2
9	501P	Hex Nut 3/8-16	46	1796R	Engine Tie Bracket
10	2229S	Neutral Safety Switch	49	8853H	V-Belt (Engine to Transaxle-Transmission)
11	9204H	Locknut 1/2-20	50	3795R	Rear Tire-Tubeless
12	2229M	Woodruff Key	51	7955R	Valve-Tire
13	7648H1	Brake Drum	52	626A209	Rear Belt Guard Assembly
14	634A167	Brake Band and Lining	53	8840H	Transaxle (Transmission) Pulley
15	235R	Insulated Clip	54	9256E	Woodruff Key 3/16x3/8
16	626A208	Brake Bracket Assembly	55	175H	Roll Pin (In Channel for Parking Brake Stop)
17	626A265	Brake Rod Assembly	56	1001P	Lockwasher 7/16
18	2197R	Park Brake Yoke	57	502P	Hex Nut 7/16-14
19	3256P	Hex Bolt 1/2-28x5/8	58	1007P	Lockwasher 5/16
20	9071H	Heat Tracer	59	1685H	Locknut 5/16-18
21	634A489	Muglock Nut 1/2-28	60	1002P	Lockwasher 3/4
22	2221R	Lock Bracket Assembly	61	503P	Hex Nut 1/2-20
23	5979H	Park Brake Spacer	62	1337P	Washer 11/22x11/16x16 Ga.
24	626A394	Parking Lock Handle Assembly	63	4462R	Control Knob
25	7810H	Washer 1/2x22x3/8-24	A	3034P	Hex Bolt 7/16-14x1
26	4379H	Handle Grip	B	3034P	Hex Bolt 7/16-14x1
27	1557P	Washer 13/32x13/16x11 Ga.	C	1304H	Hub Bolt
28	2221R	Lock Bracket Assembly	D	2159P	Hex Bolt 5/16-18x7/8
29	5979H	Park Brake Spacer	E	11P	Carriage Bolt 1/2-20x5/8
30	6471H	Turbocharger	G	3164P	Under-Cut Flat Hd. Mech. Screw 3/8x1x3
31	2253R	Spring Washer	H	3022P	Hex Bolt 3/8-16x7/8
32	6040P	Slotted Flat Hd. Mech. Screw with Seal Lockwasher 1/2-28x3/4	K	3010P	Hex Bolt 5/16-18x3
33	704R	Screen Guard	L	3010P	Hex Bolt 5/16-18x3
34	H1100	Engine 10 H.P. (Order from your local Tecumseh service dealer)	N	3010P	Hex Bolt 3/8-16x1 1/2
35	H1120E	Engine 12 H.P. (Order from your local Tecumseh service dealer)	P	3010P	Hex Bolt 5/16-18x3
36	504P	Hex Nut 5/16-18			
37	668R	Engine Mounting Block			

 
ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251RO

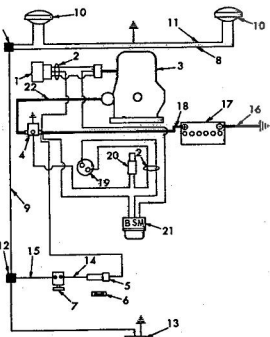


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	5436R	Rectifier	26	3869R	Housing, Tail Light
2	6812R	Electrical Wire (Harness)	27	3073P	Slotted Trazee Hd. Mech. Screw No. 10-24x5/8
3	H1100	Engine, 10 H.P. (Order from your local Tecumseh dealer)	28	3625R	Tail Light Bracket
4	11207E	Shield	29	1006P	Lockwasher No. 10
5	103R	Fuse Holder	30	505P	Hex Nut No. 10-24
6	2211R	Fuse	31	3748M	Wing Nut
7	2212R	Light Switch	32	1509P	Washer 5/16x3/8x16 Ga.
8	3735H	Lead Wire	33	5110H	Battery Clamp
9	6136H	Lead Wire	34	5072H	Battery Bolt
10	3837R	Head Light	35	505P	Hex Nut 1/2-20
11	2894R	Ground Wire	36	1007P	Lockwasher 5/16
12	5740H	Wire Connector	37	504P	Hex Nut 5/16-18
13	4052R	Tail Light	38	1462P	Lockwasher-External
14	2234R	Electrical Wire	39	3159P	Hex Bolt 5/16-18x7/8
15	227R	Electrical Wire	40	5554P	*Phillips Pan Hd. Thread Cutting Screw No. 10-16 Hi-Lo Thread w/Blunt Point
16	2114H	Ground Strap	41	8748H	Mounting Clip
17	9855H	Battery	42	8784H1	Rubber Spacer
18	626A344	Cable and Cover	43	9197H	Hose
19	2256R	Implement Safety Switch			
20	2257R	Neutral Safety Switch			
21	4405R	Starter Switch & Ignition			
22	2235R	Battery Cable			
23	3866R	Lens, Tail Light			
24	3867R	Bulb, Tail Light			
25	9207H	Black Knob (for light switch)			

*If you need the upper screw holding the ground wire (Key No. 11) order 5555P Phillips Pan Hd. Thread Cutting Screw No. 10-16 Hi-Lo Thread x 5/8 Blunt Point.

 ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251RO

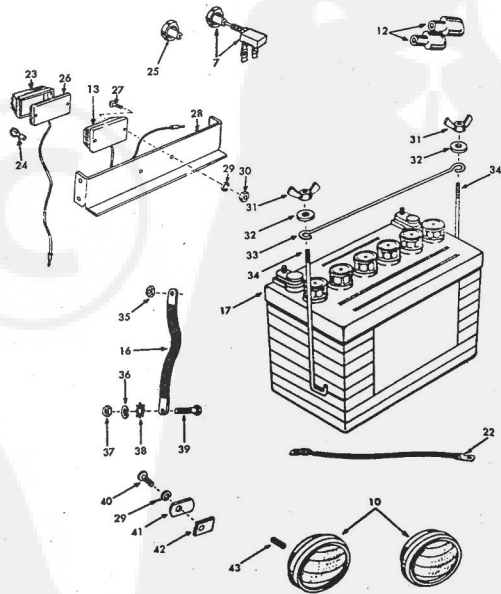

 
ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251R0

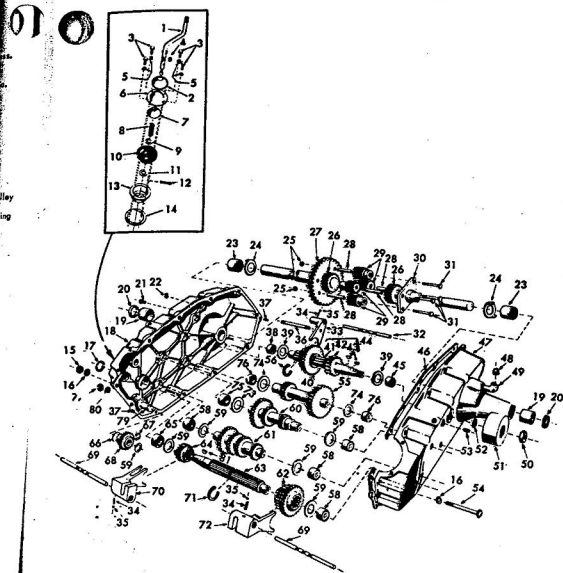

ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251R0

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
---	633A45	Transmission Assembly w/Brake Drum	36	6215H	High-Low Range 1 Shaft
1	6729H1	Gear Shift Lever-Bent	37	6227H	Control Pin
2	4867H1	Gear Shift Cap	38	8118M	Needle Bearing
3	3137P	Hex Bolt 5/16-18x7/8	39	6266H	Thrust Bearing R
4	7833M	Woodruff Key 1/2x1/2	40	633A14	High-Low Range 1 and Hub
5	1003P	Lockwasher 5/16	41	6221H	3rd Reduction Gear
6	633A39A	Gear Shift Ball Cover and Pin	42	8659H	4th Reduction Pin
7	8739H1	Shift Lever Guide Ball-Keyed	43	2228M	Woodruff Key 3/16
8	4924H	Spring	44	633A32	3rd Reduction Sha
9	1564P	Washer 15/32x59/64x16 Gs.	45	8119M	Needle Bearing
10	6273H	Shift Mechanism Seal	46	6275H	Gasket-Gearcase
11	1369P	Washer 9/16x15/16x11 Gs.	47	633A41	Gear Case and Be
12	2305P	Cutter 1/8x3/4	48	4002P	Pipe Plug 1/2-14 N.
13	633A19	Gear Shift Gate and Reinforcement	49	4003P	90° Street Elbow 1
14	6274H	Gasket-Shift Ball Cover	50	9204H	Lock Nut
15	504P	Hex Nut 5/16-18	51	7648H1	Brake Drum
16	1007P	Lockwasher 5/16 Extra Heavy	52	6271H	Oil Seal
17	6270H	Oil Seal	53	4001P	Pipe Plug 1/2-18 N.
18	633A42A	Gear Case, Reverse Idler	54	3092P	Hex Bolt 5/16-18x Grade 5 H.T.
19	9036R	Shift Bearings R.H.	55	633A33	4th Reduction Shaft Snap Ring-Crescon
20	7862R	Sintered Iron Bearing	56	4892H	Needle Bearing
21	8552H	Pressure Relief Valve	57	1570H	Thrust Bearing Ro
22	6369H1	Oil Seal	60	633A31	2nd Reduction Sha
23	9040R	Sintered Iron Bearing	61	633A30	Speed Change Gear Intermediate and H
24	6256H	Axle Thrust Washer	62	632A11	Pinions
25	7810H	Centerlock Gripco Nut 2/8-24	63	6210H	Input Shaft
26	633A43	Axle Shaft and Gear-Custom	64	6231H	Low Speed Pinion
27	8662H	Fine Drive Gear	65	4894H	Needle Bearing
28	6232H1	Bushing-Differential Pinion	66	7292H	Reverse Idler Thru E-Ring
29	8637H	Differential Pinion	67	5001P	Reverse Idler Gear
30	6363H1	Differential Carrier	68	1153R	Shift Fork Shaft
31	3056P	Hex Bolt 3/8-24x3/4 Thread Length	69	6216H	Shift Fork-L.H.
32	6219H	High-Low Range Shift Fork Shaft	70	6262H	Shift Fork-R.H.
33	6269H1	Shift Fork, High-Low Range	71	4924H	Snap Ring-Crescon
34	6272H1	Spring-Shift Fork Detent	72	4219H	Shift Fork-L.H.
35	7392M	Steel Ball	73	7395H	Thrust Bearing R
			74	7396H	Thrust Bearing R
			75	6209H	Needle Bearing
			76	6117M	7364H
			77	541P	Hex Jam Nut 7/16-
			78	7364H	Reverse Idler Shaft
			79	1167R	Sealing Washer
			81	9858M1	Woodruff Key

 
ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251R0

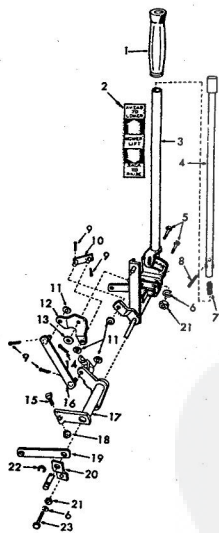

ROPER RT-10 GARDEN TRACTOR--MODEL NO. T02251R0

KEY NO.	PART NO.	DESCRIPTION
1	2895H	Handle Grip
2	4306R	Decal
3	626A360	Lifter Arm Assembly
4	626A326	Lever Plunger and Button
5	3137P	Hex Bolt 3/8-16x1 1/4 H.T.
6	1004P	Lockwasher 3/8
7	2876H	Lifter Spring
8	7465M	Roll Pin
9	2505P	Cutter Pin 1/8x3/4
10	626A358	Connecting Link Assembly
11	1513P	Washer 13/32x13/16x16 Gs.
12	2308R	Bell Crank
13	1577P	Washer 17/32x1-1/16x13 Gs.
14	2511P	Cutter Pin 3/16x1
15	4524P	Sq. Hd. Set Screw C.P. 3/8-16 x 1/4
16	626A373	Lift Link Weldment
17	626A357	Lifter Arm and Tube
18	506P	Hex Jam Nut 3/8-16
19	8720H	Pivot Link Rear
20	6366H	Lifter Bracket
21	501P	Hex Nut 3/8-16
22	5000P	E-Ring Thru 3132-75
23	3091P	Hex Bolt 3/8-16x1 H.T.

 **ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

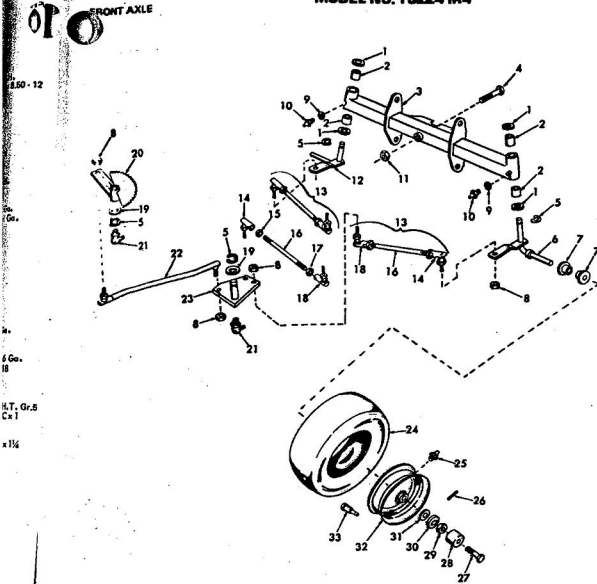


**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

FRONT AXLE

KEY NO.	PART NO.	DESCRIPTION
1	1528P	Washer 13/16 x 1/4 x 14 Ga.
2	1309H	Bearing
3	634A521	Front Axle w/Bearings (Includes Key No. 2)
4	2994P	Hex Bolt 3/8-11 x 5 Grade 5 E-Ring
5	6006P	Spindle Complete R.H.
6	634A277	Flanged Bearing
7	6340H	Grrips Locknut 3/8-24 UNF
8	7810H	Washer 9/32 x 7/8 x 14 Ga.
9	1305P	Grease Fitting
10	680544	Huglock Nut 3/8 x 11
11	4764H	Spindle Complete L.H.
12	634A278	Tie Rod end Joint (Complete)
13	5995R	Tie Rod Joint (R.H. Thread Coll Pin)
14	6740R	Hex Jam Nut 1/2-20 (R.H. Thread)
15	558P	Tie Rod and Nuts
16	634A711	Hex Jam Nut 1/2-20 (L.H. Thread)
17	529P	Tie Rod Joint (L.H. Thread Coll Pin)
18	6599R	Washer 49/64 x 1 1/4 x 18 Ga. Steering Gear Sector and Arm
19	1662P	Grease Fitting
20	634A813	Drag Link and Joints
21	0842M	Steering Bell Crank Weldment
22	7637R	Front Tire-Tubeless 16 x 6.50-8
23	634A808	Grease Fitting 1/4 - 28 Taper Thrd.
24	3838R	Roll Pin 5/32 x 1
25	8656M	Hex Bolt 5/16 - 18 x 1/2
26	8759H	Dust Cap-Outer
27	3005P	Elastic Nut 3/4 - 16
28	8763H	Wear Washer
29	4831H	Washer 35/32 x 1 1/2 x 16 Ga.
30	8785H	Front Wheel
31	1562P	Tire Valve
32	3636R	
33	795R	

**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

 BRAKE AND CLUTCH

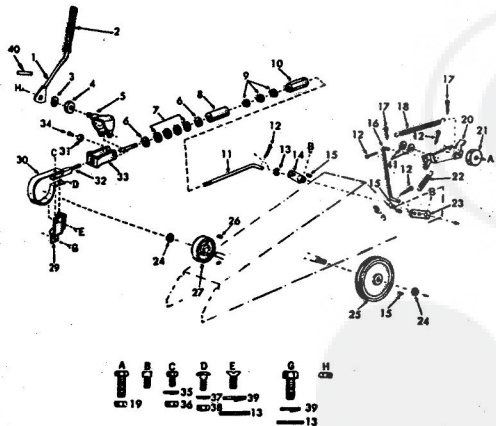


**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

BRAKE AND CLUTCH

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	626A394	Parking Lock Handle Assembly	26	2228M1	Woodruff Key 3/16 x 3/4
2	4379H	Handle Grip	27	7648H1	Brake Drum
3	3999H	Spring Washer	29	634A168	Brake Bracket Assembly
4	2221R	Parking Brake Spacer	30	634A167	Brake Band and Lining
5	634A469	Lock Bracket Assembly	31	9071H	Huglock Nut 1/2-28 UNC
6	1557P	Washer 13/32 x 13/16 x 11 Ga.	32	626A265	Brake Rod Assembly
7	2365R	Spring Washer	33	2197R	Parking Brake Yoke
8	2201R	Bushing	34	3256P	Hex Bolt 1/2 x 5/8-28 Heat Treated
9	501P	Hex Nut 3/8-16 UNC	35	1003P	Lockwasher 5/16
10	6417H	Turnbuckle	36	1685H	Locknut 5/16-18
11	2202R	Brake Rod-Front	37	1002P	Lockwasher 1/2
12	2505P	Cotter Pin 1/8 x 1/4	38	503P	Lockwasher 3/8
13	1513P	Washer 15/32 x 12/16 x 14 Ga.	39	1004P	Hex Nut 1/2-20
14	634A838	Brake Arm Assembly	40	1754I	Roll Pin (in Channel for Parking Brake Stop)
15	7858M	Woodruff Key 3/16 x 5/8	41	1545P	Washer 17/32 x 1 x 16 Ga.
16	6406H	Clutch Rod	A	3022P	Hex Bolt 3/8-24 x 1 1/4 P.H.
17	2514P	Cotter Pin 1/2 x 1	B	4501P	Co. Hd. Set Screw C.P. J
18	6486H	Spring	C	3130P	Hex Bolt 5/16-18 x 7/8
19	548P	Hex Jam Lock Nut 3/8-24 UNF	D	11P	St. Neck Carriage Bolt 1/2 x 5/16 x 3/8
20	634A838	Idler Bracket Assembly	E	3164P	Flat Hd. Machine Screw 1/2 x 5/16 x 3/8
21	634A86	Idler Bolt and Nut (Inc. Key No's. 19 and A)	G		
22	4301H	Spring	H		
23	626A31A	Steering Arm Assembly			
24	9204H	Lock Nut 1/2-20 UNF			
25	6661H2	Tensioned (Transmission) Pulley			

**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

 ELECTRICAL

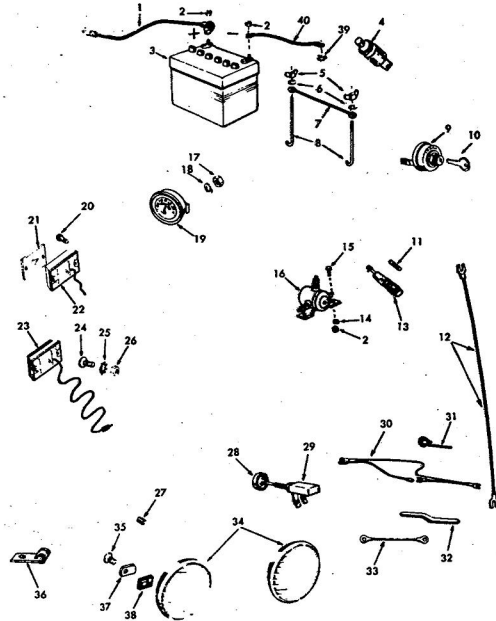


**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	634A490	Cable and Cover (red)
2	303P	Hex Nut 1/4-20
3	985R	Battery
4	3249R	Switch-Safety Start
5	3748A	Wing Nut
6	1507P	Washer 5/16 x 1/4 x 16 Ga.
7	5110H	Battery Clamp
8	3072R	Battery Bolt
9	2210R	Starter Switch (Inc. Key No. 10)
10	7552H	Key
11	2212R	Fuse
12	2223R	Lead Wire ("M" Post on Switch to Short Terminal on Engine)
13	2211R	Fuse Holder
14	1002P	Lockwasher 1/4
15	3115P	Hex Bolt 1/4-20 x 3/8
16	1032	Solenoid
17	543P	Hex Nut No. 10-32
18	1006P	Lockwasher No. 10
19	5212R	Ammeter
20	3807R	Bulk (Tail Light) No. 1895
21	3868R	Lens (Tail Light)
22	3869R	Housing (Tail Light)
23	3757R	Tail Light
24	3073P	Slotted Truss Hd. Mech. Screw No. 10-24 x 1/2
25	1404P	Lockwasher No. 10 External
26	305P	Hex Nut No. 10-24
27	9197H	Flare (On Grill-Headlight Locating Pins)
28	9267H	Knob, For Light Switch
29	5735H	Light Switch (Includes Knob No. 28)
30	3773R	Lead Wire (Headlights to Switch) (Pink)
31	4171R	Insulated Clip
32	2777R	Tie
33	2894R	Ground Wire (Headlight to Ground) (Black)
34	7034H	Headlight
35	5301P	Phillips Pan Hd., Tbd. Cutting Screw No. 10-24 x 3/8 Type T
36	2521R	Insulated Clip
37	8768H	Mounting Clip
38	8784H1	Rubber Spacer
39	1402P	External Lockwasher 3/8
40	6409R	Ground Cable (Battery "-" to Ground)

**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

 WIRING DIAGRAM

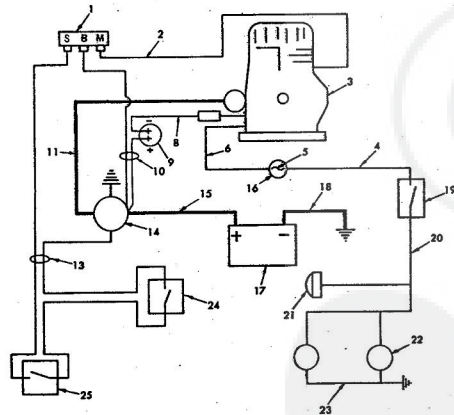



**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

WIRING DIAGRAM

KEY NO.	PART NO.	DESCRIPTION
1	2210R	Starter Switch
2	2223R	Electrical Wire (Ignition Switch "M" to Engine Mfg.)
3	302437	Engine, 13 H.P., Briggs and Stratton - Type 014501
4	2228R	Electrical Wire (Fuse to Light Switch)
5	2212R	Fuse (in Fuse Holder)
6	2233R	Electrical Wire (Fuse Lights to Alternator, Engine)
8	4444R	Electric Wire
9	5212R	Ammeter
10	3830R	Electrical Wire (Ign. Sw. "B" to Ammeter)
11	2275R	Battery Cable (Solenoid to Starter)
13	3840R	Wire Harness (Starter Circuit)
14	1032	Solenoid
15	634A490	Cable & Cover (Battery "plus" to Solenoid "B")
16	2211R	Fuse Holder
17	985R	Battery
18	6409R	Ground Cable (Battery "-" to Ground)
19	5735H	Light Switch
20	3773R	Lead Wire (Light Switch to Lights)
21	3757R	Tail Light
22	7034H	Headlight
23	2894R	Ground Wire Headlight
24	2249R	Safety Switch (For Mower Interlock)
25	3249R	Neutral Safety Switch

**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

  TRANSAXLE

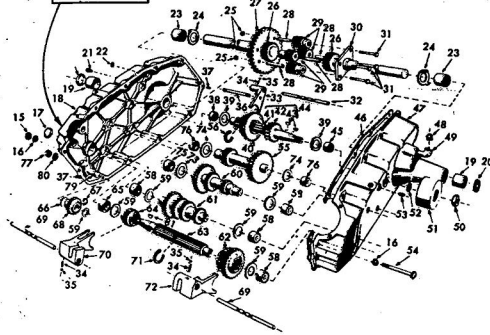


**ROPER RT-13 GARDEN TRACTOR
MODEL NO. T32241R4**

TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	633A28	Transaxle Assembly less	38	81184	Needle Bearing
2	6211H1	Brake Drum	39	4256H	Thrust Bearing R
3	4849H1	Gear Shift Lever straight	40	633A14	High-Low Range Nut
4	3010P	Gear Shift Cap Hex Bolt 5/16-18x3/4	41	6221H	3rd Reduction Ge
5	1003P	Lockwasher 5/16	42	8659H	4th Reduction Pi
6	6254H1	Gear Shift Ball Cover	43	2228M	Woodruff Key 5/16
7	6259H1	Shift Lever Guide Ball	44	633A32	3rd Reductioe Shr
8	4924H	Spring	45	81194	Needle Bearing
9	1544P	Washer 15/32 x 3/8 x 1/4	46	4002P	Gear Case and Be
10	8105R	Shift Mechanism Seal	47	633A27	Pin Plug 1/2-14
11	1525P	Washer 9/16 x 15/16 x 11 Ga.	49	4003P	90 Street Elbow 1
12	2505P	Center 1/8 x 3/4	50	7486H1	Lock Nut
13	633A19	Gear Shift Gate and Reinforce- ment	51	6271H	Brake Drum
14	6274H	Socket-Shaft Ball Cover	52	6271H	Oil Seal
15	304P	Hex Nut 5/16-18	53	3087P	Pipe Plug 1/4-18 N
16	1007P	Lockwasher 5/16 Extra Heavy	54	3087P	Hex Bolt 5/16-18
17	6270H	Oil Seal	55	633A33	Grade 2 H.T.
18	633A28A	Gear Case, Reverse Idler Shaft and Bearings R.H.	56	6276H	4th Reduction Sho
19	8038R	Pressure Inlet Bearing	59	1370H	Thrust Bearing R
20	7382R	Oil Seal	60	633A31	2nd Reduction Sho
21	8559H	Pressure Relief Valve	61	633A30	Speed Change Case
22	6269H	Oil Seal	62	633A11	Intermediate and H Pinions
23	3037R	Sintered Iron Bearing	63	6218H	Input Shaft
24	6256A	Centerlock Gripco Nut 3/8-24	64	6231H	Low Speed Pinion
25	7810H	Centerlock Gripco Nut 3/8-24	65	4894H	Needle Bearing
26	633A34	Shaft and Gear	66	7392H	Reverse Idler Thr
27	8660H1	Final Drive Gear	67	6276H	4th Reductioe Sho
28	6252H1	Ball-Needle Differential Pinion	68	1133R	Reverse Idler Gear
29	8657H	Differential Pinion	69	6216H	Needle Bearing
30	6263H1	Differential Carrier	70	6262H	Shift Fork-R.H.
31	3056P	Hex Bolt 3/8-24 x 3/4	71	4928H	Shift Fork-L.H.
32	6217H	High-Low Range Shift Fork Shaft	72	4219R	Snap Ring-Crescent
33	6260H	Shift Fork, High-Low Range	73	7392H	Thrust Bearing R
34	6277H	Spring-Shift Fork Detent	75	7398H	Needle Bearing
35	7393H	Steel Ball	76	81174H	Needle Bearing
36	6215H	High-Low Range Shift Shaft	77	541P	Hex Jam Nut 7/16-1
37	6277H	Dowel Pin	78	7384H	Reverse Idler Shaft
			79	1167R	Sealing Washer
			81	9858M1	Woodruff Key

repair parts

 
**ROPER HYDRO-13 GARDEN TRACTOR-MODEL NUMBER T32341R0
MAIN FRAME, DASHBOARD AND GRILL**

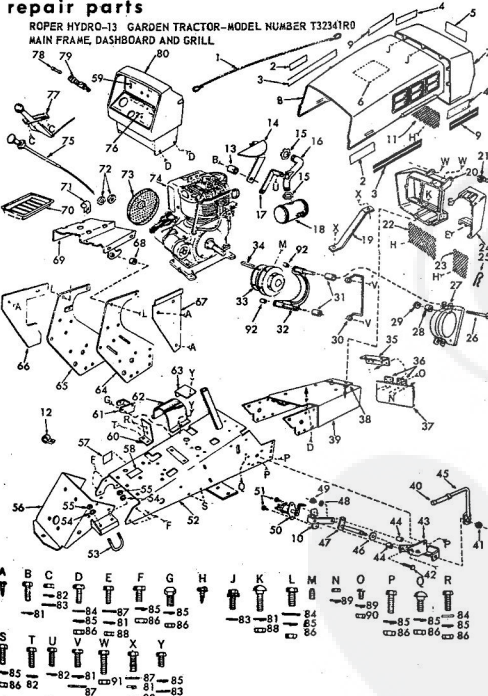

**ROPER HYDRO 13 H.P. GARDEN TRACTOR-MODEL NUMBER T32341R0
MAIN FRAME, DASHBOARD AND GRILL**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	5626R	Grill Cable	60	5109R	Filter Mounting I
2	6960R	Decal-Hydro 13	61	634A35S	Hanger Weldment
3	7801E	Decal-Strip-Short	62	6204R	Oil Filter Shield
4	6956R	Decal-Roper	63	6271R	Neutral Adjuster
5	6955R	Decal-Roper Logo	64	6920R	Battery Support I
6	5138R	Decal-Intelligence	65	6077R	Task and Battery Bracket-L.H.
7	3632R	Grill-Upper	66	3657R	Cover-L.H.
8	634A597	Head Weldment	67	1360R	Cover-R.H.
9	7000R	Decal-Strip-Med.	68	2689R	Bearing
10	634A592	Switch Bracket Assembly	69	634A37S	Battery Support M with Bearing (inc 68)
11	3631R	Grill Screen-Upper	70	2685R	Battery Tray
12	2521R	Insulated Clip for Tail Light Wire	71	9776H	Check Control Cl
13	2520R	Spacer	72	3929H	Lock Nut
14	628A02B	Heat Shield Weldment	73	5263R	Stationary Screen
15	9540H	Locknut	74	30243P	Engine, H.P. E Station, Type No.
16	648R	Exhaust Pipe	75	9764H	Check Control
17	4096R	Muffler Support	76	6252R	Decal-Over-Lows
18	3976R	Muffler	77	4653R	Throttle Remote C
19	4443R	Grill-Brace	78	2212R	Fuse
20	2677R	Grill-Lower	79	2211R	Fuse Holder
21	4171R	Insulated Clip	80	5123R	Dashboard
22	2674R	Grill Screen-L.H.	81	1003P	Lockwasher 5/16
23	2673R	Grill Screen-R.H.	82	1002P	Lockwasher 3/8
24	2678R	Grill-Side	83	1504P	Washer 9/32 x 5/8
25	4939M	Retainer Spring	84	1513P	Washer 15/32 x 13
26	3154P	Marined Filter Hd.	85	1004P	Lockwasher 3/8
27	634A663	Belt Guide Weldment	86	501P	Hex Nut 3/8-16
28	8238H	Split Spacer	87	1527P	Washer 1/2 x 11
29	347H	Huglock Nut	89	1005P	Lockwasher No. II
30	4996R	Belt Retainer	90	504P	Hex Nut No. 10-24
31	8704H1	Spacer	91	1605H	Locknut 1/2-20 UNC
32	634A688	Belt Guide Weldment	92	6076R	Spacer
33	634A697	Engine Pulley with Set Screws (inc. Key No. II)	A	5551P	Hex Washer Hd. Th Screw 1/2-20 UNC x 1
34	9296E	Square Key 1/2 x 2	B	3014P	Hex Bolt 5/16-18 x 1
35	6433H	Front Channel Cover Support	C	302P	Hex Nut 1/2-20
36	6483H	Hinge	D	3027P	Hex Bolt 3/8-16 x 1
37	634A42B	Front Channel Cover and Weld Bolts	E	2010P	Hex Bolt 5/16-18 x 1
38	634A409	Grill Spacer	F	3023P	Hex Bolt 3/8-16 x 1
39	434A389	Engine Mount Assembly	G	3022P	Hex Bolt 3/8-16 x 1
40	4379H	Handle Grip	H	3001P	Pin Hd., Phillips T
41	7810H	Gripco Centerlock Nut 3/8-24	J	5583P	Cutting Screw No. Hex In. Self Tap S washer 1/2-20 x 5/8
42	3013P	Hex Bolt 5/16-18 UNC x 1 1/2	K	99P	Carriage Bolt 5/16-18 x 1 1/2
43	634A494	Hanger Weldment-R.H., Front	L	4514P	Hex Socket Headless C.P., 5/16-18 x 5/8
44	1607E	Washer	M	505P	Hex Nut No. 10-24
45	634A493	Attachment Clutch Lever Assembly	O	3122P	Slotted Truss Hd. x Screw No. 10-24 x 3
46	5999H	Spring Washer	P	3137P	Hex Bolt 3/8-16 x 1 1/2
47	634A491	Belt Tightener Arm and Idler Shaft	Q	28P	Carriage Bolt 3/8-16 x 1 1/2
48	1003P	Lockwasher 5/16	R	3022P	Hex Bolt 3/8-16 x 1 1/2
49	504P	Hex Nut 5/16-18 UNC	S	3021P	Hex Bolt 3/8-16 x 1 1/2
50	7269R	Safety Switch	T	3003P	Hex Bolt 3/8-16 x 1 1/2
51	5501P	Pin Head Phillips Thread Cutting Screw No. 10-24 UNC x 3/8 Type T	U	3017P	Hex Bolt 5/16-18 x 1 1/2
52	634A653	Chassis Assembly with Bearings	V	3017P	Hex Bolt 5/16-18 x 1 1/2
53	9808R	U-Bolt Axle Clamp	W	3017P	Hex Bolt 5/16-18 x 1 1/2
54	1004P	Lockwasher 3/8	X	3011P	Hex Bolt 5/16-18 x 1 1/2
55	501P	Hex Nut 3/8-16 UNC	Y	3114P	Hex Bolt 1/2-20 x 1 1/2
56	634A638	Dwumber Weldment			
57	6143R	Decal-by-Pass Valve			
58	5628R	Decal-Parking Brake			
59	6251R	Decal-Disrupter			

 ROPER HYDRO 13 H.P. GARDEN TRACTOR—MODEL NUMBER T33241RO
SEAT AND STEERING

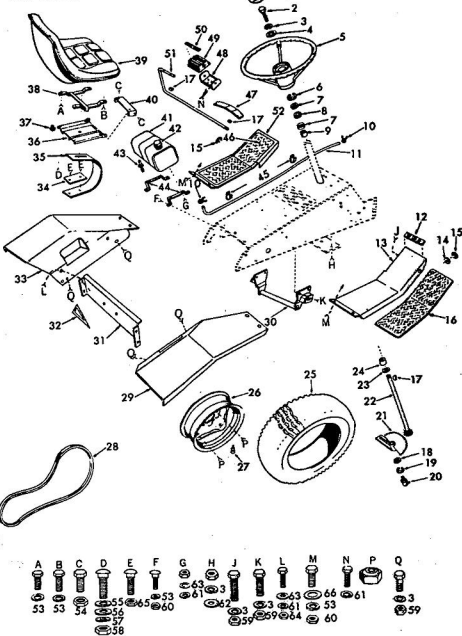


ROPER HYDRO 13 H.P. GARDEN TRACTOR—MODEL NUMBER T33241RO

SEAT AND STEERING

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	6541R	Steering Wheel Cap	41	2699R	Fuel Tank
2	9021P	Hex Bolt 3/8-16 x 1	42	9769H	Fuel Gauge
3	1004P	Lockwasher 3/8	43	819R	Fuel Line Fitting
4	1599P	Washer 7/16 x 1 1/2 x 16 Co.	44	2639R	Bracket-Fuel Tank
5	3644R	Steering Wheel	45	6794R	Clip-Fuel Line
6	303P	E-Ring	46	2641R	Foot Rest Pad, L.H.
7	9007H	Cap	47	9008H	Spring
8	5949H	Rubber Bushing	48	8763H	Foot Pedal Bracket
9	6460H	Bearing	49	1002P	Foot Pedal
10	6999R	Hose Clamp	50	1244R	Foot Pedal Plate
11	3646R	Fuel Line	51	4075R	Foot Pedal Bolt
12	2267R	Decal (Attach. Clutch)	52	634A50P	Foot Rest w/Bolts L.J.
13	634A57O	Foot Rest w/Bolts R.H.	53	1003P	Lockwasher 5/16
14	1527P	Washer 21/32 x 7/8 x 16 Co.	54	502P	Locknut 3/8-16 Grade 11
15	5001P	E-Ring	55	1578P	Washer 1/2-1/8 x 11 C
16	3642R	Foot Rest Pad R.H.	56	1500P	Washer 17/32 x 1/2 x 11
17	9858M1	Woodruff Key 3/16 x 5/8	57	1000P	Lockwasher 1/2
18	1532P	Washer 49/64 x 1/2 x 16 Co.	58	502P	Hex Nut 1/2-16
19	5000P	E-Ring	59	501P	Hex Nut 3/8-16
20	6842H	Grease Fitting	60	504P	Hex Nut 5/16-18
21	634A95	Steering Gear Sector & Arm	61	1002P	Lockwasher 1/2
22	634A426	Steering Shaft & Pinion	62	1513P	Washer 13/21 x 13/16 x
23	1533P	Washer 37/64 x 1/2 x 16 Co.	63	1566P	Washer 9/32 x 5/8 x 16
24	4766H	Bearing	64	503P	Hex Nut 1/2-20
25	3638R	Rear Tire 23 x 9.50-12	65	552P	Locknut 3/8-16 UNF
26	7229H	Rear Wheel	66	1537P	Washer 11/32 x 11/16 x
27	793R	Tire Valve	A	9009P	Hex Bolt 5/16-18 x 5/8
28	6095R	V-Belt (Ground Drive)	B	3010P	Hex Bolt 5/16-18 x 1
29	634A393	Bracket & Insert-R.H.	C	3022P	Hex Bolt 3/8-16 x 7/8
30	634A302	Hanger-Rear	D	321P	Carriage Bolt 3/8-16 x
31	3635P	Bracket-Tail Light	E	502P	Carriage Bolt 3/8-16 x
32	3229P	Safety Standard Stick	F	16P	Carriage Bolt 5/16-18
33	634A45	Fender & Insert-L.H.	G	500P	Hex Nut 1/2-20
34	8141H	Seat Spring Reinforcement	H	501P	Hex Nut 3/8-16
35	3646R	Seat Spring	J	3014P	Hex Bolt 3/8-16 x 1 1/4
36	634A33	Seat Piston Weldment	K	3023P	Hex Bolt 3/8-16 x 1
37	5424R	Seat Bumper (For Seat Spring)	L	3114P	Hex Bolt 1/2-20 x 1/2
38	634A332	Seat Bracket Weldment	M	16P	Carriage Bolt 5/16-18
39	4989R	Seat	N	3003P	Hex Bolt 1/2-20 UNF x 1
40	2653R	Bracket Seat Pivot	P	5137R	Lug Nut
			Q	3021P	Hex Bolt 3/8-16 x 1/2
				6808R	Owners Manual

ROPER HYDRO 13 H.P. GARDEN TRACTOR—MODEL NUMBER T33241RO

 
FRONT AXLE

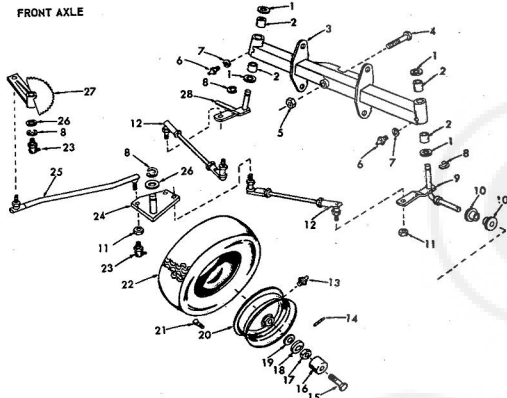


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	1528P	Washer 13/16 x 1 1/2 x 14 Co.	15	3008P	Hex Bolt 5/16-18 x 5
2	1399H	Bearing	16	8763H	Dist. Cap-Center
3	634A521	Front Axle with Bearings (Inc. Key No. 2)	17	4631H	Elastic Nut 3/4-16 UNF
4	3294P	Hex Bolt 5/8-11 x 5 H.T.	18	8783H	Wear Washer
5	4764H	Huglock Nut 5/8-11 UNF	19	1500P	Washer 23/32 x 1 1/2 x 16 Co.
6	6855M	Grease Fitting	20	3636R	Front Wheel
7	1505P	Washer 9/32 x 1/2 x 14 Co.	21	793R	Tire Valve
8	5000P	E-Ring	22	2938R	Front Tire-Tubeless 16-6.50 x 8
9	634A277	Spindle Complete-R.H.	23	6842H	Grease Fitting
10	9040H	Flanged Bearing	24	634A98	Steering Ball Crank Weldment
11	781DH	Gripco Centerlock Nut, 3/8-24 UNF	25	9319H	Drop Link and Joint
12	1808R	Tie Rod and Joints	26	1532P	Washer 49/64 x 1/2 x 16 Co.
13	6856M	Grease Fitting 1/8 Taper Thread	27	634A95	Steering Gear Sector and Arm
14	8798H	Roll Pin 5/32 x 1	28	634A278	Spindle Complete-L.H.

ROPER HYDRO-13 GARDEN TRACTOR—MODEL NUMBER T33241RO

 
CLUTCH

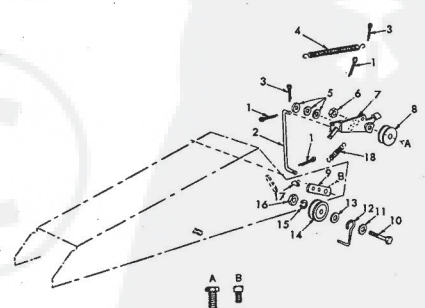


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	2505P	Cotter Pin 1/8 x 1/2	10	3262P	Hex Bolt 7/16-14 x 2
2	6460H	Clutch Rod	11	1518P	Washer 15/32 x 11/16
3	2514P	Cotter Pin 1/2 x 1	12	1592R	Bolt Guide Finger
4	6460H	Spring	13	1520P	Washer .469 I.D. x 1-1/2
5	1540P	Washer 17/32 x 1 1/2 x 16 Co.	14	5616R	Flat Idler
6	548P	Hex Jam Lock Nut 3/8-24 UNF	15	1001P	Lockwasher 7/16
7	634A538	Idler Bracket Weldment	16	500P	Hex Nut 7/16-14
8	634A86	Idler Bolt and Nut (Inc. Key No's. 1 and 6)	17	1968M1	Woodruff Key 3/16 x 1
9	626A31A	Steering Arm Assembly	18	4301H	Spring
			A	5022P	Hex Bolt 3/8-24 UNF
			B	4501P	Sq. Hd. Set Screw C 18 x 1/2

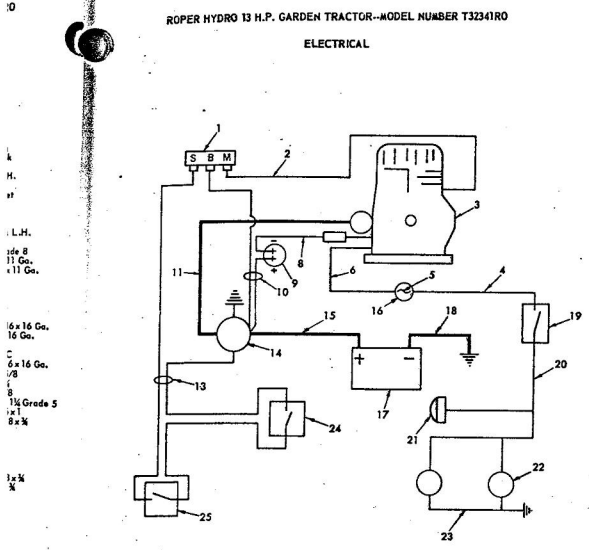 

 1.6 x 16 Co.
16 Co.
1.6 x 16 Co.
1/8
1/8 Grade 5
1 x 1
8 x 3/4

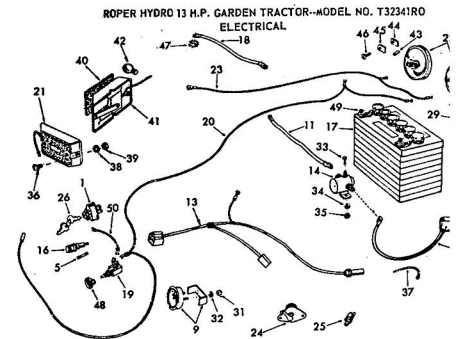


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	2210R	Starter Switch (Inc. Key No. 26)	27	5748M	Wing Nut
2	2228R	Electrical Wire (Ignition Switch "M" - to Engine Mop.)	28	1509P	Washer 5/16 x 3/4
3	302437	Engine - 13 H.P. Briggs & Stratton Type No. G145-01	29	5110H	Battery Clamp
4	2228R	Electrical Wire (Fuse to Light Switch)	30	5077H	Battery Bolt
5	2212R	Fuse	31	543P	Hex Nut No. 10-32
6	2233R	Electrical Wire (Ammeter to Engine)	32	1005P	Lockwasher No. 11
8	4444R	Alternator, Engine	33	2113R	Hex Bolt 1/2-20 x 5/8
9	5212R	Ammeter	34	1002P	Lockwasher 1/2
10	3830R	Electrical Wire (Ign. Sw. "B" to Ammeter)	35	503P	Hex Nut 1/2-20
11	2228R	Battery Cable (Solenoid to Starter)	37	2777R	Slotted Truss Hd. i
12	6094R	Wire Harness (Starter Circuit)	38	1404P	No. 10-24 x 3/8
14	103R	Solenoid	39	505P	External Tooth Lock
15	634A490	Cover & Cable (Battery "plus" to Solenoid "B")	40	3869R	Hex Machine Screw 10-24
16	2211R	Fuse Holder	41	3869R	Housing (Tail Light Bulb)
17	9855H	Battery	42	9197H	Hose (On Grill Heating Flap)
18	6499R	Ground Cable (Battery "minus" to Ground)	44	8784H1	Rubber Spacer
19	5753H	Light Switch (Inc. Key No. 48)	45	9768H	Mounting Clip
20	3773R	Lead Wire (Light Switch to Lights)	46	5110H	Phillips Pan Hd. T
21	3737R	Tail Light	47	1402P	Screw No. 10-24 x 1/2
22	7034H	Headlight	48	9267H	Edgwood Lock wash
23	2824R	Ground Wire Headlight	49	503P	Light Switch Knob
24	2249R	Safety Switch (For Mower Interlock)	50	503P	Hex Nut 1/2-20
25	3249R	Neutral Safety Switch	50	2228R	Electrical Wire (F. Light Switch)
26	7555H	Key			

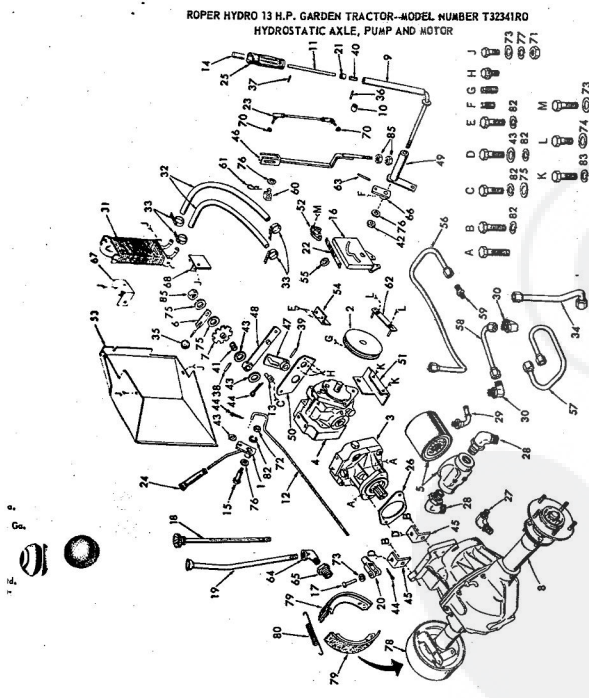 

1.6 x 16 Co.
16 Co.
1.6 x 16 Co.
1/8
1/8 Grade 5
1 x 1
8 x 3/4

ROPER HYDRO 13 H.P. GARDEN TRACTOR--MODEL NUMBER T32341R0
HYDROSTATIC AXLE, PUMP AND MOTOR


KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	63222Z	51	63222Z
2	63099R	52	63099R
3	63099R	53	63099R
4	5997H	54	5997H
5	5138R	55	5138R
6	5131R	56	5131R
7	5131R	57	5131R
8	5131R	58	5131R
9	5131R	59	5131R
10	5131R	60	5131R
11	5131R	61	5131R
12	5131R	62	5131R
13	5131R	63	5131R
14	5131R	64	5131R
15	5131R	65	5131R
16	5131R	66	5131R
17	5131R	67	5131R
18	5131R	68	5131R
19	5131R	69	5131R
20	5131R	70	5131R
21	5131R	71	5131R
22	5131R	72	5131R
23	5131R	73	5131R
24	5131R	74	5131R
25	5131R	75	5131R
26	5131R	76	5131R
27	5131R	77	5131R
28	5131R	78	5131R
29	5131R	79	5131R
30	5131R	80	5131R
31	5131R	81	5131R
32	5131R	82	5131R
33	5131R	83	5131R
34	5131R	84	5131R
35	5131R	85	5131R
36	5131R	86	5131R
37	5131R	87	5131R
38	5131R	88	5131R
39	5131R	89	5131R
40	5131R	90	5131R
41	5131R	91	5131R
42	5131R	92	5131R
43	5131R	93	5131R
44	5131R	94	5131R
45	5131R	95	5131R
46	5131R	96	5131R
47	5131R	97	5131R
48	5131R	98	5131R
49	5131R	99	5131R
50	5131R	100	5131R

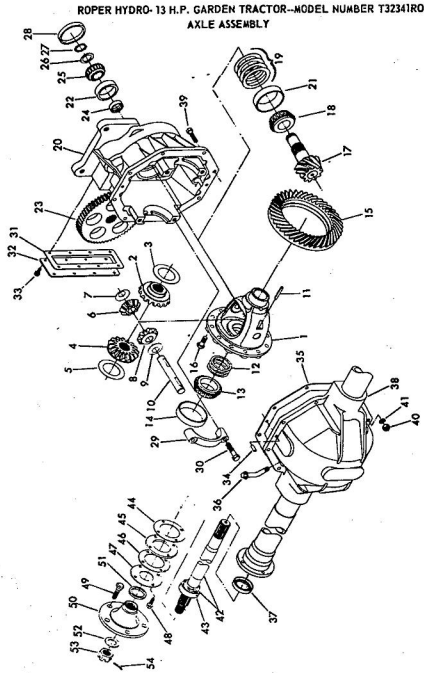 

ROPER HYDRO 13 H.P. GARDEN TRACTOR--MODEL NUMBER T32341RO
AXLE ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	7179R	Weld Plug
2	7174R	Weld Plug
3	7174R	Weld Plug
4	7174R	Weld Plug
5	7174R	Weld Plug
6	7166R	Diff. Gear (Set of Two)
7	7166R	Diff. Gear Thrust Washer
8	7166R	Diff. Pinion (Set of Two)
9	7166R	Diff. Pinion Mates (Set of Two)
10	7166R	Diff. Pinion Mates (Set of Two)
11	7166R	Diff. Pinion Mates (Set of Two)
12	7166R	Diff. Pinion Mates (Set of Two)
13	7166R	Diff. Pinion Mates (Set of Two)
14	7166R	Diff. Pinion Mates (Set of Two)
15	7166R	Diff. Pinion Mates (Set of Two)
16	7166R	Diff. Pinion Mates (Set of Two)
17	7166R	Diff. Pinion Mates (Set of Two)
18	7166R	Diff. Pinion Mates (Set of Two)
19	7166R	Diff. Pinion Mates (Set of Two)
20	29&30	7172R
21	7200R	Rolling Brg. Comp.
22	7200R	Rolling Brg. Comp.
23	7200R	Rolling Brg. Comp.
24	7200R	Rolling Brg. Comp.
25	7200R	Rolling Brg. Comp.
26	7200R	Rolling Brg. Comp.
27	7200R	Rolling Brg. Comp.
28	7200R	Rolling Brg. Comp.
29	7200R	Rolling Brg. Comp.
30	3399P	Rolling Brg. Comp.
31	7200R	Rolling Brg. Comp.
32	7200R	Rolling Brg. Comp.
33	7200R	Rolling Brg. Comp.
34	7200R	Rolling Brg. Comp.
35	7200R	Rolling Brg. Comp.
36	7200R	Rolling Brg. Comp.
37	7200R	Rolling Brg. Comp.
38	7200R	Rolling Brg. Comp.
39	7200R	Rolling Brg. Comp.
40	7200R	Rolling Brg. Comp.
41	7200R	Rolling Brg. Comp.
42	7200R	Rolling Brg. Comp.
43	7200R	Rolling Brg. Comp.
44	46 & 47	7180R
45	7180R	Rolling Brg. Comp.
46	7180R	Rolling Brg. Comp.
47	7180R	Rolling Brg. Comp.
48	7180R	Rolling Brg. Comp.
49	7180R	Rolling Brg. Comp.
50	7180R	Rolling Brg. Comp.
51	7180R	Rolling Brg. Comp.
52	7180R	Rolling Brg. Comp.
53	7180R	Rolling Brg. Comp.
54	7180R	Rolling Brg. Comp.

 ROPER HYDRO 13 H.P. GARDEN TRACTOR--MODEL NUMBER T32341RO
HYDROSTATIC MOTOR ASSEMBLY

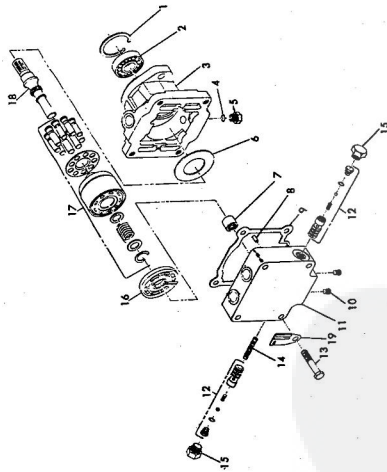


ROPER HYDRO 13 H.P. GARDEN TRACTOR--MODEL NUMBER T32341RO
HYDROSTATIC MOTOR ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	7200R	Resilient Ring
2	7200R	Ball Bearing
3	7200R	Ball Bearing
4	7200R	Ball Bearing
5	7200R	Ball Bearing
6	7200R	Ball Bearing
7	7200R	Ball Bearing
8	7200R	Ball Bearing
9	7200R	Ball Bearing
10	7200R	Ball Bearing
11	7200R	Ball Bearing
12	7200R	Ball Bearing
13	7200R	Ball Bearing
14	7200R	Ball Bearing
15	7200R	Ball Bearing
16	7200R	Ball Bearing
17	7200R	Ball Bearing
18	7200R	Ball Bearing
19	7200R	Ball Bearing
20	7200R	Ball Bearing
21	7200R	Ball Bearing
22	7200R	Ball Bearing
23	7200R	Ball Bearing
24	7200R	Ball Bearing
25	7200R	Ball Bearing
26	7200R	Ball Bearing
27	7200R	Ball Bearing
28	7200R	Ball Bearing
29	7200R	Ball Bearing
30	7200R	Ball Bearing
31	7200R	Ball Bearing
32	7200R	Ball Bearing
33	7200R	Ball Bearing
34	7200R	Ball Bearing
35	7200R	Ball Bearing
36	7200R	Ball Bearing
37	7200R	Ball Bearing
38	7200R	Ball Bearing
39	7200R	Ball Bearing
40	7200R	Ball Bearing
41	7200R	Ball Bearing
42	7200R	Ball Bearing
43	7200R	Ball Bearing
44	7200R	Ball Bearing
45	7200R	Ball Bearing
46	7200R	Ball Bearing
47	7200R	Ball Bearing
48	7200R	Ball Bearing
49	7200R	Ball Bearing
50	7200R	Ball Bearing
51	7200R	Ball Bearing
52	7200R	Ball Bearing
53	7200R	Ball Bearing
54	7200R	Ball Bearing

IRO

 
ROPER HYDRO 13 H.P. GARDEN TRACTOR—MODEL NUMBER T32341R0
HYDROSTATIC PUMP ASSEMBLY

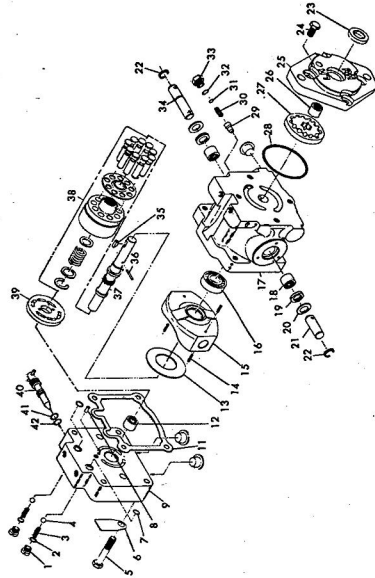

ROPER HYDRO 13 H.P. GARDEN TRACTOR—MODEL NUMBER T32341R0
HYDROSTATIC PUMP ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	7248R	Check Valve Kit
2	7248R	Hex Head Cap Screw
3	5002P	U ^o Ring
4	7248R	Headless Sh. Pin
5	7248R	Gasket
6	7248R	Castor
7	7248R	Thrust Plate
8	7248R	Sealed Spring Pin
9	7248R	Ball Bearing
10	7248R	Neoprene Bearing
11	7248R	Washer
12	7248R	Washer
13	7248R	Washer
14	7248R	Washer
15	7248R	Washer
16	7248R	Washer
17	7248R	Washer
18	7248R	Washer
19	7248R	Washer
20	7248R	Washer
21	7248R	Washer
22	7248R	Washer
23	7248R	Washer
24	7248R	Washer
25	7248R	Washer
26	7248R	Washer
27	7248R	Washer
28	7248R	Washer
29	7248R	Washer
30	7248R	Washer
31	7248R	Washer
32	7248R	Washer
33	7248R	Washer
34	7248R	Washer
35	7248R	Washer
36	7248R	Washer
37	7248R	Washer
38	7248R	Washer
39	7248R	Washer
40	7248R	Washer
41	7248R	Washer
42	7248R	Washer
43	7248R	Washer
44	7248R	Washer
45	7248R	Washer
46	7248R	Washer
47	7248R	Washer
48	7248R	Washer
49	7248R	Washer
50	7248R	Washer
51	7248R	Washer
52	7248R	Washer
53	7248R	Washer
54	7248R	Washer
55	7248R	Washer
56	7248R	Washer
57	7248R	Washer
58	7248R	Washer
59	7248R	Washer
60	7248R	Washer
61	7248R	Washer
62	7248R	Washer
63	7248R	Washer
64	7248R	Washer
65	7248R	Washer
66	7248R	Washer
67	7248R	Washer
68	7248R	Washer
69	7248R	Washer
70	7248R	Washer
71	7248R	Washer
72	7248R	Washer
73	7248R	Washer
74	7248R	Washer
75	7248R	Washer
76	7248R	Washer
77	7248R	Washer
78	7248R	Washer
79	7248R	Washer
80	7248R	Washer
81	7248R	Washer
82	7248R	Washer
83	7248R	Washer
84	7248R	Washer
85	7248R	Washer
86	7248R	Washer
87	7248R	Washer
88	7248R	Washer
89	7248R	Washer
90	7248R	Washer
91	7248R	Washer
92	7248R	Washer
93	7248R	Washer
94	7248R	Washer
95	7248R	Washer
96	7248R	Washer
97	7248R	Washer
98	7248R	Washer
99	7248R	Washer
100	7248R	Washer

 repair parts ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
STEERING AND FINAL DRIVE

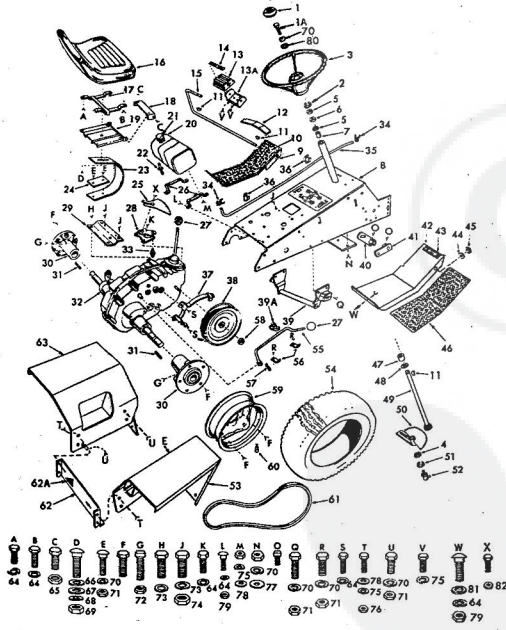


ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
STEERING AND FINAL DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	6961R	Steering Wheel Cap	51	5000P	E-Ring
1A	3023P	Hex Bolt 3/8-16x1	52	6842A	Grease Fitting
2	5002P	O-Ring	53	634A593	Fender and Inx
3	3644R	Steering Wheel	54	3638R	Rear Tire Tube
4	1532P	Washer #9/64x1 1/2x16 Gs.	55	6477H	Range Shift Ro
5	30027H	Cap	56	6442H	Shift Rod Brck
6	5949H	Rubber Bushing	57	2511P	Cotter Pin 3/16
7	6468H	Bearing	58	9204H	Locknut 5/20
8	634A526	Chassis Assy w/Bearings	59	7220H	Rear Wheel
9	634A509	Foot Rest w/Bolts L.H.	60	795R	Tire Valve
10	3641R	Foot Rest Pad L.H.	61	2295R	V-Belt (Ground
11	9858M1	Wodruff Key 3/16x5/8	62	3625R	Bracket-Tail Li
12	9008H	Spring	63	3239R	Safety Str. Strc
13	1062R	Foot Pedal	64	634A594	Fender and Inx
13A	8765H	Foot Pedal Bracket	65	1500P	Lockwasher 5/16
14	1244H	Foot Pedal Plate	66	5394H	Locknut 3/8-16
15	8761H	Foot Pedal Shaft	67	1578P	Washer 1 1/2x1/2
16	4988R	Seat	68	1560P	Washer 1 1/2x1/2
17	634A532	Seat Bracket Weldment	69	1000P	Lockwasher 3/8
18	2663R	Seat Pivot Bracket	70	522P	Hex Nut 5/16
19	634A533	Seat Plate Weldment	71	1004P	Lockwasher 3/8
20	2693R	Fuel Tank	72	201P	Hex Nut 3/8-16
21	7292R	Fuel Tank Cap and Gouge	73	508P	Hex Nut 3/8
22	815R	Fuel Line Fitting	74	1001P	Lockwasher 7/16
23	5404R	Seat Spring	75	509P	Hex Nut 7/16-1
24	814H	Seat Spring Reinforcement	76	1002P	Lockwasher 3/4
25	2650R	Neutral Safety Am	77	503P	Hex Nut 5/20
26	2650R	Bracket-Fuel Tank	78	1313P	Washer 1 3/32x1 1/2
27	6364H	Control Knob	79	1504P	Washer 9/32x5/8
28	634A731	Neutral Safety Support Assy	80	924P	Hex Nut 5/16-11
29	6459H	Transmission Bracket	81	1559P	Washer 7/16x1
30	8778H	Wheel Hub-Rear	82	1532P	Washer 1 1/32x1 1/2
31	8327H	Sq. Key 1/2x3	83	257P	Hex Jam Lockin
32	634A38	Transmission (Transaxle)	84	3000P	Hex Bolt 5/16-16
33	3249R	Less Brake Drum	85	3010P	Hex Bolt 5/16-16
34	7360R	Neutral Safety Switch	86	3022P	Hex Bolt 3/8-11
35	3664R	Fuel Line	87	28P	Carriage Bolt 3/8
36	6748R	Clip-Fuel Line	88	28P	Carriage Bolt 3/8
37	634A22A	Belt Guide	89	1304H	Hub Bolt
38	6461H2	Transmission (Transaxle)	90	4324P	So. Hd. Sat Soc
39	634A362	Hanger-Belt	91	3034P	Hex Bolt 7/16-16
39A	2521R	Insulated Clip	92	3034P	Hex Bolt 7/16-16
40	634A838	Brake Arm Assy	93	3010P	Hex Bolt 5/16-16
41	634A31A	Steering Arm Assy	94	3010P	Hex Bolt 5/16-16
42	634A570	Foot Rest w/Bolts R.H.	95	3010P	Hex Bolt 5/16-16
43	2867R	Diect (Attach. Clutch)	96	4501P	So. Hd. Sat Soc
44	1522P	Washer 21/32x7/8x16 Gs.	97	3022P	Hex Bolt 3/8-16
45	3001P	E-Ring	98	3022P	Hex Bolt 3/8-16
46	3642R	Foot Rest Pad R.H.	99	3003P	Hex Bolt 5/16-16
47	4766H	Bearing	100	3021P	Hex Bolt 3/8-16
48	1532P	Washer #7/64x1 1/2x16 Gs.	101	3003P	Hex Bolt 5/16-16
49	634A26	Steering Shaft & Pinion	102	3011P	Hex Bolt 5/16-16
50	634A95	Steering Gear Sector & Am			

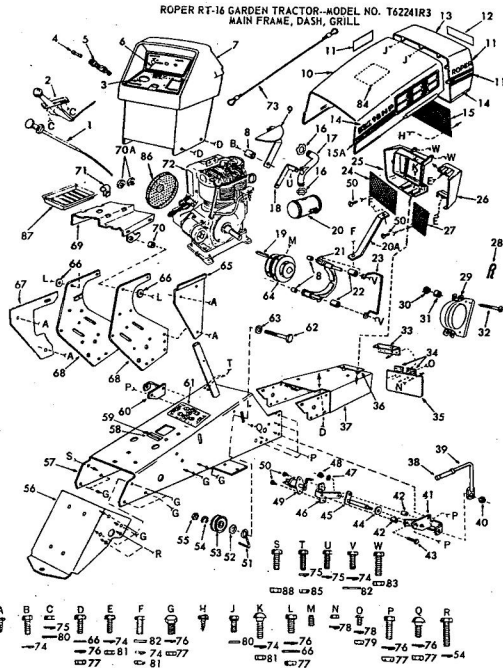 

ROPER RT-16 GARDEN TRACTOR-MODEL NO. T62241R3 MAIN FRAME, DASH, GRILL					
KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	9764H	Choke Control	58	-----	Model Number Plate
2	4653R	Throttle Remote Control	59	9251H	Drive Rivet for Model F
3	6322R	Decal/Dash Lower	60	634435S	Hanger Weldment-L.H.
4	2212R	Fuse	61	6963R	Shift Pattern Plate
5	2211R	Fuse Holder	62	3115P	Hex Bolt 7/16 x 1 1/2
6	6251R	Decal/Dash Upper	63	1518P	Washer 15/32 x 1 1/16 x 1
7	6405R	Dashboard	64	6344404	Engine Pulley w/Set Sc (Int. Key Letter A)
8	2550R	Bushing	65	1360R	Cover-R.H.
9	634440B	Heat Shield Weldment	66	1513P	Washer 13/32 x 13/16 x 1
10	6344597	Hood Weldment	67	3657R	Cover-L.H.
11	6956R	Decal-Grill	68	6920R	Tank and Battery Suppo Bracket
11A	7001R	Hood & Grill Strip Short	69	6344575	Battery Support Weldment
12	6959R	Scotchall-Upper	70	2689R	W/Bearings
13	3632R	Grill-Upper	71	3929H	Bearing
14	1062R	Decal-Lower	72A	3929H	Lock Nut
15	3631R	Grill Screen-Upper	71	326437	Choke Control Clip
15A	7000R	Hood & Grill Strip-Med.	70A	7000R	Engine, 16 H.P., Briggs Stratton Type No. 01644
16	9360H	Lock Nut	72	1002P	Grill Cable
17	6488R	Exhaust Pipe	74	1002P	Lockwasher 1/8
18	4096R	Muffler Support	76	1004P	Lockwasher 3/8
19	9396E	Sp. Key 1/2 x 2	77	501P	Lockwasher No. 10
20	4443R	Grill Brace	79	945P	Hex Nut No. 10-24
21	6344394	Belt Guide Assembly	80	1506P	Hex Nut 5/16-18 UN C
22	8704H1	Spacer	81	504P	Washer 11/32 x 1 1/8 x 1/4
23	648R	Belt Retainer	83	1605H	Lock Nut 1/2-20 UNC
24	2674R	Grill Screen-L.H.	84	4821R	Maintenance Decal
25	2677R	Grill-Lower	85	503P	Hex Nut 1/2-20 UNC
26	2678R	Grill-Side	86	5263R	Stationary Screen
27	2673R	Grill Screen-R.H.	87	2686R	Battery Tray
28	4939M	Retainer Spring	88	5394H	Locknut
29	6344659	Belt Guard Weldment	89	5394H	Hex Washer Hd. Thrd. Cu
30	347H	Hoglock Nut	A	5351P	Screw 1/2-20 UNC x 1/2
31	8228H	Split Spacer	B	3014P	Hex Bolt 5/16-18 x 1 1/4
32	3154P	Sloated Filter/Hd. Machine Screw 1/2-20 x 2 1/4	C	503P	Hex Nut 1/2-20
33	6423H	Front Channel Cover Support	D	3022P	Hex Bolt 3/8-16 x 1 1/2
34	6485H	Hinge	E	3010P	Hex Bolt 5/16-18 x 1
35	634428	Front Channel Cover and Weld Bolts	F	3011P	Hex Bolt 5/16-18 x 1
36	6344409	Grill Spacer	G	3023P	Hex Bolt 3/8-16 x 1
37	6344389	Engine Assembly	H	5564P	Pen Hd. Phillips Thd. Cutting Screw No. 10-24 x 1/2
38	4379H	Handle Grip	J	5583P	Hex Hd. Self Tap Screw 1 Tooth Lockwasher 10-24 x 3/8
39	6344493	Blade Clutch Lever Assembly	K	4P	Carriage Bolt 5/16-18 UN
40	7810H	Griceps Centerlock Nut	L	3023P	Hex Bolt 3/8-16 x 1
41	6344494	Hanger Weldment-R.H., Front	M	4514P	Hex Socket Headless Set Screw C.P. 5/16-18 x 5/8
42	1607E	Dusting	N	505P	Hex Nut No. 10-24
43	3013P	Hex Bolt 5/16-18 UN C x 1 1/2	O	3122P	Sloated Truss Hd. Mach. Screw No. 10-24 x 3/8
44	5999H	Spring Washer	P	3127P	Hex Bolt 3/8-16 x 1 1/2 H.T. Carriage Bolt 5/16-18 UN C
45	6344491	Belt Tightener Arm and Idler Shaft	Q	28P	1 H.T.
46	6344492	Belt Tightener Assembly	R	3035P	Hex Bolt 7/16-14 x 1 1/2
47	1003P	5/16 Lockwasher	S	3031P	Hex Bolt 3/8-16 UN C x 1/2
48	504P	Hex Bolt 5/16-18 UN C Hex Nut	T	3113P	Hex Bolt 1/2-20 UN C x 5/8
49	2246R	Safety Switch	U	3015P	Hex Bolt 1/2-20 UN C x 5/8
50	5501P	Pen Head Phillips Threaded Cutting Screw No. 10-24 UN C x 3/8	V	3015P	Hex Bolt 5/16-18 UN C x 2
51	6479H1	Front Choke Finger	W	7247P	Hex Bolt 1/2-20 UN C x 1 1/2 H
52	1502P	Washer, 409 H.D., 1-1/8 x 11 Ga.	---	6897R	Owners Manual
53	6639H	Flor Idler			
54	1001P	Lockwasher 7/16			
55	500P	Hex Nut 7/16-14			
56	6344387	Drawbar Weldment			
57	6344526	Chassis Assembly W/Bearings			

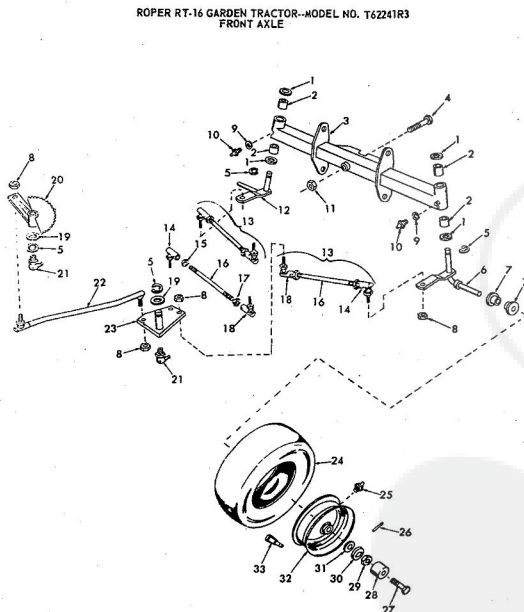 

ROPER RT-16 GARDEN TRACTOR-MODEL NO. T62241R3 FRONT AXLE

KEY NO.	PART NO.	DESCRIPTION
1	1528P	Washer 13/16 x 1 1/2 x 14 Ga.
2	1309H	Bearing
3	634A521	Front Axle w/Bearings (Includes Key No. 2)
4	3294P	Hex Bolt 5-8-11 x 5 Grade 5
5	500P	E-Ring
6	634A277	Spindle Complete R.H.
7	3040H	Flanged Bearing
8	7810H	Griceps Locknut 3-8-24
9	1503P	Washer 9/32 x 1 1/4 Ga.
10	6563H	Grease Fitting
11	4764H	Hoglock Nut 5 8 x 11
12	634A278	Spindle Complete L.H.
13	5995R	Tie Rod and Joints (Complete)
14	6940R	Tie Rod Joint (R.H. Thread Cod. Pin)
15	558P	Hex Jam Nut 1/2-20 (R.H. Thread)
16	634A711	Tie Rod and Nuts
17	559P	Hex Jam Nut 1/2-20 (L.H. Thread)
18	6939R	Tie Rod Joint (L.H. Thread Yellow Dichromate)
19	1552P	Washer 49 64 x 1 1/4 x 16 Ga.
20	634A495	Steering Gear Sector and Arm
21	6842M	Grease Fitting
22	6448R	Drag Link and Joints
23	634A498	Steering Bell Crank Weldment
24	3838R	Front Tire-Tubeless
25	8056M	Grease Fitting 1/4" -28 Taper Thrd.
26	8798H	Roll Pin 5/32 x 1
27	3008P	Hex Bolt 5/16 - 18 x 1/2
28	8763H	Dust Cap-Cover
29	4831H	Elastic Nut 3/4 - 16
30	8785H	Wear Washer
31	1603P	Washer 25/32 x 1 1/2 x 16 Ga.
32	2168R	Front Wheel and Bearings
33	795R	Tire Valve

1/2" Plate
for Model Plate
1/2" x 1/4" Front
Plate
1/2" x 1/4" x 25
2 x 11/16 x 16 Co.
1/2" x 1/4" Screws
(see A)

1/2" x 13/16 x 16 Co.
1/2" x 1/4" Screws
Heavy Support
at Weldment

Clip
P. Briggs and
No. 0124-01

 
 
1/2" x 13/16 x 16 Co.
1/2" x 1/4" Screws
UNC

1/2" x 13/16 x 16 Co.
1/2" x 1/4" Screws
UNC

1/2" x 13/16 x 16 Co.
1/2" x 1/4" Screws
UNC

1/2" x 13/16 x 16 Co.
1/2" x 1/4" Screws
UNC

**ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
BRAKE AND CLUTCH**

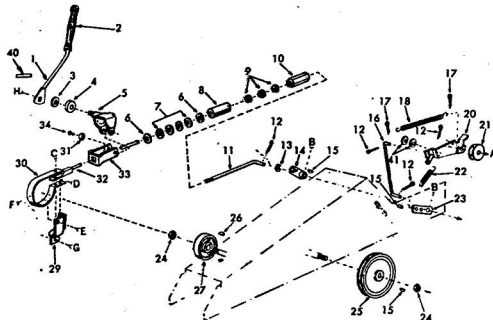

**ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
BRAKE AND CLUTCH**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	626A294	Parking Lock Handle Assembly	26	2228M1	Woodruff Key 3/16
2	4279H	Handle Grip	27	764B11	Brake Drum
3	3999H	Spring Washer	29	634A168	Brake Bracket Assy
4	2221R	Parking Brake Spacer	30	634A167	Brake Band and Lin
5	634A489	Lock Bracket Assembly	31	9071H	Hook Lock Nut 1/2-28 L
6	1527P	Spring Washer	32	626A265	Brake Rod Assembly
7	2263R	Washer 13/22 x 13/16 x 11 Co.	33	2197R	Parking Brake Yoke
8	2221R	Bushing	34	3256P	Hex Bolt 1/2 x 5/8-21 Tr treated
9	501P	Hex Nut 3/8-16 UNC	35	1002P	Lockwasher 5/16
10	6417H	Turnbuckle	36	1688H	Locknut 5/16-18
11	2202R	Brake Rod-Front	37	1002P	Lockwasher 1/2
12	2505P	Cotter Pin 1/8 x 3/4	38	503P	Hex Nut 1/2-20
13	1513P	Washer 13/22 x 13/16 x 16 Co.	39	1004P	Lockwasher 3/8
14	634A488	Brake Arm Assembly	40	175H	Roll Pin (In Chassis Parking Brake Stop)
15	983M1	Woodruff Key 3/16 x 5/8	41	1545P	Washer 17/22 x 1 x 1
16	6406H	Clutch Rod	A	3022P	Hex Bolt 3/8-24 x 1
17	2514P	Cotter Pin 1/8 x 1	B	4501P	Sa. Hd. Set Screw C
18	6486H	Spring	C	3159P	Hex Bolt 5/16-18 x 1/2
19	546P	Hex Jam Lock Nut 3/8-24 UNF	D	11P	Sa. Neck Carriage E
20	634A538	Idler Bracket Assembly	E	3164P	Flat Hd. Machine Sc
21	634A86	Idler Bolt and Nut (Inc. Key No. 19 and A)	F	2004P	3/8-16 x 3/8
22	4001H	Steering Arm Assembly	G	3022P	Rivet, Brass Tubule
23	626A31A	Lock Nut 1/2-20 UNF	H	7810H	Hex Bolt 3/8-16 x 7/8 Greco Centerlock N
24	5024H	Spring			
25	6461H2	Transaxle (Transmission) Pulley			


**ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
ELECTRICAL**



**ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
ELECTRICAL**

KEY NO.	PART NO.	DESCRIPTION
1	634A490	Cable and Cover (red)
2	503P	Hex Nut 1/2-20
3	985SH	Battery
4	3249R	Switch-Safety Start
5	3749M	Wing Nut
6	1509P	Washer 5/16 x 1/2 x 16 Co.
7	5110H	Battery Clamp
8	5072H	Battery Bolt
9	2210R	Starter Switch (Inc. Key No. 10)
10	7552H	Key
11	2212R	Fuse
12	2223R	Lead Wire ("H" Post on Switch to Short Terminal on Engine)
13	2211R	Fuse Holder
14	1002P	Lockwasher 1/2
15	3115P	Hex Bolt 1/2-20 x 5/8
16	103R	Solenoid
17	543P	Hex Nut No. 10-32
18	1004P	Lockwasher No. 10
19	5212R	Ammeter
20	2867R	Bulb (Tail Light) No. 1895
21	2868R	Lens (Tail Light)
22	2869R	Housing (Tail Light)
23	3757R	Tail Light
24	3073P	Slotted Truss Hd. Mech. Screw No. 10-24 x 1/2
25	1604P	Lockwasher No. 10 External
26	505P	Hex Nut No. 10-24
27	9197H	Hose (On Grill-Headlight Locat- ing Pins)
28	9215H	Knob, For Light Switch
29	5738H	Light Switch (Includes Knob No. 28)
30	3773R	Lead Wire (Headlights to Switch) (Pink)
31	4171R	Insulated Clip
32	2777R	Tie
33	2894R	Ground Wire (Headlight to Ground) (Black)
34	7834H	Headlight
35	6501P	Phillips Pin Hd. Thd. Cutting Screw No. 10-24 x 3/8 Type 1
36	2521R	Insulated Clip
37	6768H	Mounting Clip
38	8784H1	Rubber Spacer
39	1402P	External Lockwasher
40	6409R	Ground Cable (Battery "..." to Ground)

 
ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
ELECTRICAL WIRING DIAGRAM

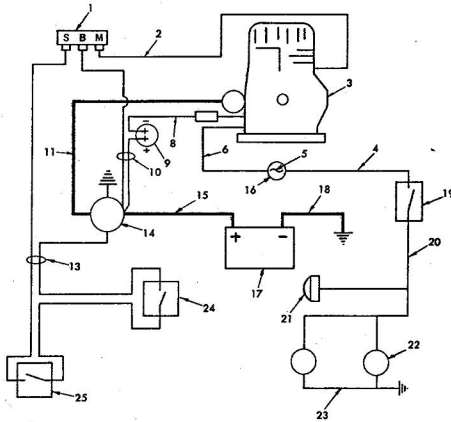

ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
ELECTRICAL WIRING DIAGRAM

KEY NO.	PART NO.	DESCRIPTION
1	2210R	Starter Switch
2	2223R	Electrical Wire (Ignition Switch "M" - to Engine Neg.)
3	326437	Engine - 16 H.P. - Briggs & Stratton Type No. 0164-01
4	2228R	Electrical Wire (Fuse to Light Switch)
5	2212R	Fuse (in Fuse Holder)
6	2233R	Electrical Wire (Fuse Lights to Alternator, Engine)
8	4444R	Electric Wire
9	5212R	Ammeter
10	3858R	Electrical Wire (Ign. Sw. "B" to Ammeter)
11	2225R	Battery Cable (Solenoid to Starter)
13	3840R	Wire Harness (Starter Circuit)
14	103R	Solenoid
15	6344-000	Cover & Cable (Battery "plus" to Solenoid "B")
16	2211R	Fuse Holder
17	9889H	Battery
18	6409R	Ground Cable (Battery "-" to Ground)
19	5739H	Light Switch
20	3732R	Lead Wire (Light Switch to Lights)
21	3757R	Taillight
22	7034H	Headlight
23	2974R	Ground Wire Headlight
24	2249R	Safety Switch (For Mower Interlock)
25	3249R	Neutral Safety Switch

 
ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
TRANSAXLE

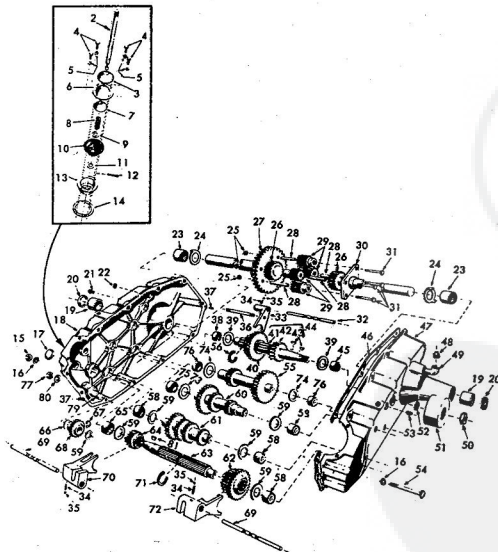

ROPER RT-16 GARDEN TRACTOR—MODEL NO. T62241R3
TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1.	633A3B	Transaxle Assembly less	38.	8118M	Needle Bearing
2.	6213H1	Brake Drum	39.	6264H	Thrust Bearing Race
3.	4869H1	Gear Shift Lever straight	40.	635A14	High-Low Range Gears on Hub
4.	3010P	Hex Bolt 5/16-18x2	41.	6221H	3rd Reduction Gear Shaft
5.	1003P	Lockwasher 5/16	42.	8639H	4th Reduction Pinion
6.	6255H1	Gear Shift Ball Cover	43.	2228M	Woodruff Key 3/16x1/4 H.T
7.	6259H	Shift Lever Guide Ball	44.	635A32	3rd Reduction Shaft and Ge
8.	4924H	Spring	45.	8119M	Needle Bearing
9.	1544P	Washer 15/32x5/8x4x1/8 Gs.	46.	6225H	Gasket-Gearcase
10.	6272H	Shift Mechanism Seal	47.	6225H	Gear Case and Bearings-L
11.	1120SP	Washer 9/16x13/16x11 Gs.	48.	4002P	Pipe Plug 1/2-14 N.P.T.
12.	2305P	Cotter 1/8x2	49.	4003P	90° Street Elbow 1/2-14 N.1
13.	633A19	Gear Shift Gate and Reinforce-ment	50.	9234H	Lock Nut
14.	6274H	Gasket-Shift Ball Cover	51.	7648H1	Brake Drum
15.	504P	Hex Nut 5/16-18	52.	6271H	Oil Seal
16.	1007P	Lockwasher 5/16 Extra Heavy	53.	4001P	Pipe Plug 1/8 N.P.T.
17.	6270H	Oil Seal	54.	3087P	Hex Bolt 5/16-18x1-1/2 Grade 5 H.T.
18.	633A20A	Gear Case, Reverse Idler Shaft and Bearings R.H.	55.	633A33	4th Reduction Shaft and Ge
19.	9039R	Sintered Iron Bearing	56.	6276H	Snap Ring
20.	7392R	Oil Seal	57.	4895H	Needle Bearing
21.	5853H	Pressure Relief Valve	58.	1370H	Thrust Bearing Race
22.	6209H	Oil Seal	59.	633A31	2nd Reduction Shaft and Ge
23.	3039R	Sintered Iron Bearing	60.	633A20	Speed Change Gears and Sh
24.	6256H	Axle Thrust Washer	61.	633A11	Intermediate and High Speed Pinions
25.	7810H	Centerlock Gripax Nut 3.8-24	62.	6218H	Input Shaft
26.	633A34	Axle Shaft and Gear	63.	6218H	Low Speed Pinion
27.	8642H	Final Drive Gear	64.	6331H	Reverse Idler Thrust Washer
28.	6259H1	Bushing-Differential Pinion	65.	4894H	Needle Bearing
29.	8657H	Differential Pinion	66.	7392H	E-Ring
30.	6263H1	Differential Carrier	67.	1152R	Reverse Idler Gear
31.	3056P	Hex Bolt 5/8-24x3 1/2 Thread Length	68.	6216H	Shift Fork Shaft
32.	6217H	High-Low Range Shift Fork Shaft	69.	6216H	Shift Fork-H
33.	6260H	Shift Fork, High-Low Range	70.	4926H	Snap Ring-Crescent Type
34.	6272H	Spring-Shift Fork Detent	71.	4217R	Shift Fork-L,H
35.	7392M	Steel Ball	72.	7392H	Thrust Bearing Race
36.	6215H	High-Low Range Shift Shaft	73.	7392H	Thrust Bearing Race
37.	6277H	Dowel Pin	74.	8117M	Needle Bearing
			75.	5417P	Hex Jam Nut 7/16-20
			76.	7384H	Reverse Idler Shaft
			77.	1162R	Sawing Washer
			78.	9858M1	Woodruff Key

 
repair parts
RT-16T TRACTOR-MODEL NO. T63241R5
MAIN FRAME, DASHBOARD AND GRILL

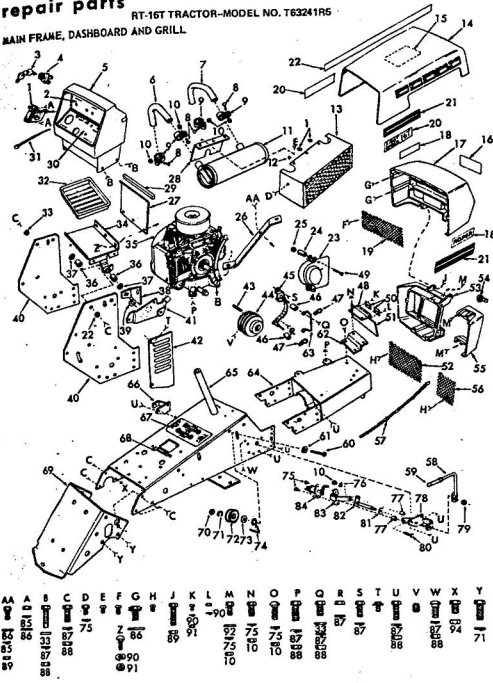

RT-16T TRACTOR-MODEL NO. T63241R5
MAIN FRAME, DASH, GRILL



KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	4622R	Remote Control-Throttle	62	2655R	Grill Spacer
2	6219R	Decal-Upper Dash	63	9011H	Belt Retainer
3	7525H	Key Set	64	634A531	Engine Mount Asy
4	2653R	Ignition Switch (Includes Key No. 3)	65	634A740	Chassis Asy's
5	6405R	Dashboard	66	634A355	Hanger Weldment
6	2697R	Exhaust Manifold-Rear	67	6965R	Shift Pattern De
7	2697R	Exhaust Manifold-Front	68	9211H	Drive Rivet
8	3012P	Hex Bolt 5/16-18 x 1 1/2	69	634A101	Drawer & Weld
9	382R	Clamp 1-3/8 (Includes Hex Nuts & 10)	70	500P	Lockwasher 7/16
10	504P	Washer .469 I.D.	71	1001P	Lockwasher 5/16
11	2695R	Muffler	72	6479H1	Belt Guide Flng
12	5316R	Clamp	74	5201P	Pin Hd. Phillip
13	634A572	Muffler Guard Ass'y.	75	1520P	Screw No. 10-24
14	634A551	Hood Assembly	76	1003P	Lockwasher 5/16
15	48216	Decal	77	1689E	Bushing
16	6955R	Decal-Grill Front (Roper)	78	634A494	Hanger Weldment
17	3532R	Grill-Ripper	79	7810H	Grpnce Centerloc
18	6956R	Decal (Roper)	80	3013P	Spring Washr
19	3531R	Grill Screen-Upper	81	5999H	Hex Bolt 5/16-11
20	6964R	Decal - 8 Speed 16T	82	634A491	Belt Tightener #
21	7001R	Decal-Hood & Grill Strip	83	634A492	Switch Bracket #
22	6957R	Decal-Hood & Grill Strip	85	1002P	Lockwasher 1/2
23	634A659	Belt Guide Weldment	86	1505H	Washer 9/32 x 5/16
24	8230H	Split Spacer	87	1004P	Lockwasher 3/8
25	347H	Hublock Nut 1/2-20	88	501P	Hex Nut 3/8-16
26	4394R	Grill Broce	89	1605H	Locknut 1/2-20
27	4815R	Battery Heat Shield	90	1006P	Lockwasher No.
28	3494R	Heat Shield-Carburetor	91	505P	Hex Washr. Screw
29	5348R	Sealing Strip	92	1537P	Washer 11/32 x 1
30	6322R	Lower Dash-Decal	93	5394H	Locknut 3/8-16
31	2754R	Choke Control	A	503P	Hex Bolt 1/2-20
32	2586R	Battery Tray	B	3027P	Hex Bolt 3/8-16
33	1513P	Washer 13/32 x 13/16 x 16 Ga.	C	3025P	Hex Bolt 5/8-16
34	634A523	Battery Support & Idler Support w/Bearings	D	3008P	Hex Bolt 5/16-11
35	BF-MS 2851D	Engine 16 H.P. (Twin Cyl.)	E	3235P	Phillips Pan Hd. Screw 1/2-20 x 1/2
36	2689R	Washer 17/32 x 1 x 16 Ga.	F	5544P	Phillips Pan Hd. Cutting Screw No. 2
37	1545P	Muffler Guard Bracket	G	5583P	Hex. Ind. Self To w/Sems. Ext. Tor washer 1/2-20 x 5/16 Phillips Pan Hd.
38	3507R	Washer 7/32 x 5/16 x 18 Ga.	H	5001P	Ring Screw No. 1
39	1504P	Bracket-Battery Support	I	3327P	Hex Bolt 5/16-11
40	2670R	Idler Bracket Weldment	J	3122P	Slotted Truss Hd Screw No. 10-24
41	634A518	Cover R.H.	K	505P	Hex Washr. Screw
42	2655R	Sq. Key No. 2	L	3010P	Hex Bolt 5/16-11
43	9396E	Engine Pulley w/Set Screws	M	3012P	Hex Bolt 5/16-11
44	634A104	Belt Guide Weldment	N	17P	Carriage Bolt 5/16 x 1 1/2
45	634A527	Spacer	O	3025P	Hex Bolt 3/8-16
46	8704H1	Retainer Spring	P	3022P	Hex Bolt 3/8-16
47	4939H	Front Channel Cover Support	Q	3022P	Hex Bolt 3/8-16
48	2752R	Slotted Filler Hd. Mech.	R	501P	Hex Nut 3/8-16
49	3154P	Hinge	S	3537P	Hex Washer Thr 3/20 x 5/16
50	6485H	Front Channel Cover & Weld	T	5527P	Hex Nut 3/8-16
51	634A28	Grill Screen-L.H.	U	3137P	Hex Bolt 3/8-16
52	2674R	Grill-Lower	V	4514P	Hex Socket Hole 5/16-18 x 1 1/2
53	4171R	Insulated Clip	W	28P	Carriage Bolt 3/8 x 1 1/2
54	2678R	Grill Side	X	3231P	Hex Bolt 5/8-16
55	2673R	Grill Screen-R.H.	Y	3035P	Hex Bolt 7/16-11
56	5625R	Grill Cable	AA	3003P	Carriage Bolt 1/2 x 1 1/2
57	634A493	Blade Clutch Handle Ass'y.			
58	4394H	Handle Grip			
59	3262P	Hex Bolt 7/16-14 x 2 1/2			
60	1518P	Washer 15/32 x 11/16 x 16 Ga.			
61					

 RT-16T TRACTOR-MODEL NO. T63241R5
FRONT AXLE

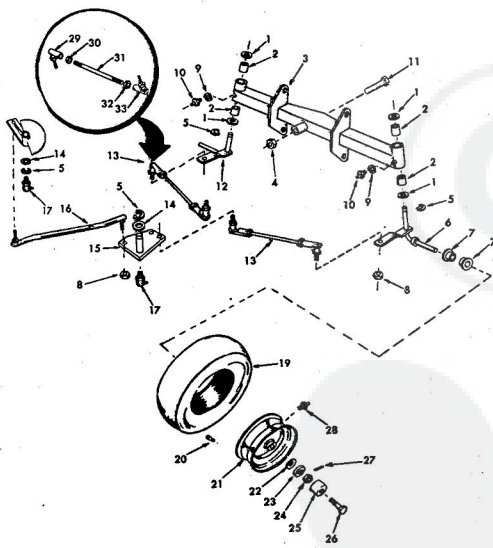


RT-16T TRACTOR-MODEL NO. T63241R5
FRONT AXLE

KEY NO.	PART NO.	DESCRIPTION
1	1528P	Washer 13/16 x 1 1/2 x 14 Ga.
2	1309H	Bearing
3	634A521	Front Axle with Bearings (Inc. Key No. 2)
4	4764P	Huglock Nut 5/8-11 UNC
5	500P	E-Ring
6	634A277	Spindle Complete-R.H.
7	9040P	Flanged Bearing
8	7810H	Grpnce Centerlock Nut, 3/8-24
9	1505P	Washer 9/32 x 5/16 x 14 Ga.
10	6653H	Grease Fitting
11	5276P	Hex Bolt 5/8-11 x 5 Grade 5
12	634A278	Spindle Complete-L.H.
13	5999R	Tie Rod and Joints
14	1539P	Washer 49/64 x 1 1/4 x 16 Ga.
15	634A598	Steering Bell Crank Weldment
16	7871R	Drop Link and Joints
17	6942H	Grease Fitting
18	634A95	Steering Gear Sector and Arm
19	3938R	Front Tire-Tubeless
20	795R	Tire Valve
21	2168R	Front Wheel
22	1522P	Washer 25/32 x 1 1/2 x 16 Ga.
23	8785H	Wear Washer
24	4831H	Elastic Nut 3/16 UNF
25	8763H	Dust Cap-Outer
26	3008P	Hex Bolt 5/16-18 x 1/2
27	8798H	Roll Pin 5/32 x 1
28	6655M	Grease Fitting 1/2-28 Taper Thread
29	6940R	Tie Rod Joint (R.H. Thread Cad Press)
30	558P	Hex Jam Nut 1/2 - 20 (R.H. Thread)
31	634A711	Tie Rod end Nut
32	869P	Hex Jam Nut 1/2 - 20 (L.H. Thread)
33	6928R	Tie Rod Joint (L.H. Thread Yellow Dichromate)



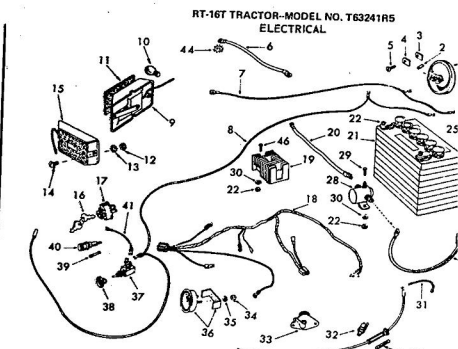 
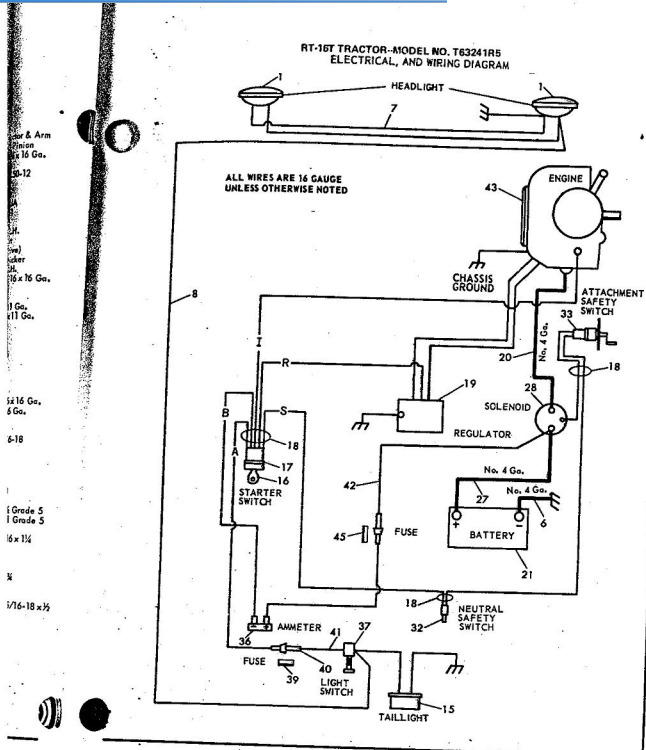 



KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	7084H	Headlight	23	3748M	Wing Nut 1/2-20
2	9197H	Hose (On Grill-Headlight Lancing Pins)	24	1509P	Washer 5/16x5/8
3	3704H1	Rubber Spacer	25	5110H	Battery Clamp
4	8748H	Mounting Clip	26	2685R	Battery Bolt
5	5512P	Phillips Pan Hd. Thread Cutting Screw No. 10-24 UNC x3/8 Type T	27	634A490	Battery Cable & (Positive) to Solenoid
6	2753R	Battery Cable (Neg. to Ground)	28	103R	Solenoid
7	2894R	Ground Wire-Headlight	29	2115P	Hex Bolt 1/2-20 x 5
8	3723R	Lead Wire (Light Switch to Headlight & Tail Light)	30	1052P	Lockwasher 1/2
9	3869R	Housing (Tail Light)	31	2777R	Tie Holding Elec Neutral Safety Sw
10	3867R	Bulb No. 1895 2 Candle Power Lens (Tail Light)	32	2549R	Safety Switch (Att Clutch)
11	3868R	Hex Mech. Screw Nut No. 10-24	34	543P	Hex Nut No. 10-32
12	505P	External Tooth Lockwasher No. 10	35	1066P	Lockwasher No. 1/2
13	1404P	Slotted Truss Hd. Mech. Screw No. 10-24 x 1/2	36	5212R	Light Switch (Incl. Item No. 38)
14	3073P	Key Set	37	5735H	Knob Light Switch (Item No. 38)
15	3757R	Ignition Switch (Includes Item No. 16)	38	9267H	Fuse Holder
16	7529H	Ignition Wire Harness	39	2212R	Electrical Wire (F. Light Switch)
17	2055R	Regulator	40	2211R	Electrical Wire (Re Ammeter)
18	5992R	Battery Cable (Solenoid to Starter)	41	2228R	Fuse
19	2684R	Key Set	42	7345R	Electrical Wire (Re Ammeter)
20	2226R	Battery Cable (Solenoid to Starter)	43	8F-45	Regulator
21	9885H	Battery	44	1402P	External Lockwash
22	503P	Hex Nut 1/2-20	45	6347R	Fuse
			46	3004P	Hex Bolt 1/2-20 x 1

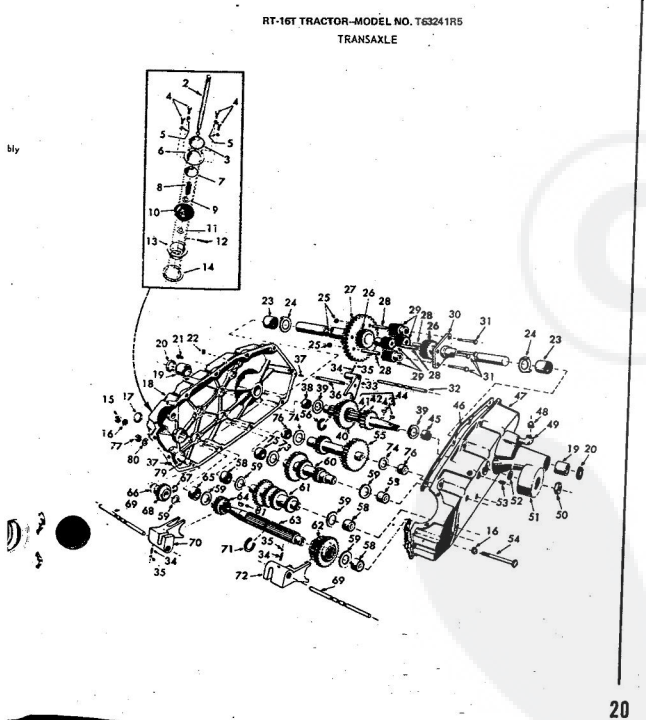 

RT-16T TRACTOR-MODEL NO. T63241R5
TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1.	633A38	Transaxle Assembly less Brake Drum	38.	8118M	Needle Bearing
2.	6213H1	Gear Shift Lever straight	39.	6264H	Thrust Bearing Race
3.	4859H1	Gear Shift Cap	40.	633A14	High-Low Range G. Hub
4.	3010P	Hex Bolt 5/16-18 x 1/2	41.	6221H	3rd Reduction Gear
5.	1003P	Lockwasher 5/16	42.	8659H	4th Reduction Pinion
6.	6234H1	Gear Shift Ball Cover	43.	2228M	Woodruff Key 3/16
7.	6299H	Shift Lever Guide Ball	44.	633A22	3rd Reduction Shaft
8.	4926H	Spring	45.	8119M	Needle Bearing
9.	1544P	Washer 1 1/2 x 59/64 x 16 Ga.	46.	6275H	Gasket-Gearcase
10.	6272H	Shift Mechanism Seal	47.	6254Z7	Gear Case and Bearer
11.	1529P	Washer 9/16 x 15/16 x 11 Ga.	48.	4002P	Pipe Plug 1/2-14 N
12.	2305P	Coner 1/8 x 5/8	49.	4003P	90 Street Elbow 1/2
13.	633A19	Gear Shift Gate and Reinforcement	50.	9204H	Lock Nut
14.	6274H	Gasket-Shift Ball Cover	51.	7648H1	Lock Nut
15.	504P	Hex Nut 5/16-18	52.	6277H	Brake Drum
16.	1007P	Lockwasher 5/16 Extra Heavy	53.	7648H1	Oil Seal
17.	6270H	Lockwasher 5/16 Extra Heavy	54.	4001P	Pipe Plug 1/2-18 N.P.
18.	633A28A	Oil Seal	54.	3082P	Hex Bolt 5/16-18 x 1 Grade 5 H.T.
19.	9928H	Gear Case, Reverse Idler Shaft and Bearings R. H.	55.	633A23	4th Reduction Shaft
20.	7302R	Sintered Iron Bearing	56.	6276H	Snap Ring
21.	5853H	Oil Seal	57.	4892H	Needle Bearing
22.	6269H	Pressure Relief Valve	58.	1370H	Thrust Bearing Race
23.	3059H	Oil Seal	60.	633A31	2nd Reduction Shaft
24.	6256H	Needle Bearing	61.	633A30	Speed Change Gears
25.	7810H	Centerlock Gripco Nut 3/8-24	62.	633A11	Intermediate and High
26.	633A34	Aske Thrust Washer	63.	6218H	Pinions
27.	8649H	Aske Thrust and Gear	64.	6231H	Input Shaft
28.	6259H1	Final Drive Gear	65.	6231H	Low Speed Pinion
29.	8657H	Bushing-Differential Pinion	66.	4894H	Needle Bearing
30.	6263H1	Differential Pinion	67.	7392H	Reverse Idler Thrust
31.	3056P	Differential Carrier	67.	5901P	E-Ring
			68.	1153R	Reverse Idler Gear
			69.	6216H	Shift Fork Shaft
			70.	6252H	Shift Fork Sh.
			71.	4926H	Snap Ring-Crescent Ty
			72.	4219R	Shift Fork Sh.
			73.	7394H	Thrust Bearing Race
			74.	7396H	Thrust Bearing Race
			75.	7398H	Needle Bearing
			76.	8117M	Needle Bearing
			77.	541P	Hex Jam Nut 7/16-20
			79.	7384H	Reverse Idler Shaft
			80.	1167R	Needle Bearing
			81.	9858M1	Sealing Washer
					Woodruff Key

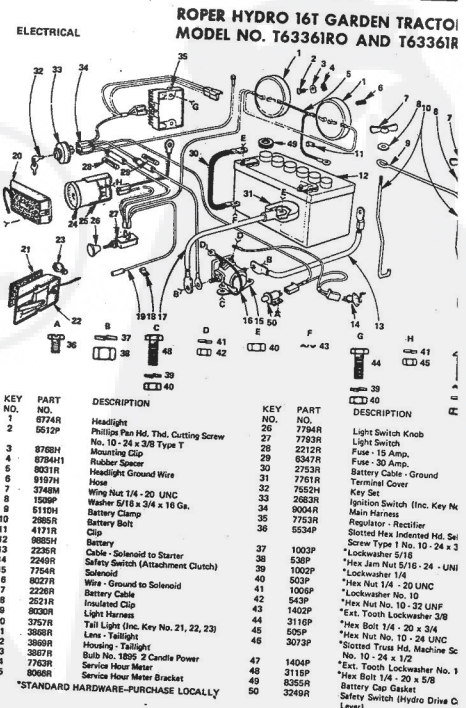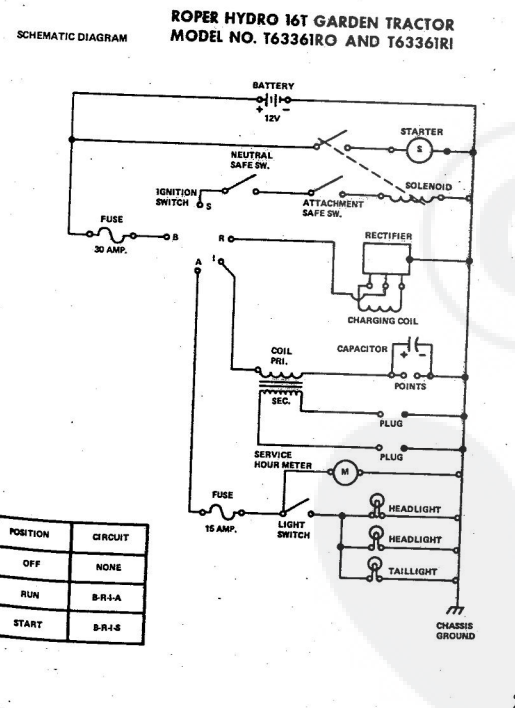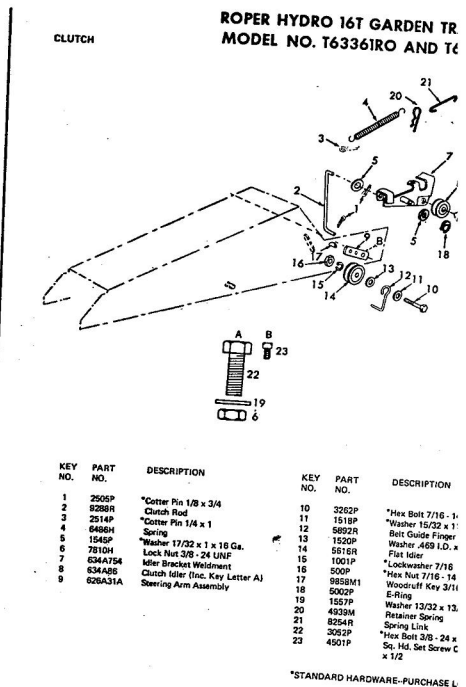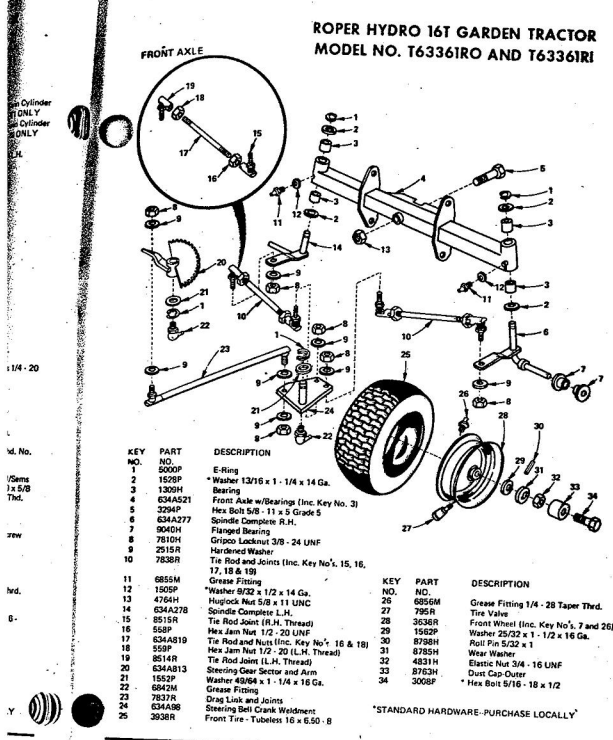    


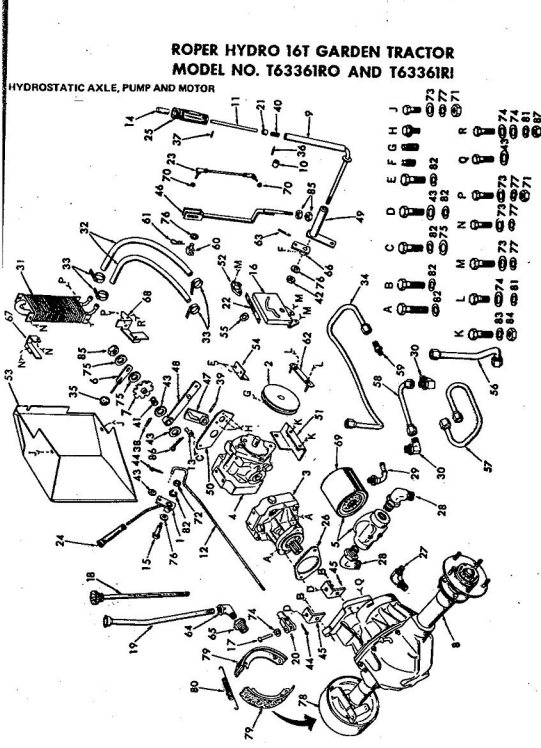 

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T6336IRO AND T6336IRI**

HYDROSTATIC AXLE, PUMP AND MOTOR

KEY NO.	PART NO.	DESCRIPTION
1	63A4604	Bottom Pump Bracket Weldment
2	63A4602	Oil Cooler Air Shield
3	63A4607	Top Pump Bracket Weldment
4	63A4604	Separator
5	63A4604	Separator Line
6	63A4604	Pressure Line No. 1
7	63A4604	Pressure Line No. 2
8	63A4604	Straight Connector "O" Ring to Flare
9	63A4604	Reducer Flange
10	63A4604	Ball Guide Weldment
11	63A4604	Flange Pin
12	63A4604	Pin Bushing
13	63A4604	Pin Bushing
14	63A4604	Pin Bushing
15	63A4604	Pin Bushing
16	63A4604	Pin Bushing
17	63A4604	Pin Bushing
18	63A4604	Pin Bushing
19	63A4604	Pin Bushing
20	63A4604	Pin Bushing
21	63A4604	Pin Bushing
22	63A4604	Pin Bushing
23	63A4604	Pin Bushing
24	63A4604	Pin Bushing
25	63A4604	Pin Bushing
26	63A4604	Pin Bushing
27	63A4604	Pin Bushing
28	63A4604	Pin Bushing
29	63A4604	Pin Bushing
30	63A4604	Pin Bushing
31	63A4604	Pin Bushing
32	63A4604	Pin Bushing
33	63A4604	Pin Bushing
34	63A4604	Pin Bushing
35	63A4604	Pin Bushing
36	63A4604	Pin Bushing
37	63A4604	Pin Bushing
38	63A4604	Pin Bushing
39	63A4604	Pin Bushing
40	63A4604	Pin Bushing
41	63A4604	Pin Bushing
42	63A4604	Pin Bushing
43	63A4604	Pin Bushing
44	63A4604	Pin Bushing
45	63A4604	Pin Bushing
46	63A4604	Pin Bushing
47	63A4604	Pin Bushing
48	63A4604	Pin Bushing
49	63A4604	Pin Bushing
50	63A4604	Pin Bushing
51	63A4604	Pin Bushing
52	63A4604	Pin Bushing
53	63A4604	Pin Bushing
54	63A4604	Pin Bushing
55	63A4604	Pin Bushing
56	63A4604	Pin Bushing
57	63A4604	Pin Bushing
58	63A4604	Pin Bushing
59	63A4604	Pin Bushing
60	63A4604	Pin Bushing
61	63A4604	Pin Bushing
62	63A4604	Pin Bushing
63	63A4604	Pin Bushing
64	63A4604	Pin Bushing
65	63A4604	Pin Bushing
66	63A4604	Pin Bushing
67	63A4604	Pin Bushing
68	63A4604	Pin Bushing
69	63A4604	Pin Bushing
70	63A4604	Pin Bushing
71	63A4604	Pin Bushing
72	63A4604	Pin Bushing
73	63A4604	Pin Bushing
74	63A4604	Pin Bushing
75	63A4604	Pin Bushing
76	63A4604	Pin Bushing
77	63A4604	Pin Bushing
78	63A4604	Pin Bushing
79	63A4604	Pin Bushing
80	63A4604	Pin Bushing
81	63A4604	Pin Bushing

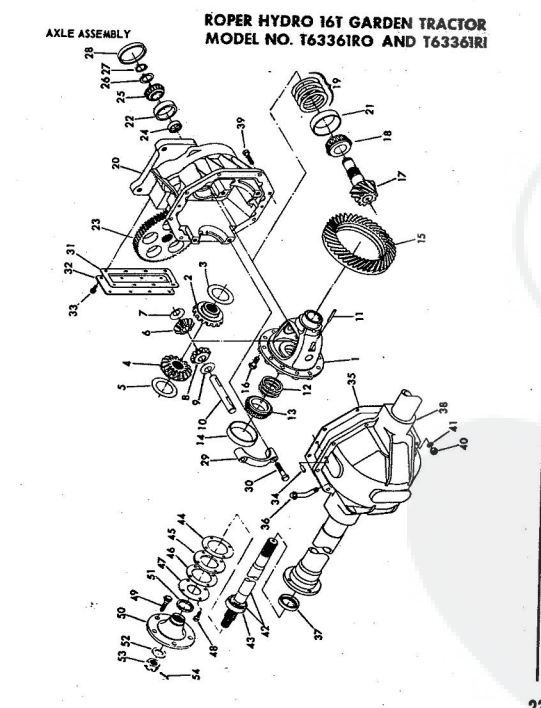 


**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T6336IRO AND T6336IRI**

AXLE ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	7166R	Diff Case (Set of Two)
2	7166R	Diff. Gear (Set of Two)
3	7166R	Diff. Gear (Set of Two)
4	7166R	Diff. Gear (Set of Two)
5	7166R	Diff. Gear (Set of Two)
6	7166R	Diff. Gear (Set of Two)
7	7166R	Diff. Gear (Set of Two)
8	7166R	Diff. Gear (Set of Two)
9	7166R	Diff. Gear (Set of Two)
10	7166R	Diff. Gear (Set of Two)
11	7166R	Diff. Gear (Set of Two)
12	7166R	Diff. Gear (Set of Two)
13	7166R	Diff. Gear (Set of Two)
14	7166R	Diff. Gear (Set of Two)
15	7166R	Diff. Gear (Set of Two)
16	7166R	Diff. Gear (Set of Two)
17	7166R	Diff. Gear (Set of Two)
18	7166R	Diff. Gear (Set of Two)
19	7166R	Diff. Gear (Set of Two)
20	7166R	Diff. Gear (Set of Two)
21	7166R	Diff. Gear (Set of Two)
22	7166R	Diff. Gear (Set of Two)
23	7166R	Diff. Gear (Set of Two)
24	7166R	Diff. Gear (Set of Two)
25	7166R	Diff. Gear (Set of Two)
26	7166R	Diff. Gear (Set of Two)
27	7166R	Diff. Gear (Set of Two)
28	7166R	Diff. Gear (Set of Two)
29	7166R	Diff. Gear (Set of Two)
30	7166R	Diff. Gear (Set of Two)
31	7166R	Diff. Gear (Set of Two)
32	7166R	Diff. Gear (Set of Two)
33	7166R	Diff. Gear (Set of Two)
34	7166R	Diff. Gear (Set of Two)
35	7166R	Diff. Gear (Set of Two)
36	7166R	Diff. Gear (Set of Two)
37	7166R	Diff. Gear (Set of Two)
38	7166R	Diff. Gear (Set of Two)
39	7166R	Diff. Gear (Set of Two)
40	7166R	Diff. Gear (Set of Two)
41	7166R	Diff. Gear (Set of Two)
42	7166R	Diff. Gear (Set of Two)
43	7166R	Diff. Gear (Set of Two)
44	7166R	Diff. Gear (Set of Two)
45	7166R	Diff. Gear (Set of Two)
46	7166R	Diff. Gear (Set of Two)
47	7166R	Diff. Gear (Set of Two)
48	7166R	Diff. Gear (Set of Two)
49	7166R	Diff. Gear (Set of Two)
50	7166R	Diff. Gear (Set of Two)
51	7166R	Diff. Gear (Set of Two)
52	7166R	Diff. Gear (Set of Two)
53	7166R	Diff. Gear (Set of Two)
54	7166R	Diff. Gear (Set of Two)

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO AND T63361RI**

 HYDROSTATIC MOTOR ASSEMBLY

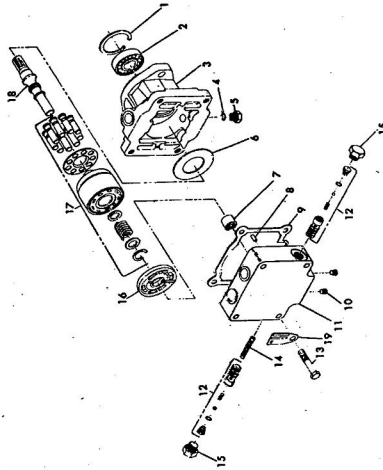


**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO AND T63361RI**

HYDROSTATIC MOTOR ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	7262R	Ball Bearing
2	7263R	Hex Head Cap Screw
3	7264R	Head Cap
4	7265R	Shaft
5	7266R	Washer
6	7267R	Pin
7	7268R	Pin
8	7269R	Pin
9	7270R	Pin
10	7271R	Pin
11	7272R	Pin
12	7273R	Pin
13	7274R	Pin
14	7275R	Pin
15	7276R	Pin
..	6344655	Complete Motor Assembly

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO AND T63361RI**

 HYDROSTATIC PUMP ASSEMBLY

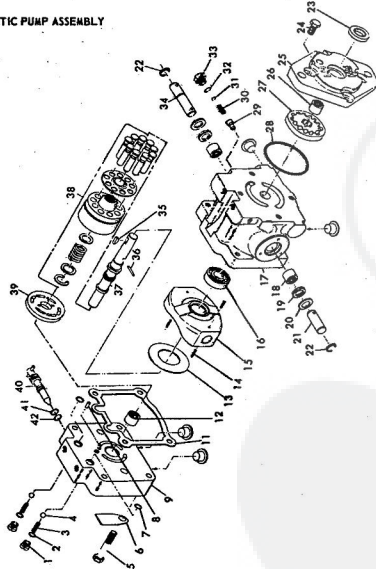

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO AND T63361RI**


HYDROSTATIC PUMP ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	7277R	Check Valve Kit
2	7278R	Hex Head Cap Screw
3	7279R	Head Cap
4	7280R	Shaft
5	7281R	Washer
6	7282R	Pin
7	7283R	Pin
8	7284R	Pin
9	7285R	Pin
10	7286R	Pin
11	7287R	Pin
12	7288R	Pin
13	7289R	Pin
14	7290R	Pin
15	7291R	Pin
16	7292R	Pin
17	7293R	Pin
18	7294R	Pin
19	7295R	Pin
20	7296R	Pin
21	7297R	Pin
22	7298R	Pin
23	7299R	Pin
24	7300R	Pin
25	7301R	Pin
26	7302R	Pin
27	7303R	Pin
28	7304R	Pin
29	7305R	Pin
30	7306R	Pin
31	7307R	Pin
32	7308R	Pin
33	7309R	Pin
34	7310R	Pin
35	7311R	Pin
36	7312R	Pin
37	7313R	Pin
38	7314R	Pin
39	7315R	Pin
40	7316R	Pin
41	7317R	Pin
..	6344655	Complete Pump Assembly

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

FUEL SYSTEM GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

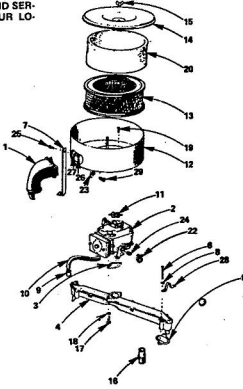


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	140-1169	Tube, Air Intake (Air Cleaner to Blower Housing)	15	850-0020	Nut, Wing - Air Cleaner Cover (1/4 - 20)
2	142-0531	Carburetor, Gasoline (With Integral Fuel Pump)	16	805-0755	Nipple, Exhaust (1 x 3")
3	145A438	Gasket, Carburetor Mounting	17	800-0023	Screw, Hex Head Cap (1/4 - 20 x 1 - 3/8")
4	154-1488	Manifold, Intake	18	850-0040	Washer, Spring Lock (1/4")
5	154A1448	Gasket, Intake - Manifold	19	815-0377	Screw, Round Head with Nylon Seat (No. 10 - 32 x 3/8")
6	800-0034	Screw, Hex Head Cap (5/16 - 18 x 2 - 1/4")	20	140-1259	Wrapper, Air Cleaner Element
7	140-1180	Support, Air Cleaner	22	503-0201	Clamp, Hose
8	850-0045	Washer, Spring Lock (5/16")	23	518-0328	Clip, Bracket, Cable
9	149-1259	Vacuum Tube	24	149-1321	Cap, Fuel Pump
10	503-0740	Hose, Fuel Pump Vacuum	25	806-3063	Screw, Hex Head Cap (1/4 - 20 x 1/2")
11	140A1215	Gasket, Air Cleaner Mip.	26	802-0001	Nut, Hex - Steel (1/4 - 20)
12	140-1213	Housing, Air Cleaner	27	853-0013	Washer, Lock - ET (1/4")
13	140-1218	Element, Air Cleaner	28	403-1021	Bracket, Lifting
14	140-1168	Cover, Air Cleaner	29	5582P	Std. Pin 1/4, Self Tap Screw Type AB (No. 8 x 3/8)

* See separate group for components.
* Included in Gasket Kit, page 37.

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

CARBURETOR PARTS GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

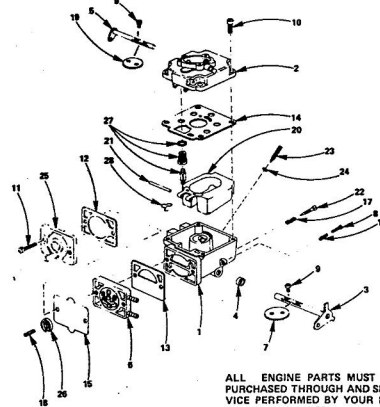


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	142-0532	Body Assembly, Lower	17	142-0282	*Spring, Idle Needle
2	142-0533	Sleeve Assembly	18	142-0545	*Spring, Pump Diaphragm
3	142-0534	*Shaft Assembly, Throttle	19	142-0548	Fly, Choke
4	142-0535	Packing, Shaft	20	142-0547	Float and Lever Assembly
5	142-0536	Shaft Assembly, Choke	21	142-0548	*Shaft, Float Lever
6	142-0537	*Valve Plate Assembly	22	142-0016	*Needle, Idle
7	142-0538	Fly, Throttle	23	142-0549	Needle Assembly, Power
8	142-0064	Screw, Throttle Stop	24	142-0550	TGasket, O" Ring
9	142-0334	*Screw, Fly Mounting	25	142-0551	Cover, Pump
10	142-0539	Screw, Bowl Cover Mounting	26	142-0552	Plate, Pump Spring
11	142-0540	Screw, Pump Cover	27	142-0553	*Valve Assembly, Float
12	142-0541	TGasket, Base to Diaphragm	28	142-0554	Clip, Float Valve
13	142-0542	TGasket, Plate to Base	142-0557		*Gasket Kit (Includes Parts Marked †)
14	142-0543	TGasket, Sleeve Assembly to Base			*Repair Kit (Includes Parts Marked †)
15	142-0555	*Diaphragm, Pump			
16	142-0544	Spring, Throttle Stop Screw			

† Included in 142-0558 Gasket Set.
* Included in 142-0557 Repair Kit.

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

**GOVERNOR, STARTER,
CHARGING ALTERNATOR AND
BLOWER HOUSING GROUP**

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

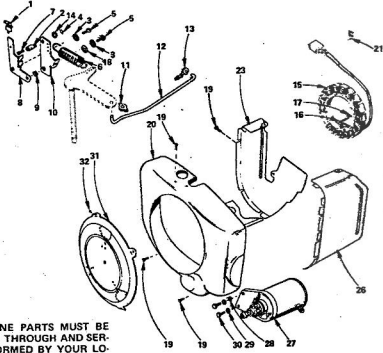


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	518-0176	Clip, Throttle Cable	17	850-0030	Washer, Spring Lock (No. 10)
2	152-0155	Swivel, Throttle Cable	18	526-0214	Flat Washer (1/4")
3	850-0040	Lockwasher (1/4")	19	815-0261	Screw, Hex Head Cap (1/4 - 20 x 7/16")
4	516-0059	Pin, Cotter - Swivel Mounting	20	134-2383	HOUSING, BLOWER Engines without Variable Speed Governor
5	821-0010	Screw, Hex Cap - Flange Locking (1/4 - 20 x 1/2")	21	167-0188	Clip, Alternator Lead Support
6	150-1214	Spring, Governor	22	134-2890	Housing, Cylinder Air - Left
7	815-0104	Screw, Round Head (No. 8 - 32 x 5/16")	23	134-2889	Housing, Cylinder Air - Right
8	150-1363	Bracket, Governor Mounting	27	151-0933	Starter, 12 Volt (For Components see separate group)
9	150-1259	Bracket, Governor Control	28	536-0113	Washer, Flat - Steel (11/32" I.D. x 1" O.D. x 3/32" Thick)
10	150-1345	Arm, Governor Control	29	800-0045	Washer, Spring Lock (5/16")
11	870-0278	Clip, Governor Control Rod to Governor Arm	30	800-0028	Screw, Hex Head Cap (5/16 - 18 x 1")
12	150-1350	Rod, Governor Control	31	134-2608	Guard, Blower Housing
13	516-0004	Clip, Governor Control Rod to Carburetor	32	815-0378	Screw, Std. Hex Head W/ET (No. 14 x 1/2")
14	526-0006	Flat Washer (No. 12)			
15	151-1102	Stator, Charging Alternator			
16	813-0108	Screw Round Head - Steel (No. 10 - 32 x 1 - 1/2")			

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

IGNITION GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

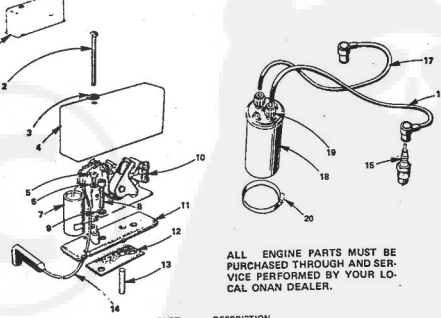

KEY NO.	PART NO.	DESCRIPTION
1	160-1210	Box Assembly, Breaker (Includes Parts Marked †)
2	612-0108	*Screw, Machine - Round Head (No. 10 - 14 x 1 - 1/2")
3	526-0008	*Washer, Flat (13/64" I.D. x 7/16" O.D. x 1/32" Thick)
4	160-1176	*Cover, Breaker Box
5	815-0268	*Screw, Tapping - Hex Head (No. 8 - 32 x 5/16")
6	850-0035	*Washer, Lock - Spring (No. 8)
7	312-0196	*Condenser, Ignition
8	802-0034	*Screw, Cap - Socket Head (1/4 - 20 x 3/4")
9	850-0038	*Washer, Lock - Spring - High Collar (1/4")
10	160-1183	*Point Assembly, Breaker
11	160-1172	*Base, Breaker Box
12	160A1168	*Gasket, Breaker Box
13	160-1151	Plunger, Breaker Point Assembly
14	338-2132	Lead, Breaker Points to Coil
15	167-0241	Plug, Spark
16	167-1483	Cable, Spark Plug (19")
17	167-1482	Coil, Ignition
18	168-0036	Nut, Coil Cable (Part of 168-0536 Coil)
19	168-0004	Clamp, Coil Mounting
20	803-0311	*Parts Included in 160-1210 Breaker Box Assembly.

 
* Included in Gasket Kit, page 37.

JR

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

STARTER PARTS GROUP

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL OMAN DEALER.

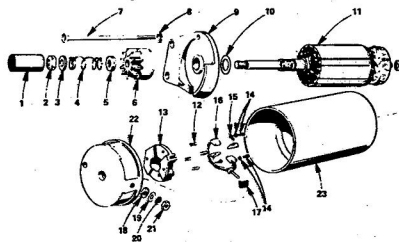

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**


STARTER PARTS GROUP

KEY NO.	PART NO.	DESCRIPTION
1	191-0933	Starter, 12 Volt (Complete)
2	191-1036	Cover, Dust
3	191-1046	Nut, Scoop
4	191-1046	Washer, Stop Nut
5	191-1035	Spring, Anti-drift
6	191-1047	Screw, Dust Cover
7	191-1036	Drive Assembly
8	191-1048	Screw, Hex Cap
9	850-0040	Washer, Lock
10	191-1037	Cap, Assembly, Drive End
11	191-1038	Washer, Armature Thrust
12	191-1038	Armature
13	†	Spring, Brush
14	†	Brush Holder
15	†	Screw and Lockwasher
16	†	Brush, Ground
17	†	Stud and Brush Assembly, Input
18	†	Thrusting, Insulation - Input Stud
19	†	Washer, Insulation - Input Stud
20	†	Washer, Flat - Input Stud
21	†	Washer, Lock - Input Stud
22	†	Nut, Securing - Input Stud
23	191-1040	Cap Assembly, Commutator (Includes Parts Marked †)
24	191-1041	Housing, Starter Motor (Wash Kit, Stud, Spring and Stud (Includes Parts Marked †))

† - Included in the 191-1040 Cap Assembly.
 * - Included in the 191-1041 Brush, Spring and Stud Kit.
 ▲ - Not Sold Separately

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL OMAN DEALER.

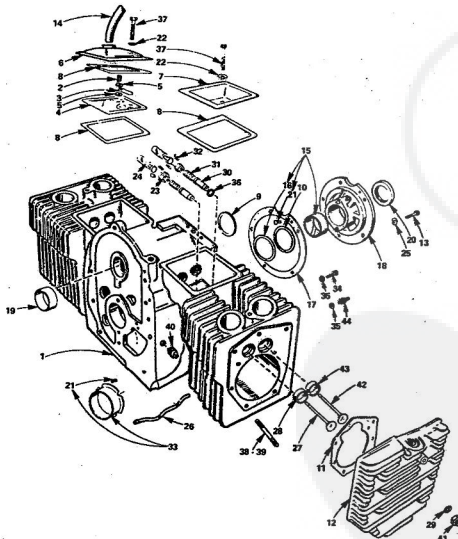

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**


CYLINDER BLOCK GROUP

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	110-2351	Block Assembly, Cylinder (Includes Parts Marked †)	28		INSERT, VALVE SE
2	123-1174	Spring, Breather Valve		110-0245	EXHAUST
3	123-1175	Valve, Breather		110-0245-02	†Standard
4	123-1173	Ball, Breather	29	526-0122	.002" Oversize Washer, Flat - Steel (23/32" O.D. x 10 Gi
5	526-0018	Washer, Flat - Steel (17/64" I.D. x 5/8" O.D. x 1/16" Thick)	30	110-1807	TGuide, Valve
6	110-1878	Cover, Valve Compartment (L.H.)	31	110-0639	Spring, Valve
7	110-1879	Cover, Valve Compartment (R.H.)	32	110-0639	Lock, Valve and Spr
8	110A1921	gGasket, Valve Cover	33		*BEARING, CRANK (FLANGED)
9	517-0048	†Plug, Extension - Camshaft		101-0432	†Standard
10	104-0776	†Shim, Rear Bearing Plate (.005")	34	101-0432-02	.002" Undersize
11	110A1920	†Gasket, Cylinder Head		800-0046	Screw, Hex Head Cap
12		HEAD, CYLINDER	35	526-0066	Washer, Flat - Copper (1/16" O.D. x 1/16")
13	110-1924	Right Side (No. 2 Cylinder)	36	110A-68	xTGasket, Valve Guide (
14	110-1925	Left Side (No. 1 Cylinder)	37	800-0010	Screw, Hex Head Cap (3/8"
15	800-0051	†Screw, Hex Head Cap - Steel (3/8 - 16 x 1 - 1/4")	38	520-0424	Stud (5/16" x 2 - 5/7)
16	123-1176	Valve, Breather	39	520-0759	Stud (5/16" x 2 - 1/1)
17	101-0450	†Standard	40	502-0080	Pipe Plug - Square He
18	104-0575	†Washer, Crankshaft Bearing Thrust	41	110-0445	Hex Nut (5/16 - 24)
19	101B415	xTGasket, Bearing Plate	42	110-1800	Intake Valve
20	101-0439	†Plate, Bearing (Excludes Bearings)	43		INSERT, VALVE SE
21	101-0257	†Bearing, Camshaft (Precision)		110-0197	†Standard
22	509A41	xTShim, Bearing Stop	44	110-0197-02	.002" Oversize
23	516-0072	†Pin, Main Bearing Stop		520-0920	Stud (3/8 - 16)
24	526-0063	Washer, Flat - Copper (17/64" I.D. x 7/16" O.D. x 1/32" Thick)			
25	110-0889	†Standard			
26	116-0006	†Standard			
27	850-0060	†Washer, Lock (3/8")			
28	120-0706	†Tube, Crankcase Oil			
29	110-1806	Exhaust Valve			

† - Included in 110-2351 Cylinder Block Assm
 * - Replacement Front Flange Bearing replaces bearing and thrust washer.
 x - Included in Gasket Kit 16K124

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**
CRANKSHAFT, FLYWHEEL, CAMSHAFT
AND PISTON GROUP

 ALL ENGINE PARTS MUST BE
PURCHASED THROUGH AND SER-
VICE PERFORMED BY YOUR LO-
CAL ONAN DEALER.

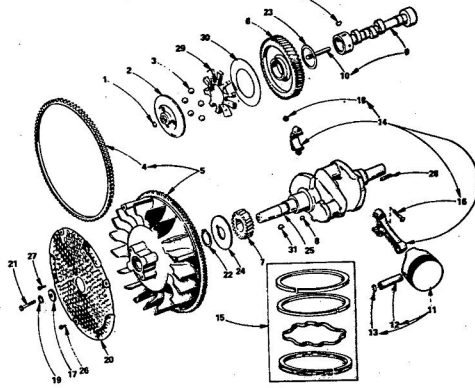


**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**
CRANKSHAFT, FLYWHEEL, CAMSHAFT
AND PISTON GROUP

KEY NO.	PART NO.	DESCRIPTION
1	150-0078	Ring, Camshaft Center Pin
2	150-1116	Cup, Governor
3	518-0015	Ball, Fly - Governor
4	104-0779	Gear, Ring - Flywheel
5	134-2432	Flywheel (Includes Ring Gear and Magnet Ring)
6	105-0332	Gear, Camshaft (Includes Flyball Sprocket and Plate)
7	104-0032	Gear, Crankshaft
8	615-0001	Key (1/2" Diameter x 1/8")
9	105-0402	Camshaft (Includes Center Pin)
10	150-0075	Pin, Camshaft Center
11	150-0075	PISTON AND PIN (INCLUDES RE-TAINING RINGS)
112-0134	Standard	
112-0134-05	.005" Overize	
112-0134-10	.010" Overize	
112-0134-20	.020" Overize	
112-0134-30	.030" Overize	
112-0134-40	.040" Overize	
12	112-0122	Pin, Piston
518-0311	Ring, Piston Pin Retaining	
14	114-0225	Rod Assembly, Connecting
15	115-0174	Standard
115-0174-05	.005" Overize	
115-0174-10	.010" Overize	
115-0174-20	.020" Overize	
115-0174-30	.030" Overize	
115-0174-40	.040" Overize	
16	114-0228	Bolt, Special - Connecting Rod
17	528-0017	Washer, Flat - Steel (15/32" I.D. x 1 - 1/4" O.D. x 1/4" Thick)
18	870-0137	Nut, Locking - Connecting Rod Cap
850-0055	Washer, Spring Lock (7/16")	
20	134-2384	Guard, Flywheel
21	104-0170	Screw, Hex Head Cap (7/16 - 14 x 4)
22	518-0014	Ring, Retaining - Crankshaft Gear
23	105-0004	Washer, Camshaft Gear Thrust
24	104-0043	Washer, Crankshaft Gear Retainer
25	104-0858	Crankshaft
26	821-0010	Screw, Hex Head Cap - Locking Flange (1/4 - 20 x 1/2")
27	821-0014	Screw, Hex Head Cap - Locking Flange (5/16 - 18 x 1/2")
28	815-0103	Key, Crankshaft Stub (1/4 x 1/4 x 2)
29	150-1257	Spacer, Governor Flywheel
30	150-0077	Plate, Governor Flyball
31	615-0227	Key Kit

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**
GEAR COVER, OIL BASE AND
OIL PUMP GROUP

 ALL ENGINE PARTS MUST BE
PURCHASED THROUGH AND SER-
VICE PERFORMED BY YOUR LO-
CAL ONAN DEALER.

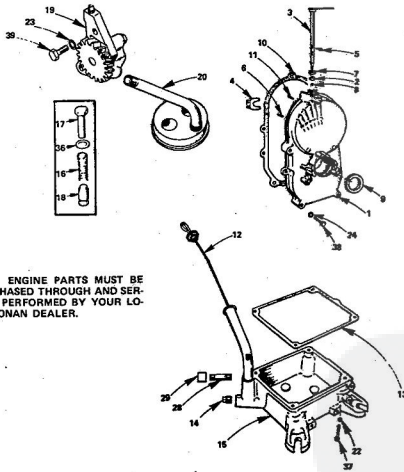


**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RO**
GEAR COVER, OIL BASE AND
OIL PUMP GROUP

KEY NO.	PART NO.	DESCRIPTION
1	103-0498	Cover Assembly, Gear (Includes Parts Marked *)
2	510-0105	*Bearing, Governor Shaft
3	150-1470	*Shaft and Arm Assembly, Governor
4	150-1197	*Yoke Governor Shaft
5	815-0048	*Screw, Yoke Retaining
6	516-0130	*Pin, Governor Cup Stop
7	508-0008	*Seal, Oil - Governor Shaft
8	510-0014	*Ball, Bearing - Governor Shaft
9	509-0040	*Seal, Gear Cover
10	103-0408	Gasket, Gear Cover
11	515-0141	Pin, Gear Cover Mounting (5/16 x 7/8")
12	123-1138	Cap and Indicator, Oil Fill
13	102-0883	Gasket, Oil Base Mounting
14	605-0056	Plug, Oil Drain *
15		BASE, OIL
16	102-0741	For Engines With Extended Oil Drain
16	120-0140	Spring, Oil By-Pass Valve
17	801-0050	Screw, Hex Head Cap (3/8 - 24 x 1") - Oil By - Pass Valve, Oil By - Pass
18	120-0326	Valve, Oil By - Pass
19	120-0481	Pump, Oil - Complete (NOTE: Internal parts not sold separately)
20	120-0713	Intake, Oil Pump (Includes: Cup, Screen and Pipe)
22	850-0050	Washer, Spring Lock (3/8")
23	850-0040	Washer, Spring Lock (1/4")
24	528-0086	Washer, Flat - Copper (2 1/4" I.D. x 9/16" O.D. x 1/16" Thick)
25	505-0178	Nipple, Pipe - Oil Drain (1/2 x 3 - 1/2")
26	505-0158	Cap, Pipe (1/2")
26	528-0066	Washer, Flat - Copper (25/64" I.D. x 9/16" O.D. x 1/16" Thick) - By - Pass Valve
27	800-0056	Screw, Hex Head Cap (3/8 - 16 x 2 - 1/2")
28	800-0032	Screw, Hex Head Cap (5/16 - 18 x 1 - 3/4") - Gear Cover Mounting
28	800-0034	Screw, Hex Head Cap (5/16 - 18 x 2 - 1/4") - Gear Cover Mounting
30	800-0007	Screw, Hex Head Cap (1/4 - 20 x 1")

* - Included in Gear Cover Assembly.

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

 FUEL SYSTEM GROUP
ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

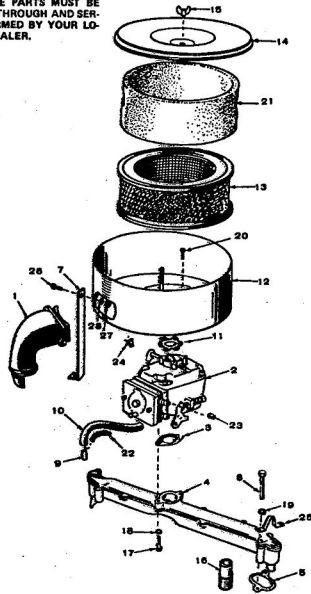

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**


FUEL SYSTEM GROUP

REF. NO.	PART NO.	PART DESCRIPTION
1	140-1169	Air Intake Tube
2	142-0531	Carburetor Assembly (Comple
3	145A438	*Gasket
4	154-1468	Intake Manifold
5	154A1446	*Gasket
7	140-1158	Support
8	800-0034	Hex Cap, Screw (5/16-18 x 2
9	149-1299	Vacuum Tube
10	503-0644	Vacuum Hose
11	140A1218	*Gasket
12	140-1213	Housing
13	140-1216	Element
14	140-1168	Cover
15	865-0020	Wing Nut (1/4-20)
16	505-0755	Half Nipple (1" x 3")
17	800-0008	Hex Head Cap Screw (1/4-20 x
18	850-0040	Lock Washer (1/4")
19	850-0045	Lock Washer (5/16")
20	815-0377	Round Head Screw (10-32 x 3/
21	140-1218	Pre-Cleaner
22	149-1308	Support Spring
23	149-1321	Cap
24	518-0328	Clip
25	403-1021	Lifting Bracket
26	800-0005	Hex Head Cap Screw (1/4-20 x
27	862-0001	Hex Nut (1/4-20)
28	853-0013	Lock Washer (1/4")

*INCLUDED IN GASKET KIT PAGE 10

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

 CARBURETOR PARTS GROUP
ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

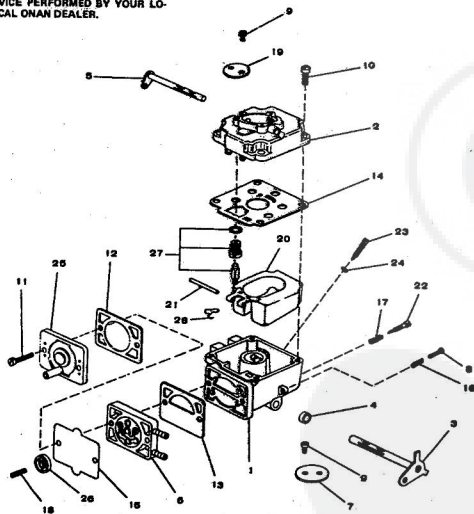

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

CARBURETOR PARTS GROUP



REF. NO.	PART NO.	PART DESCRIPTION
1	142-0532	Lower Body Assembly
2	142-0533	Sleeve
3	142-0534	*Throttle Shaft Assembly
4	142-0535	Shaft Packing
5	142-0536	Choke Shaft Assembly
6	142-0537	*Valve Plate Assembly
7	142-0538	Throttle Fly
8	142-0064	Screw
9	142-0334	*Screw
10	142-0539	Screw
11	142-0540	Screw
12	142-0541	Gasket
13	142-0542	Gasket
14	142-0543	Gasket
15	142-0555	*Diaphragm
16	142-0544	Spring
17	142-0282	*Spring
18	142-0545	*Spring
19	142-0546	Choke Fly
20	142-0547	Float and Lever Assembly
21	142-0548	*Float Lever Shaft
22	142-0016	*Idle Needle
24	142-0549	Power Needle Assembly
25	142-0550	O-Ring
26	142-0551	Cover
27	142-0552	*Plate
28	142-0553	*Float Valve Assembly
	142-0554	Clip
	142-0556	*Gasket Set (Includes 142-053
	142-0557	Repair Kit

* - Included in Repair Kit.

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RI**

GOVERNOR, STARTER,
CHARGING ALTERNATOR AND
BLOWER HOUSING GROUP

  ALL ENGINE PARTS MUST BE
PURCHASED THROUGH AND SER-
VICE PERFORMED BY YOUR LO-
CAL ONAN DEALER.

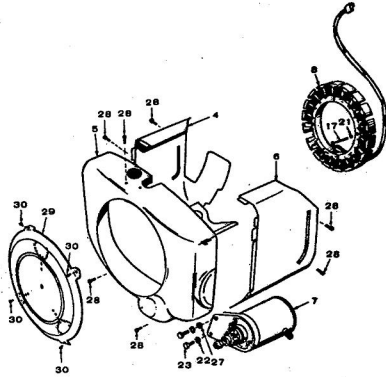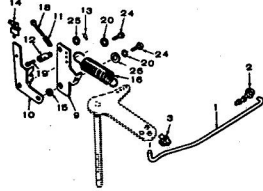

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RI**




GOVERNOR, STARTER,
CHARGING ALTERNATOR AND
BLOWER HOUSING GROUP

REF. NO.	PART NO.	PART DESCRIPTION
1	150-1350	Control Rod
2	518-0004	Clip
3	870-0278	Push Nut (3/16")
4	134-2890	Cylinder Air Housing (L.H.)
5	134-2393	Blower Housing
6	134-2889	Cylinder Air Housing (R.H.)
7	191-0933	Starting Motor Assembly (For Components - See Separate Group)
8	191-1102	Charging Alternator Stator
9	150-1345	Arm
10	150-1343	Bracket
11	150-1398	Spring
12	152-0155	Swivel
13	516-0059	Cotter Pin
14	518-0176	Clip
15	150-1269	Washing
16	150-1214	Spring
17	815-0108	Round Head Screw (10-32 x 1-1/2")
18	812-0066	Round Head Screw (6-32 x 3/4")
19	815-0104	Round Head Screw (8-32 x 5/16")
20	850-0040	Lock Washer (1/4")
21	850-0030	Lock Washer (#10)
22	850-0045	Lock Washer (5/16")
23	800-0028	Hex Head Cap Screw (5/16-18 x 1")
24	821-0010	Hex Head Cap Screw (1/4-20 x 1/2")
25	526-0006	Flat Washer (#12)
26	526-0214	Flat Washer (1/4")
27	526-0113	Flat Washer (5/16")
28	815-0261	Hex Head Cap Screw (1/4-20 x 7/16")
29	134-2606	Screen Guard (Stationary)
30	815-0378	Self Tapping Screw (#14 x 1/2")

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RI**

IGNITION GROUP

   ALL ENGINE PARTS MUST BE
PURCHASED THROUGH AND SER-
VICE PERFORMED BY YOUR LO-
CAL ONAN DEALER.

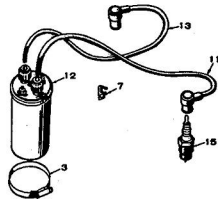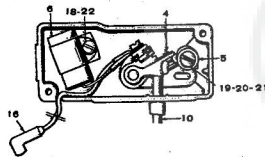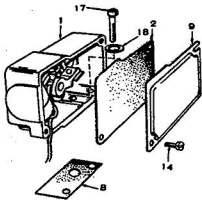

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361RI**


IGNITION GROUP

REF. NO.	PART NO.	PART DESCRIPTION
1	160-1158	Breaker Box Assembly
2	100A1148	*Gasket
3	503-0311	Clamp
4	160-1154	*Point Set
5	526-0003	*Flat Washer (#8)
6	312-0069	*Condenser
7	167-0188	Clip
8	100A1150	*Gasket
9	160-1149	*Cover
10	160-1151	Plunger
11	167-1462	Cable (16-3/4")
12	166-0535	Coil
13	167-1465	Cable (19")
14	815-0358	*Fan Head Screw (8-32 x 3/8")
15	167-0241	Spark Plug
16	336-2132	*Lead Assembly
17	802-0034	Socket Head Screw (1/4-20 x 3/4")
18	850-0038	Lock Washer (1/4")
19	850-0025	*Lock Washer (#8)
20	815-0405	Pan Head Screw (#8-32 x 1/2")
21	870-0221	Nut (#8-32)
22	815-0403	Pan Head Screw (#8-32 x 6/16")

*INCLUDED IN BREAKER BOX ASSEMBLY
*INCLUDED IN GASKET KIT PAGE 10

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

 CYLINDER BLOCK GROUP
ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

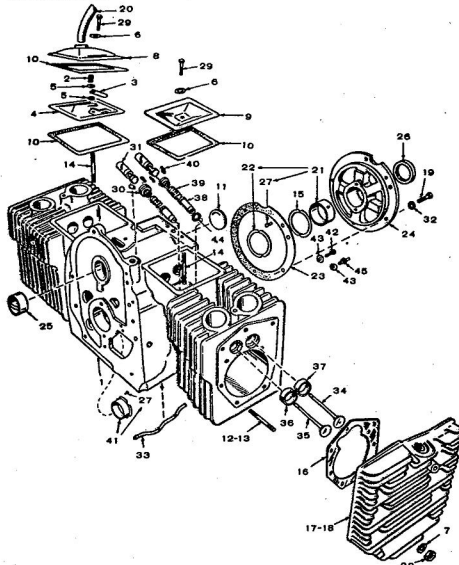

CYLINDER BLOCK GROUP


REF. NO.	PART NO.	PART DESCRIPTION
1	110-1943	Cylinder Block Assembl
2	123-1174	Spring
3	123-1175	Valve
4	123-1173	Baffle
5	526-0018	Flat Washer (1/4" Steel)
6	526-0063	Flat Washer (1/4" Copper)
7	526-0122	Flat Washer (5/16" Steel)
8	110-1878	Cover (L.H.)
9	110-1879	Cover (R.H.)
10	110A1821	*Gasket
11	517-0048	*Expansion Plug
12	520-0424	Stud (5/16" x 2-5/16")
13	520-0759	Stud (5/16" x 2-1/16")
14	104-0776	*Shim (.005")
15	104-0776	*Gasket
16	110A1820	*Gasket
17	110-1924	Cylinder Head (R.H.)
18	110-1925	Cylinder Head (L.H.)
19	800-0051	Hex Cap Screw (3/8-16 x
20	123-1176	Breather Tube
21	REAR BEARING KIT	
	101-0420	*Standard
22	101-0420-02	.002" Undersize
	104-0575	*Bearing Thrust Washer
23	101-0415	*Gasket
24	101-0407	*Bearing Plate (Less Beas
25	101-0367	*Camshaft Bearing (Precisi
26	506A41	*Oil Seal
27	516-0072	*Stop Pin
28	110-0445	Hex Nut (5/16-24)
29	800-0010	Screw, Hex Cap (1/4-20 x
30	110-0893	Retainer
31	115-0006	Tapser
32	850-0050	*Lock Washer (3/8")
33	120-0706	*Oil Tube
34	110-1808	Intake Valve
35	110-1809	Exhaust Valve
36	EXHAUST VALVE SEAT INSERT	
	110-0245	Standard
	110-0245-02	.002" Oversize
37	INTAKE VALVE SEAT INSERT	
	110-0197	*Standard
	110-0197-02	*.002" Oversize
38	110-1935	*Valve Guide
39	110-0539	Valve Spring
40	110-0639	Retaining Lock
41	FRONT BEARING KIT	
	101-0432	*Standard
	101-0432-02	.002" Undersize
42	806-0027	Hex Head Cap Screw (3/8-1
43	526-0066	Flat Washer (3/8" Copper)
44	110A088	*Gasket (Used with Intake
		Oil)
45	520-0820	Stud (3/8-16)

*INCLUDED IN CYLINDER BLOCK ASSEMBLY
*INCLUDED IN GASKET KIT PAGE 166K124

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

CRANKSHAFT, FLYWHEEL, CAMSHAFT
AND PISTON GROUP

 
ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

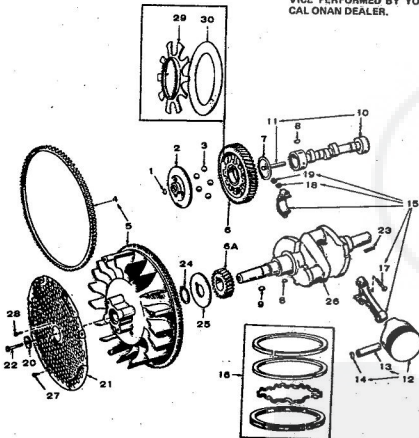

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

CRANKSHAFT, FLYWHEEL, CAMSHAFT
AND PISTON GROUP


REF. NO.	PART NO.	PART DESCRIPTION
1	150-0078	Snap Ring
2	150-0612	Governor Cup
3	510-0015	Flyball
4	104-0779	Ring Gear
5	134-2432	Flywheel Assembly (Includ
6	105-0332	Gear and Rotor)
		Camshaft Gear (Includes
6A	104-0032	Space and Plate)
7	105-0004	Cranksaft Gear
8	105-0004	Thrust Washer
9	515-0001	Woodruff Key (1/8" x 1/2"
10	515-0098	Woodruff Key (3/16" x 3/4"
11	105-0388	Camshaft and Center Pin A
12	150-0075	Center Pin
		PISTON AND PIN (Includes Retaining Rings)
	112-0134	Standard
	112-0134-05	.005" Oversize
	112-0134-10	.010" Oversize
	112-0134-20	.020" Oversize
	112-0134-30	.030" Oversize
	112-0134-40	.040" Oversize
13	112-0122	Piston Pin
14	518-0311	Retaining Ring
15	114-0225	Rod Assembly
16	RING SET	
	113-0174	Standard
	113-0174-05	.005" Oversize
	113-0134-10	.010" Oversize
	113-0134-20	.020" Oversize
	113-0134-30	.030" Oversize
	113-0134-40	.040" Oversize
17	114-0228	Bolt (Special)
18	526-0017	Flat Washer (Special)
19	870-0137	Locking Nut (5/16-24)
20	850-0055	Lock Washer (7/16")
21	134-2384	Guard
22	104-0170	Hex Head Cap Screw
		(7/16-14 x 4")
23	515-0103	Key (1/4" x 1/4" x 2")
24	518-0614	Retaining Ring
25	104-0043	Washer
26	104-0889	Cranksaft
27	821-0010	Locking Screw (1/4-20 x 1/
28	821-0014	Locking Screw (5/16-18 x 1/
29	150-1257	Governor Flyball Spacer
30	150-0077	Governor Flyball Plate

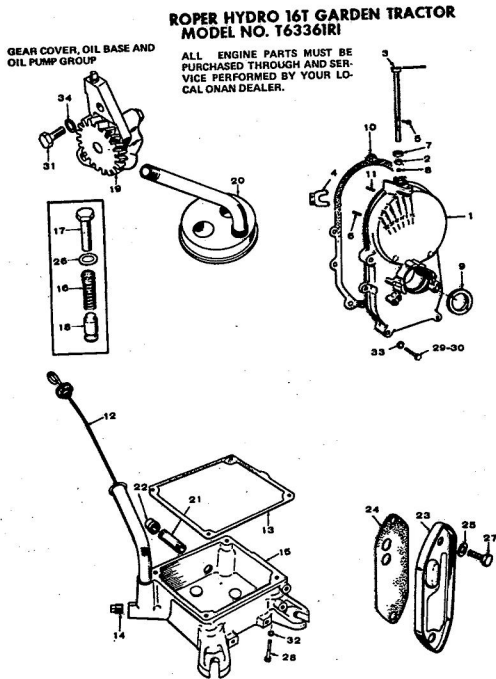 

**ROPER HYDRO 16T GARDEN TRACTOR
MODEL NO. T63361R1**

GEAR COVER, OIL BASE AND OIL PUMP GROUP


REF. NO.	PART NO.	PART DESCRIPTION
1	103-0498	Gear Cover Assembly
2	510-0105	*Bearing (Upper)
3	150-1470	*Shaft and Arm Assembly
4	150-1187	*Yoke
5	815-0046	*Screw (8-32 x 3/8")
6	516-0150	*Pin (3/16" x 7/8")
7	828	*Oil Seal
8	510-0014	*Bearing
9	808A40	*Seal
10	1008048	*Gasket
11	516-0011	Pin (5/16" x 1-1/8")
12	123-1138	Cap and Indicator
13	1008043	*Gasket
14	505-0056	Pipe Plug (1/2")
15	102-0741	Oil Base
16	120-0140	Spring (Oil By-Pass)
17	801-0050	Hex Head Screw (3/8-24 x 1")
18	120-0398	Oil By-Pass
19	120-0491	Valve (Oil By-Pass)
20	120-0713	Oil Pump Assembly (Complete)
21	505-0002	Intake Assembly
22	505-0158	Pipe Nipple (1/2" x 3")
23	122-0359	Pipe Cap (1/2")
24	122-0321	Cover
25	526-0122	Gasket
26	526-0066	Flat Washer (5/16" Copper)
27	800-0026	Flat Washer (3/8" Copper) Oil By-P
28	800-0056	Hex Head Cap Screw (5/16-18 x 3/4")
29	800-0032	Hex Head Cap Screw (3/8-16 x 2-1/2")
30	800-0054	Hex Head Cap Screw (5/16-18 x 1-3/4")
31	800-0007	Hex Head Cap Screw (5/16-18 x 2-1/4")
32	850-0050	Hex Head Cap Screw (1/4-20 x 1")
33	526-0065	Lock Washer (3/8")
34	850-0040	Lock Washer (1/4")

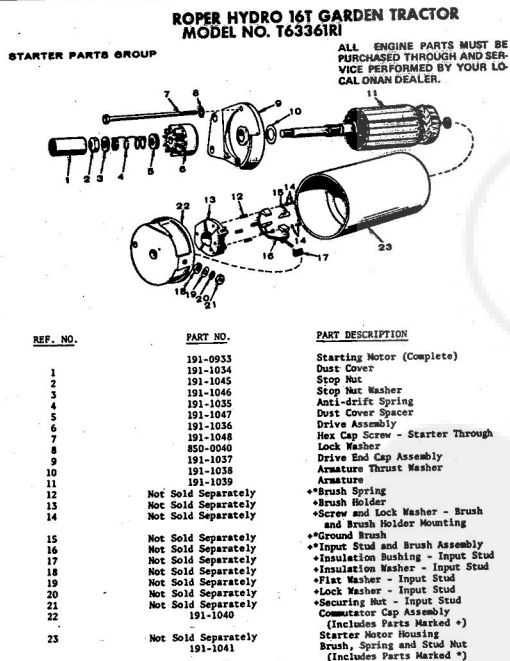 

* - Included in 191-1040 Cap Assembly
* - Included in 191-1041 Brush, Spring and Stud Kits.

REPAIR PARTS:
ROPER 18T GARDEN TRACTOR
MODEL NO. T93261R0

 MAIN FRAME, DASH AND GRILL

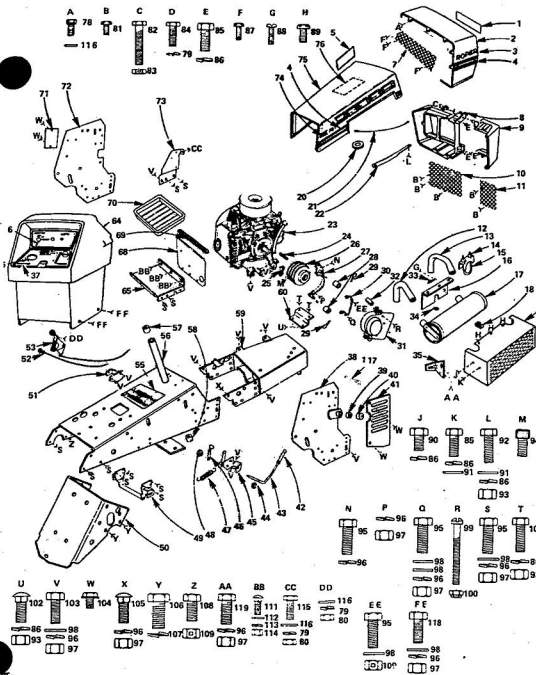

ROPER 18T GARDEN TRACTOR
MODEL NO. T93261R0


MAIN FRAME, DASH AND GRILL

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	6955R	Decal - Grill Front - "Roper"	88	7912R	Battery Heat Sh
2	3622R	Grill - Upper	89	7874R	Hood Seal
3	6966R	Decal - "Roper"	70	8630R	Battery Tray
4	7001R	Decal - Hood and Grill Strip - Short	71	7728R	Cover - L.H.
5	6957R	Decal - Hood and Grill Strip - Long	72	7722R	Bracket - Battery
6	6251R	Decal - Dash Upper	73	7855R	Bracket - Recoil
7	3621R	Grill Screen - Upper	74	7762R	Decal - Eight Sp
8	7827R	Grill - Lower	75	634A551	Hood Assy.
9	7838R	Grill Side	76	8029R	Decal - Hood
10	2674R	Grill Screen - L.H.	78	8028R	Hex. Ind. Self T.
11	2672R	Grill Screen - R.H.	79	1002P	Ext. Tooth Lock
12	2898R	Exhaust Manifold - Rear	80	503P	*Lockwasher 1/4
13	2897R	Exhaust Manifold - Front	81	5501P	*Hex Nut 1/4 - 20
14	504P	*Hex Nut 5/16 - 18 UNC	82	3267P	*Phillips Pan Hd.
15	683A149	Muffler Clamp (Inc. Key No. 14)	83	1655H	10 - 24 x 3/8 Ty
16	8376R	Heat Shield - Carburetor	84	3003P	*Hex Bolt 1/4 - 20
17	7742R	Muffler	85	3010P	*Hex Bolt 5/16 - 18
18	8794R	Clip	86	1003P	*Lockwasher 5/16
19	634A206	Muffler Guard Assy.	87	5564P	*Phillips Pan Hd.
20	1537P	*Washer 11/32 x 11/16 x 16 Ga.	88	5569P	10 - 24 x 1/2 Ty
21	8058R	Grill Cable	89	3253P	10 - 24 x 3/4 Ty
22	7746R	Grill Brace	90	3008P	*Phillips Pan Hd.
23	80-MS2950A	Engine Crank Twin 18 H.P.	91	1522P	1/4 - 20 x 1/2
24	8296E	Sa. Key 1/4 x 2	92	3011P	*Hex Bolt 5/16 - 18
25	8295E	Ball Retainer Finger	93	504P	*Hex Nut 5/16 - 18
26	634A104	Engine Pulley w/Set Screws	94	4514P	Hex Socket Head
27	634A527	Shaft	95	3023P	5/16 - 18 x 5/8
28	8704H1	Split Guide Weldment	96	1004P	*Lockwasher 3/8
29	4939M	Retainer Spring	97	501P	*Hex Nut 3/8 - 16
30	8011H	Ball Retainer	98	1512P	*Washer 13/32 x 1 - 11
31	634A559	Ball Guard Weldment	99	3164P	Sa. Neck Carriage
32	8228H	Split Spacer	100	347H	1/4 - 20 x 2 - 1/4
33	8778H	Clip	101	3012P	*Hex Bolt 3/8 - 16
34	5531H	"J" Clip	102	17P	*Sa. Neck Carriage
35	8298R	Muffler Guard Bracket	103	3127P	*Hex Bolt 3/8 - 16
36	8250R	Decal - Dash - Lower	104	5557P	Hex Washer Hd. T.
37	8252R	Decal - Maintenance Meter	105	28P	1/4 - 20 x 1/2 Ty
38	634A782	Battery Support Bracket (Inc. Key 39)	106	3035P	*Sa. Neck Carriage
39	7756R	Bearing	107	500P	3/8 - 16 x 1 Gr. 5
40	8006R	Cap	108	3021P	*Hex Bolt 7/16 - 14
41	7728R	Cover - R.H.	109	5384H	*Lockwasher 7/16
42	4378H	Handle Grip	110	53P	*Locknut 3/8 - 16 L
43	7945R	Attachment Clutch Lever	111	53P	*Sa. Neck Carriage
44	8003P	Hanger Weldment R.H. - Front	112	1638P	*Washer 7/32 x 7/16
45	634A785	Hanger Weldment R.H. - Rear	113	1065P	*Lockwasher 3/8
46	7944R	Ball Tightener A.H.	114	501P	*Hex Nut 10 - 24 U
47	7946R	Retain Spring	115	3114P	*Hex Bolt 1/4 - 20
48	7819H	Locknut 3/8 - 24 UNF	116	1509P	*Washer 9/32 x 5/8
49	634A214	Hanger Weldment - Rear	117	2514P	*Cotter Pin 1/4 x 1
50	634A787	Drawer and Weldnuts	118	3027P	*Hex Bolt 3/8 - 16
51	634A355	Hanger Weldment - L.H. - Front	119	3025P	*Hex Bolt 3/8 - 16
52	7931H	Choke Control			
53	4652R	Throttle-Remote Control			
54	7938R	Decal (Shift Pattern)			
55	634A426	Chassis Assy. (Inc. Key 57 & 58)			
56	6466H	Bearing			
57	4766H	Bearing			
58	634A749	Engine Mount Assy.			
59	2665R	Grill Spacer			
60	8402R	Dashboard			
61	8527R	Battery Support			

*STANDARD HARDWARE-PURCH

ROPER 18T GARDEN TRACTOR
MODEL NO. T93261R0

 STEERING AND FINAL DRIVE




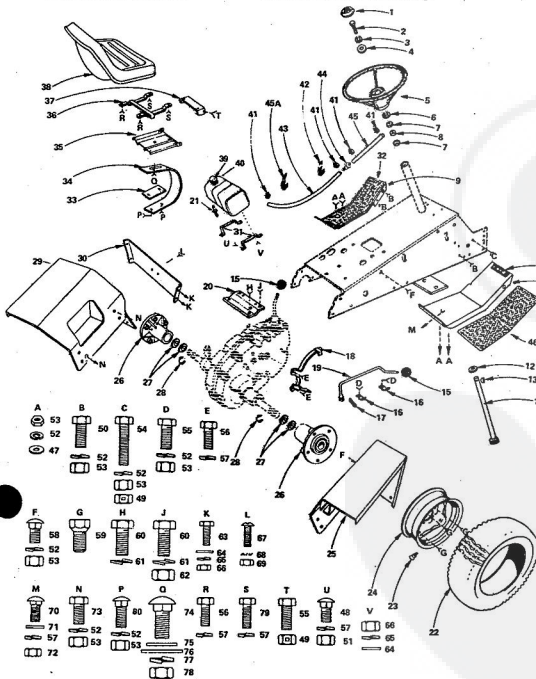


ROPER 18T GARDEN TRACTOR
MODEL NO. T93261R0

STEERING, AND FINAL DRIVE



KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	6961R	Steering Wheel Cap	46	3642R	Foot Rest Pad - R.H.
2	3023P	*Hex Bolt 3/8 - 16 x 1	47	1513P	*Washer 13/32 x 13/16 x 5
3	1004P	*Lockwasher 3/8	48	16P	Sa. Neck Carriage Bolt
4	1559P	*Washer 7/16 x 1 - 10 Ga.	49	5384H	Locknut 3/8
5	3644R	Steering Wheel	50	3137P	*Hex Bolt 3/8 - 16 x 1 - 11
6	5003P	E-Ring	51	504P	*Hex Nut 5/16 - 18 UNC
7	9007H	Cap	52	1004P	*Lockwasher 3/8
8	5949R	Rubber Bushing	53	501P	*Hex Nut 3/8 - 16 UNC
9	634A569	Foot Rest - L.H.	54	3236P	*Hex Bolt Fuel The. 3/8
10	2267R	Deal (Attach. Clutch)	55	3022P	*Hex Bolt 3/8 - 16 x 3/8
11	634A570	Foot Rest - R.H.	56	3010P	*Hex Bolt 5/16 - 18 x 3/4
12	3653P	*Washer 5/16 x 1 - 1/4 x 16 Ga.	57	1003P	*Lockwasher 5/16
13	9858M1	*Woodruff Key 3/16 x 5/8	58	16P	Sa. Neck Carriage Bolt
14	634A626	Steering Shaft and Pinion	59	1304H	Hub Bolt
15	7807R	Control Knob	60	3034P	*Lockwasher 7/16
16	6442H	Shift Rod Bracket	61	1001P	*Hex Bolt 7/16 - 14 x 1
17	2511P	*Cotter Pin 3/16 x 1	62	900P	*Hex Nut 7/16 - 14 UNC
18	634A22A	Ball Guide	63	3003P	*Hex Bolt 1/4 - 20 x 3/4
19	6477H	Range Shift Rod	64	1506P	*Washer 9/32 x 5/8 x 16
20	9459H	Transmission Bracket	65	1002P	*Lockwasher 1/4
21	815R	Fuel Line Fitting	66	900P	*Hex Nut 1/4 - 20 UNC
22	4607R	Rear Tire 23 x 10.50 - 12	67	3073P	*Slid. Truss Hd. Machine
23	795R	Tire Valve			
24	3635R	Rear Wheel	68	1404P	10 - 24 x 1/2
25	634A593	Fender - Rear	69	505P	Ext. Tooth Lockwasher 1
26	634A692	Wheel Hub - Rear	70	5P	*Hex Nut No. 10 - 24 UNF
27	7563R	Axle Thrust Washer	71	1537P	Carriage Bolt Short Shou
28	5981R	E-Ring	72	504P	*Washer 11/32 x 11/16 x 5
29	634A594	Fender - L.H.	73	3021P	*Hex Bolt 5/16 - 18 UNC
30	3625R	Bracket - Tail Light	74	25P	*Hex Bolt 3/8 - 16 x 3/4
31	3656R	Bracket - Fuel Tank	75	1979P	*Washer 3/4 x 1 - 1/8 x 11
32	3641R	Foot Rest Pad - L.H.	76	1509P	*Carriage Bolt 1/2 - 13 x 1
33	8141H	Seat Spring Reinforcement	77	1000P	*Washer 17/32 x 1 - 7/8 x 11
34	5046R	Seat Spring	78	502P	*Lockwasher 1/2
35	634A533	Seat Plate Weldment	79	902P	*Hex Nut 1/2 - 13
36	634A532	Seat Bracket Weldment	80	8198P	*Hex Bolt 5/16 - 18 x 7/8
37	2663R	Brackets - Seat Pivot	81	61P	*Sa. Nk. Shd. Car. Seal.
38	4889R	Seat			Owners Manual
39	7280R	Fuel Gauge			
40	2662R	Fuel Tank			
41	6998R	Clamp - Fuel Line			
42	2751R	Clip - Fuel Line			
43	7834R	Fuel Line			
44	7741R	In-Line Filter			
45	7833R	Fuel Line			
45A	9297R	Clip-Fuel Line			

    *STANDARD HARDWARE-PURCHASE

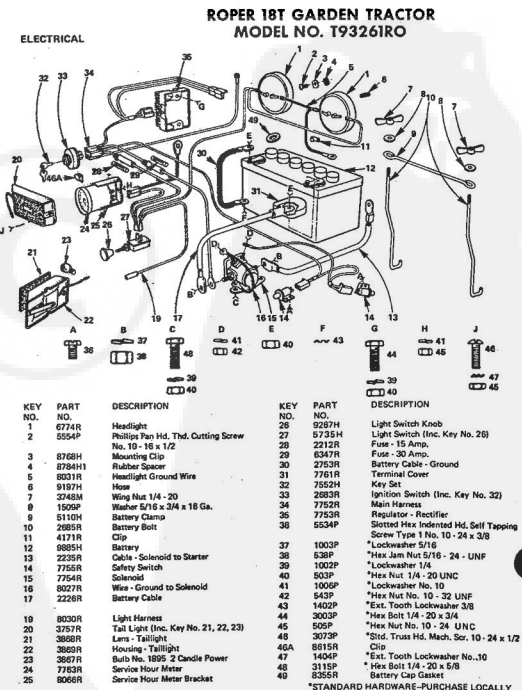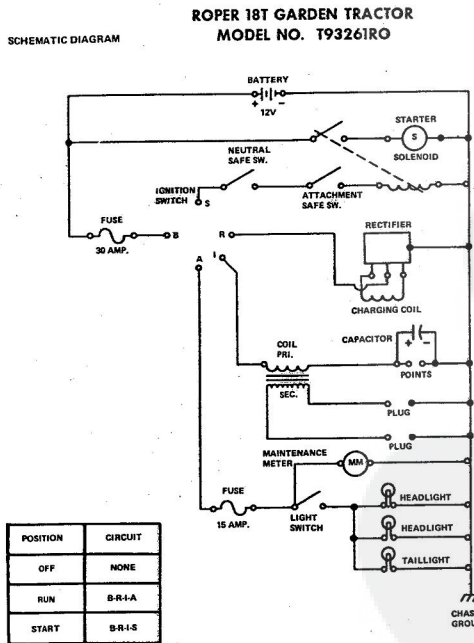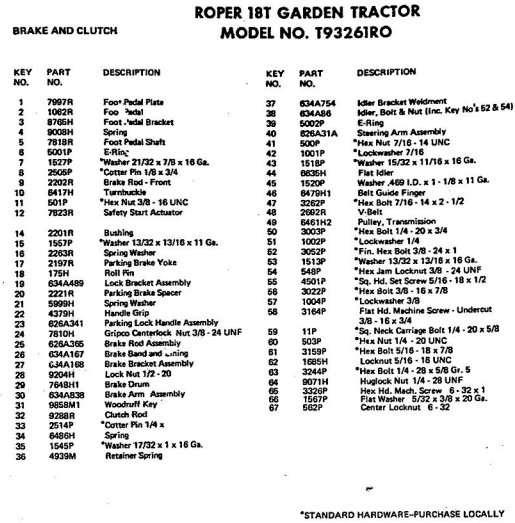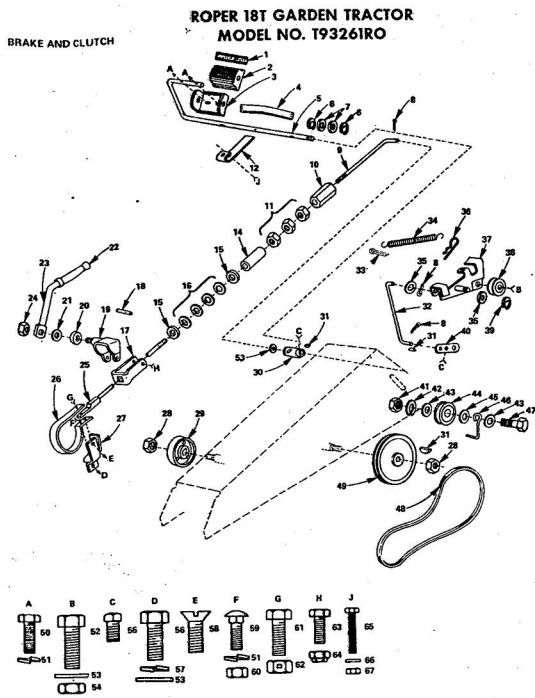

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**

  TRANSAXLE

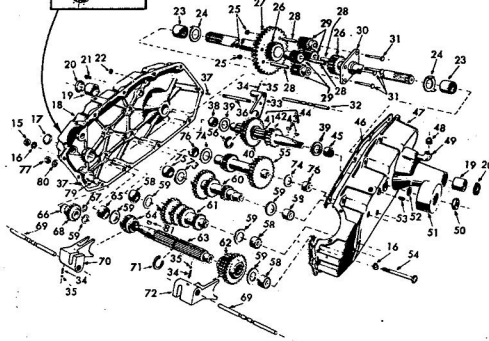

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**


TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	833A7B	Transaxle Assembly less	38	8118M	Needle E
2	4213H1	Brake Drum	39	6266H	Thrust B
3	4869H1	Gear Shift Lever Straight	40	633A14	High-Low Hub
4	1002P	Gear Shift Cap	41	6221H	3rd Redu
5	3159P	Hex Bolt 3/16-18 x 7/8	42	8659H	4th Redu
6	6254H1	Lockwasher 5/16	43	2228M	Woodruff
7	6259H	Gear Shift Ball Cover	44	633A32	3rd Redu
8	4924C	Shift Lever Guide Ball	45	8119M	Needle B
9	1544P	Spring	46	6275H	Gasket-G
10	8105R	Washer 15/32 x 5/8 x 1/4 10 Ga.	47	633A27	Gear Gas
11	1525P	Washer 9/16 x 15/16 x 1/11 Ga.	48	4002P	* Pipe Plug
12	3205P	*Center 1/8 x 3	49	6063P	Lock Nut
13	633A19	Gear Shift Gate and Reinforce-ment	50	6264P	* Pipe Plug
14	6274H	Gasket-Shift Ball Cover	51	7648H1	Break Dr
15	504P	Hex Nut 3/16-18	52	6271H	Oil Seal
16	1007P	Gear Case, Reverse Idler Shaft and Bearings R.H.	53	4001P	* Pipe Plug
17	6270H	Sintered Iron Bearing	54	3087P	Grade 5
18	633A20A	Oil Seal	55	633A33	4th Redu
19	8003R	Pressure Relief Valve	56	6276H	5th Redu
20	7382R	Oil Seal	58	4892H	Needle B
21	5853H	Needle Bearing	59	1700H	Thrust Be
22	6269H	Needle Bearing	60	633A31	2nd Redu
23	3039R	Needle Bearing	61	633A30	Speed Ch
24	6254H	Axle Thrust Washer	62	633A11	Intermedi
25	7810H	Centerlock Gripco Nut 3/8-24	63	6218H	Pinions
26	633A73	Axle Shaft and Gear	64	6231H	Input Sha
27	8662P	Final Drive Gear	65	4894H	Low Spee
28	6252H1	Bushing-Differential Pinion	66	7392H	Reverse I
29	8657H	Differential Pinion	67	5001P	E-Ring
30	6262H1	Differential Carrier	68	6216H	Shift For
31	3056P	Hex Bolt 5/8-24 x 3/4	69	6352H	Shift For
		1" Thread Length	70	4726H	Snap Ring
32	6217H	High-Low Range Shift Fork	71	4219H	Shift For
		Shift	72	4219H	Shift For
33	6260H	Shift Fork High-Low Range	73	7395H	Thrust Be
34	6272H	Support Shift Fork Detent	74	7396H	Thrust Be
35	7392M	Steel Ball	75	7396H	Thrust Be
36	6212H	High-Low Range Shaft	76	8117M	Needle Be
37	6271H	Dowel Pin	77	5411P	Needle B
			78	7384P	Reverse I
			79	1167R	Sealing W
			80	9658H1	Woodruff E
			81		

*STANDARD HARDWARE-PURCHASE

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**

 FRONT AXLE

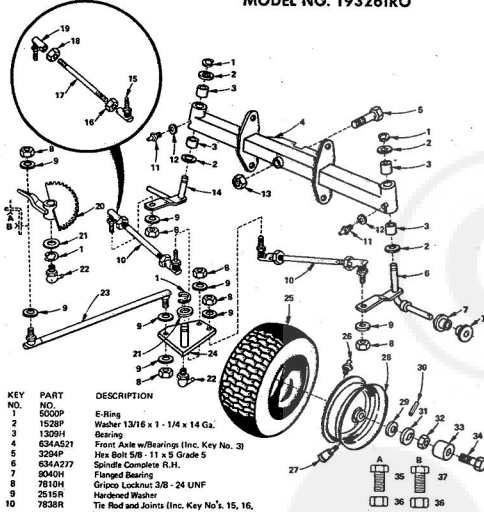

KEY NO.	PART NO.	DESCRIPTION
1	5000P	E-Ring
2	1528P	Washer 13/16 x 1-1/4 x 14 Ga.
3	1309H	Bearing
4	634A621	Front Axle w/Bearings (Inc. Key No. 3)
5	3204P	Hex Bolt 5/8-11 x 5 Grade 5
6	634A277	Spindle Complete R.H.
7	8040H	Flanged Bearing
8	7810H	Gripco Locknut 3/8-24 UNF
9	2516R	Hardened Washer
10	7855R	Tie Rod and Joints (Inc. Key No's. 15, 16, 17, 18 & 19)
11	8655M	Grease Fitting
12	1506P	Washer 9/32 x 1/2 x 14 Ga.
13	4764H	Huglock Nut 5/8 x 11 UNC
14	634A278	Spindle Complete L.H.
15	8515R	Tie Rod Joint (R.H. Thread)
16	856P	Hex Jam Nut 1/2-20 UNF
17	634A819	Tie Rod and Nut (Inc. Key No's. 16 & 18)
18	559P	Hex Jam Nut 1/2-20 (L.H. Thread)
19	8514R	Tie Rod Joint (L.H. Thread)
20	634A813	Steering Gear Sector and Arm
21	1552P	Washer 49/64 x 1-1/4 x 16 Ga.
22	8642M	Grease Fitting
23	7827R	Drag Link and Joints
24	634A8W	Steering Ball Crank Weldment
25	3038R	Front Tire - Tubesize 16 x 6.50-8


KEY NO.	PART NO.	DESCRIPTION
26	8655M	Grease Fitting 1/4-28 Taper Thrd.
27	795R	Tire Valve
28	3638R	Front Wheel (Inc. Key No's. 7 and 28)
29	1562P	Washer 25/32 x 1-1/2 x 16 Ga.
30	8785H	*Roll Pin 5/32 x 1
31	8785H	Wear Washer
32	4831H	Elastic Nut 3/4-10 UNF
33	8783H	Dust Cap-Outer
34	3089P	Hex Bolt 5/16-18 x 1/2
35	3032P	*Hex Bolt 3/8-24 x 1
36	515P	*Hex Nut 3/8-24 UNF
37	3234P	*Hex Bolt 3/8-24 x 1-1/4

*STANDARD HARDWARE-PURCHASE LOCALLY

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**

FUEL SYSTEM GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

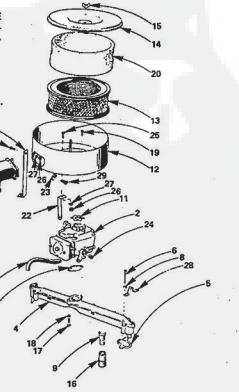


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	140-1169	Tube, Air Intake (Air Cleaner to Blower Housing)	15	805-0020	Nut, Wing - Air C
2	142-0568	TCarburator, Gasoline (With Integral Fuel Pump)	16	505-0815	Nipple, Exhaust (1
3	145-0438	*Gasket, Carburetor Mounting	17	800-0023	Screw, Hex Head C
4	154-1468	Manifold, Intake	18	850-0040	Washer, Spring Load
5	154-1744	*Gasket, Intake - Manifold	19	815-0377	Screw, Round Head
6	800-0034	Screw, Hex Head Cap (5/16-18 x 2-1/4")	20	140-1259	Washer, Air Clean
7	140-1168	Support, Air Cleaner	21	140-1313	Bracket, Air Clean
8	850-0045	Washer, Spring Lock (5/16")	22	518-0308	Clip, Bracket, Cable
9	105-1365	Invert, Exhaust Pipe	23	800-0003	Screw, Hex Head C
10	800-0740	Hose, Fuel Pump Vacuum	24	850-0001	Nut, Hex - 5/8x1 1/2
11	140-1215	*Gasket, Air Cleaner Mts.	25	853-0013	Washer, Lock - ET (
12	140-1213	Housing, Air Cleaner	26	403-1021	Bracket, Lifting
13	140-1216	Element, Air Cleaner	27	6592P	Shk. Pin Hd. Set T
14	140-1168	Cover, Air Cleaner	28	105-1365	No. 8 x 3/4

1 - See separate group for component
* - Included in Gasket Kit, page 29.

**ROPER 18T GARDEN TRACTOR
MODEL NO. T9326IRO**

 CARBURETOR PARTS GROUP

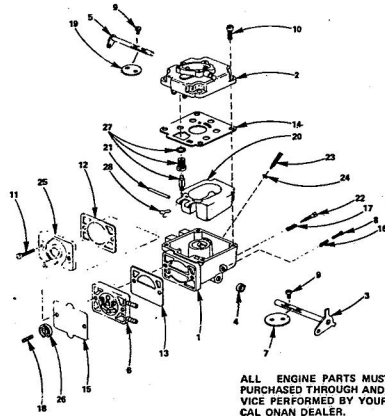


ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	142-0568	Carburetor Assembly, Complete	17	142-0282	*Spring, Idle Needle
2	142-0574	Body Assembly, Lower	18	142-0545	*Spring, Pump Diaphragm
3	142-0534	*Shaft Assembly, Throttle	19	142-0546	Fly, Choke
4	142-0535	*Packing, Shaft	20	142-0547	Float and Lever Assembly
5	142-0536	*Shaft Assembly, Choke	21	142-0548	*Shaft, Float Lever
6	142-0537	*Valve Plate Assembly	22	142-0018	*Needle, Idle
7	142-0538	Fly, Throttle	23	142-0549	Needle Assembly, Power
8	142-0564	Screw, Throttle Stop	24	142-0550	*Gasket, "O" Ring
9	142-0534	*Screw, Fly Mounting	25	142-0551	Cover, Pump
10	142-0539	Screw, Bowl Cover Mounting	26	142-0552	*Plate, Pump Spring
11	142-0540	Screw, Pump Cover	27	142-0553	*Valve Assembly, Float
12	142-0541	*Gasket, Base to Diaphragm	28	142-0554	Cup, Float Valve
13	142-0542	*Gasket, Plate to Base	142-0571		*Gasket Set (Includes Parts Marked †)
14	142-0512	*Gasket, Sleeve Assembly to Base	142-0570		Repair Kit (Includes Parts Marked †)
15	142-0555	*Diaphragm, Pump			
16	142-0544	Spring, Throttle Stop Screw			

† - Included in 142-0571 Gasket Set.
* - Included in 142-0570 Repair Kit.

**ROPER 18T GARDEN TRACTOR
MODEL NO. T9326IRO**

 **GOVERNOR, STARTER,
CHARGING ALTERNATOR AND
BLOWER HOUSING GROUP**

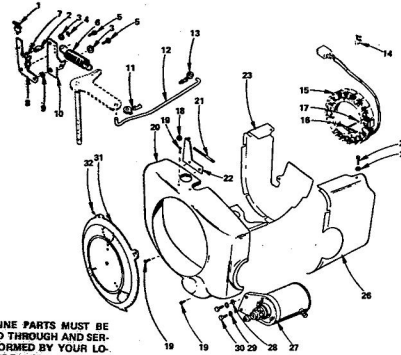


ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	518-0178	Cable, Throttle Cable	19	815-0261	Screw, Hex Head Cap (1/4" x 20 x 7/16")
2	152-0155	Swivel, Throttle Cable	20	134-2991	Housing, Blower
3	628-0214	Washer, Flat - Steel (17/64" I.D. x 3/2" O.D. x 1/16" Thick)	21	150-1418	Stud, Governor
4	618-0050	Flt. Cutter - Swivel Mounting	22	150-1433	Bracket, Governor Control
5	621-0010	Screw, Hex Cap - Flange Locking (1/4" x 20 x 1/2")	23	134-2899	Housing, Cylinder Air - Left
6	150-1214	Spring, Governor	24	815-0250	Screw, Hex Head Cap (1/4" x 20 x 3/8")
7	815-0104	Screw, Round Head (No. 8 - 32 x 5/16")	25	526-0021	Washer, Flat - Steel (17/64" I.D. x 3/4" O.D. x 1/16" Thick)
8	150-1343	Bracket, Governor Mounting	26	134-2888	Housing, Cylinder Air - Right
9	150-1289	Bushing, Governor Control	27	191-0933	Starter, 12 Volt (For Components see separate group)
10	150-1345	Arm, Governor Control	28	526-0113	Washer, Flat - Steel (11/32" I.D. x 1" O.D. x .302" Thick)
11	870-0278	Cup, Governor Control Rod to Governor Arm	29	800-0512	Screw, Hex Head Cap (5/16" x 18 x 1")
12	150-1350	Rod, Governor Control	30	850-0445	Screw, Hex Head Cap (5/16" x 18 x 1")
13	618-0004	Cup, Governor Control Rod to Calumator	31	134-3213	Guard, Blower Housing
14	187-0188	Cup, Alternator Lead Support	32	815-0378	Screw, Ind. Hex Head w/E.T. (No. 14 x 1/2")
15	191-1102	Stator, Charging Alternator			
16	813-0108	Screw Round Head - Steel (No. 10 - 32 x 1 - 1/2")			
17	850-0030	Washer, Spring Lock (No. 10)			
18	870-0131	Nut, Hex (No. 10 - 32)			

**ROPER 18T GARDEN TRACTOR
MODEL NO. T9326IRO**

 IGNITION GROUP

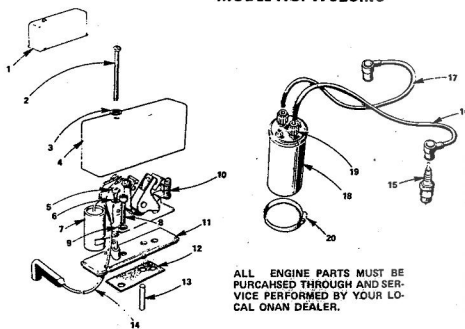


ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

KEY NO.	PART NO.	DESCRIPTION
1	180-1210	Box Assembly, Breaker (Includes Parts Marked †)
2	812-0108	*Screw, Machine - Round Head (No. 10 - 14 x 1 - 1/2")
3	526-0008	*Washer, Flat (13/64" I.D. x 7/16" O.D. x 1/32" Thick)
4	180-1176	*Cover, Breaker Box
5	815-0258	*Screw, Tapping - Hex Head (No. 8 - 32 x 5/16")
6	850-0025	*Washer, Lock - Spring (No. 8)
7	312-0198	Condenser, Ignition
8	802-0834	*Screw, Cap - Socket Head (1/4" x 3/8")
9	850-0038	*Washer, Lock - Spring - High Collar (1/4")
10	180-1183	*Point Assembly, Breaker
11	180-1172	*Base, Breaker Box
12	180-1150	*Gasket, Breaker Box
13	180-1151	Plunger, Breaker Point Assembly
14	338-2232	Lead, Breaker Points to Coil
15	167-0241	Plug, Spark
16	167-1483	Cable, Spark Plug (19")
17	167-1462	Cable, Spark Plug (16 - 3/4")
18	166-0639	Coil, Ignition
19	166-0604	Nut, Coil Cable (Part of 166-0639 Coil)
20	503-0311	Clamp, Coil Mounting

† - Parts included in 180-1210 Breaker Box Assembly.
* - Included in Gasket Kit, page 25.

**ROPER 18T GARDEN TRACTOR
MODEL NO. T9326IRO**

 STARTER PARTS GROUP

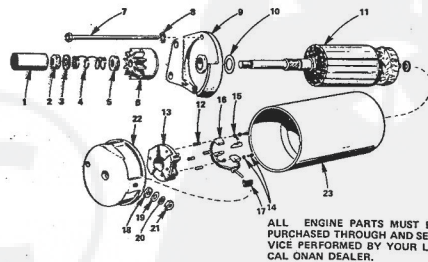

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.


KEY NO.	PART NO.	DESCRIPTION
1	191-0933	Starter, 12 Volt (Complete)
2	191-1034	Cover, Dust
3	1E1-1486	Nut, Stop
4	191-1025	Spring, Anti-drift
5	191-1947	Spacer, Dust Cover
6	191-1026	Drive Assembly
7	191-1048	Screw, Hex Cap
8	850-0040	Washer, Lock
9	191-1037	Cap, Assembly, Drive End
10	191-1038	Washer, Armature Thrust
11	191-1039	Armature
12	▲	1" Spring, Brush
13	▲	1" Brush Holder
14	▲	1" Screw and Lockwasher
15	▲	1" Brush, Ground
16	▲	1" Stud and Brush Assembly, Input
17	▲	1" Bushing, Insulation - Input Stud
18	▲	Washer, Insulation - Input Stud
19	▲	Washer, Flat - Input Stud
20	▲	Washer, Lock - Input Stud
21	▲	Nut, Securing - Input Stud
22	191-1040	Cap Assembly, Commutator (Includes Parts Marked †)
23	▲	Housing, Starter Motor
	191-1041	Repair Kit, Brush, Spring and Stud (Includes Parts Marked †)

† - Included in the 191-1040 Cap Assembly.
▲ - Included in the 191-1041 Brush, Spring and Stud Kit.
▲ - Not Sold Separately

ROPER 18T GARDEN TRACTOR MODEL NO. T9326IRO

CYLINDER BLOCK GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

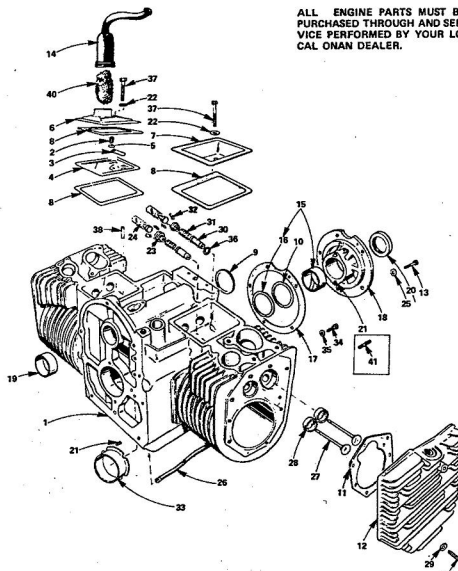

ROPER 18T GARDEN TRACTOR MODEL NO. T9326IRO

CYLINDER BLOCK GROUP


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	110-2387	Block Assembly, Cylinder (Includes Parts Mated To)	28		INSERT, VALVE SEAT
2	123-1174	Spring, Breather Valve		110-1824	EXHAUST
3	123-1175	Valve, Breather		110-1824-02	.002" Oversize
4	123-1173	Baffle, Breather		110-1824-05	.005" Oversize
5	526-0018	Washer, Flat - Steel (17/64" L.D. x 5/8" O.D. x 1/16" Thick)		110-1824-10	.010" Oversize
6	110-2274	Cover, Valve Compartment (L.H.)		110-1824-25	.025" Oversize
7	110-1879	Cover, Valve Compartment (R.H.)			INTAKE
8	110-1821	xGasket, Valve Cover		110-0197	TSstandard
9	517-0048	Flg, Extension - Camshaft		110-0197-02	.002" Oversize
10	104-0776	TShim, Rear Bearing Plate (.005")		110-0197-05	.005" Oversize
11	110-2287	xGasket, Cylinder Head		110-0197-10	.010" Oversize
12		HEAD, CYLINDER		110-0197-25	.025" Oversize
	110-2273	Right Side (No. 2 Cylinder)	29	526-0122	Washer, Flat - Steel (11/32" L.D. x 10 Gauge)
	110-2272	Left Side (No. 1 Cylinder)	30	110-1807	TGudge, Valve
	800-0591	Screw, Hex Head Cap - Steel (3/8 - 16 x 1 - 1/4")	31	110-0639	Spring, Valve
13		BEARING, CRANKSHAFT - REAR (INCLUDES THRUST WASHER)	32	110-0629	Lock, Valve and Spring Retains
	101-0450	Standard	33		BEARING, CRANKSHAFT - F (FLANGES)
	101-0450-02	.002" Undersize		101-0432	TSstandard
	101-0450-10	.010" Undersize		101-0432-02	.002" Undersize
	101-0450-20	.020" Undersize		101-0432-10	.010" Undersize
	101-0450-30	.030" Undersize		101-0432-20	.020" Undersize
	101-0450-30	.030" Undersize		101-0432-30	.030" Undersize
16	104-0575	TWasher, Crankshaft Bearing Thrust	34	800-0046	Screw, Hex Head Cap (3/8 - 16)
17	101-0415	xGasket, Bearing Plate	35	526-0066	Washer, Flat - Copper (25/64" x 3/4" O.D. x 1/16" O.D.)
18	101-0439	TPlate, Bearing (Excludes Bearings)	36	110-0068	xGasket, Valve Guide (Intake)
19	101-0405	Tbearing, Camshaft (Precision)	37	800-0010	Screw, Hex Head Cap (1/4 - 20 x 1 - 3/4")
20	509-0041	TSeal, Bearing Plate	38	149-1299	Tube, Fuel Pump Vacuum
21	510-0072	Tpin, Main Bearing Stop	39	800-0640	SCREW, HEX HEAD CAP (5/16 - 18 x 1 - 5/8)
22	526-0063	Washer, Flat - Copper (17/64" L.D. x 7/16" O.D. x 1/32" Thick)	40	800-0541	5/16 - 18 x 2"
23	110-0904	Rotorcap, Valve	41	123-0865	Filter, Breather Tube
24		FAJWET, VALVE		520-0820	Stud, Cylinder Block Wet Hole (Lower)
	115-0006	Standard			
	115-0006-02	.002" Oversize			
	115-0006-05	.005" Oversize			
	850-0050	TWasher, Lock (3/8")			
26	120-0735	Ttube, Crankcase Oil			
27	110-1808	Intake			
	110-1809	Exhaust			

1 - Included in 110-2387 Cylinder Block Assembly.
 * Replacement Front Flange Bearing replaces unitflange bearing and thrust washer.
 x - Included in Gasket Kit 188-0130.

ROPER 18T GARDEN TRACTOR MODEL NO. T9326IRO

CRANKSHAFT, FLYWHEEL, CAMSHAFT AND PISTON GROUP

 ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL ONAN DEALER.

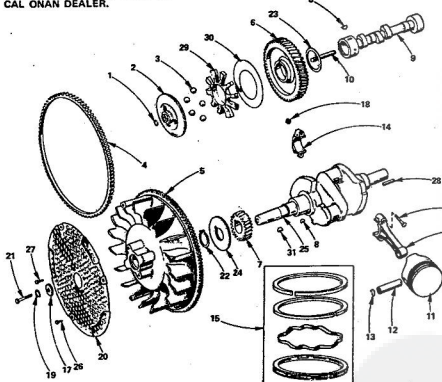


ROPER 18T GARDEN TRACTOR MODEL NO. T9326IRO

CRANKSHAFT, FLYWHEEL, CAMSHAFT AND PISTON GROUP.

KEY NO.	PART NO.	DESCRIPTION
1	150-0078	Ring, Camshaft Center Pin
2	150-1116	Cap, Governor
3	510-0015	Ball, Fly - Governor
4	104-0778	Gear, Ring - Flywheel
5	134-3309	Flywheel (Includes Ring Gear and Magnet Ring)
6	105-0332	Gear, Camshaft (Includes Flyball Spacer and Plate)
7	104-0032	Gear, Crankshaft
8	515-0001	Key (1/2" Diameter x 1/8")
9	105-0462	Camshaft (Includes Center Pin)
10	150-0075	Pin, Camshaft Center
11		PISTON AND PIN (INCLUDES RETAINING RINGS)
	112-0143	Standard
	112-0143-05	.005" Oversize
	112-0143-10	.010" Oversize
	112-0143-20	.020" Oversize
	112-0143-30	.030" Oversize
	112-0143-40	.040" Oversize
12	112-0122	Pin, Piston
13	518-0311	Ring, Piston Pin Retaining
14		ROD ASSEMBLY, CONNECTING
	114-0247	Standard
	114-0247-10	.010" Oversize
	114-0247-20	.020" Oversize
	114-0247-30	.030" Oversize
15		RING SET, PISTON
	113-0186	Standard
	113-0186-05	.005" Oversize
	113-0186-10	.010" Oversize
	113-0186-20	.020" Oversize
	113-0186-30	.030" Oversize
	113-0186-40	.040" Oversize
16	114-0228	Bolt, Special - Connecting Rod
17	526-0017	Washer, Flat - Steel (15/32" L.D. x 1 - 1/4" O.D. x 1/4" Thick)
18	870-0137	Nut, Locking - Connecting Rod Cap
19	860-0055	Washer, Spring Lock (7/16")
20	134-3212	Guard, Flywheel
21	104-0170	Screw, Hex Head Cap (7/16 - 14 x 4")
22	518-0014	Ring, Retaining - Crankshaft Gear Washer
23	105-0004	Washer, Camshaft Gear Thrust
24	104-0043	Washer, Crankshaft Gear Retainer
25	104-0919	Crankshaft
26	821-0010	Screw, Hex Head Cap - Locking Flange (1/4 - 20 x 1/2")
27	821-0014	Screw, Hex Head Cap - Locking Flange (5/16 - 18 x 1/2")
28	515-0103	Key, Crankshaft Stub (1/4 x 1/4 x 2)
29	150-1267	Spacer, Governor Flywheel
30	150-0077	Plate, Governor Flyball
31	515-0227	Key Kit

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**

 GEAR COVER, OIL BASE AND
OIL PUMP GROUP

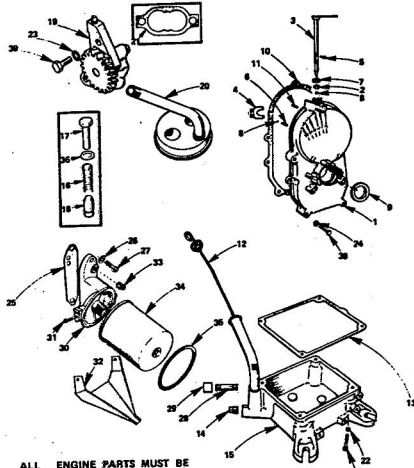

ALL ENGINE PARTS MUST BE
PURCHASED THROUGH AND SER-
VICE PERFORMED BY YOUR LO-
CAL ONAN DEALER.

**ROPER 18T GARDEN TRACTOR
MODEL NO. T93261RO**

GEAR COVER, OIL BASE AND
OIL PUMP GROUP

KEY NO.	PART NO.	DESCRIPTION
1	103-0498	Cover Assembly, Gear (Includes Parts Mach'd *)
2	610-0105	*Bearing, Governor Shaft
3	160-1470	*Shaft and Arm Assembly, Governor
4	160-1157	*Yoke Governor Shaft
5	815-0045	*Screw, Yoke Retaining
6	818-0130	*Pin, Governor Cap Stop
7	628-0028	*Seal, Oil - Governor Shaft
8	810-0014	*Ball, Bearing - Governor Shaft
9	808-0040	*Seal, Gear Cover
10	103-0408	*Gasket, Gear Cover
11	818-0141	Pin, Gear Cover Mounting (5/16 x 7/8")
12	123-1282	Cap and Indicator, Oil Fill
13	102-0992	*Gasket, Oil Base Mounting
14	505-0056	Plug, Oil Drain
15		BASE, OIL
16	102-0741	For Engines With Extended Oil Drain
17	120-0140	Spring, Oil By-Pass Valve
18	801-0050	Screw, Hex Head Cap (3/8 - 24 x 1") - Oil By - Pass
19	120-0386	Valve, Oil By - Pass
20	120-0491	Pump, Oil - Complete (NOTE: Internal parts not sold separately)
21	120-0713	Intake, Oil Pump (Includes: Cap, Screws and Pipe)
22	120-0181	*Gasket Kit, Oil Pump
23	800-0050	Washer, Spring Lock (3/8")
24	628-0085	Washer, Flat - Copper (21/64" I.D. x 8/16" O.D. x 1/16" Thick)
25	122-0021	*Gasket, Oil Filter Adapter
26	628-0085	Washer, Flat - Copper (21/64" I.D. x 8/16" O.D. x 1/16" Thick)
27	800-0028	Screw, Hex Head Cap (5/16 - 18 x 1")
28	505-0176	Nipple, Pipe - Oil Drain (1/2 x 3 - 1/2")
29	505-0158	Cap, Pipe (1/2")
30	122-0020	Adapter, Oil Filter
31	815-0194	Screw, Hex Head (No. 10 - 32 x 3/8")
32	122-0380	Drain, Oil Filter
33	502-0050	Plug, Oil Filter Adapter
34	122-0408	Filter, Oil
35	122-0347	*Seal, Air - Oil Filter
36	628-0086	Washer, Flat - Copper (25/64" I.D. x 8/16" O.D. x 1/16" Thick) - By - Pass Valve
37	800-0056	Screw, Hex Head Cap (3/8 - 16 x 2 - 1/2")
38	800-0032	Screw, Hex Head Cap (5/16 - 18 x 1 - 3/4") - Gear Cover Mounting
39	800-0545	Screw, Hex Head Cap (5/16 - 18 x 2 - 3/4") - Gear Cover Mounting
38	800-0007	Screw, Hex Head Cap (1/4 - 20 x 1")

* Included in Gear Cover Assembly.
* Included in Gasket Kit, page 29.