

# MANUAL FOR TRACTORLIFT WITH SCREW SYSTEM XVS205

(Max capacity 205 kg)

## A – IMPORTANT INFORMATION

The lift XVS 205 is made for laterally lifting of tractors and mowers and this with the sole purpose of simplifying maintenance (cleaning the deck).

Every other application will not be covered by the distributor's responsibility.

## B – INSTRUCTIONS FOR USE



Never slide yourself underneath the tractor !

- Deploy the screw vertically and place the sphere shaped end in the hole in the floor structure. Fix this with the « U » piece and the 3 screws (see illustration on the right).
- Use only when engine is shut off, power is cut and on firm and stable ground.
- Remove grass collector from tractor if necessary
- Always place the lift with the screw system at the air filter side of the engine.
- Keep children at a distance.
- To avoid all risk of incorrect handling or movement (rocking effect) it is advised to place your tractor next to a wall before lifting.
- Models with a central mowerdeck : place the rear wheels onto the central part of the lift. Models with front-cut deck should be placed with the front wheels onto the lift.
- Lift de mower whilst turning the handle clockwise. This must be done with engine shut off and handbrake on..
- Do not place your feet on the floor structure during lifting.
- In high position, fix the lift with the security supports and secure the highest wheel with a strap (not supplied) to the structure.



## C – MAINTENANCE

Grease the screw structure regularly. Material to be kept from bad weather conditions..

