


shindaiwa

INSTRUCTION MANUAL

394

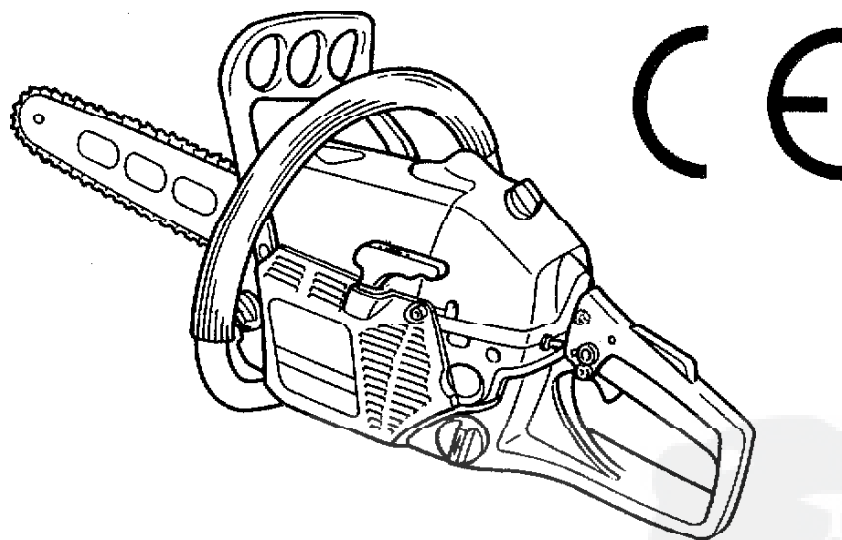

WARNING!



Read this manual and familiarize yourself with its contents.

This machine is designed for cutting wood and timber. Do not use this machine for other purposes.

Minimize the risk of injury to yourself and others.

Always wear eye protection when operating this machine.

Do not operate or service this machine unless you clearly understand this manual.

Keep this manual at a particular place so that you can reread it whenever you have a question about its use.

CONTENTS

1	ATTENTION STATEMENTS	2
2	LABELS AND SYMBOLS	2
3	PRODUCT DESCRIPTION	3
4	TECHNICAL SPECIFICATION	4
5	SAFETY PRECAUTIONS	5
6	INSTALLING THE GUIDE BAR AND SAW CHAIN	7
7	ADJUSTING THE SAW CHAIN	8
8	FILLING FUEL AND CHAIN OIL	9
9	STARTING AND STOPPING THE ENGINE	10
10	CARBURETOR ADJUSTMENTS	12
11	CHAIN BRAKE	13
12	CUTTING WITH THE SAW	14
13	ROUTINE MAINTENANCE	16
14	SAW CHAIN SHARPENING	18
15	TROUBLESHOOTING	20
16	DECLARATION OF CONFORMITY	23



1. ATTENTION STATEMENTS

Through out this manual are special “attention statements” surrounded by boxes and preceded by the triangular Attention Symbol.



WARNING!

A statement preceded by the word “WARNING” contains information that should be acted upon to prevent serious body injury.



CAUTION!

A statement preceded by the word “CAUTION” contains information that should be acted upon to prevent machine damage.

Additional attention statements that are not preceded by the Attention Symbol are;

IMPORTANT!

A statement preceded by the word “IMPORTANT” is one that possesses special significance.

NOTE:

A statement preceded by the word “NOTE” contains information that is handy to know and may make your job easier.

2. LABELS AND SYMBOLS

The labels and symbols indicated on the machine mean as follows.



Read and follow the operator’s manual. Failure to do so could result in serious injury.



BE AWARE OF KICKBACK!

Kickback may force the bar up and back toward the operator with a lightning-fast reaction! Kickback can occur whenever the tip of the guide bar touches an object while the saw is operating.



Wear head, eye and hearing protection when operating this machine.

Chain oil filter opening



Fuel filler opening




Choke



Chain brake function



3. PRODUCT DESCRIPTION

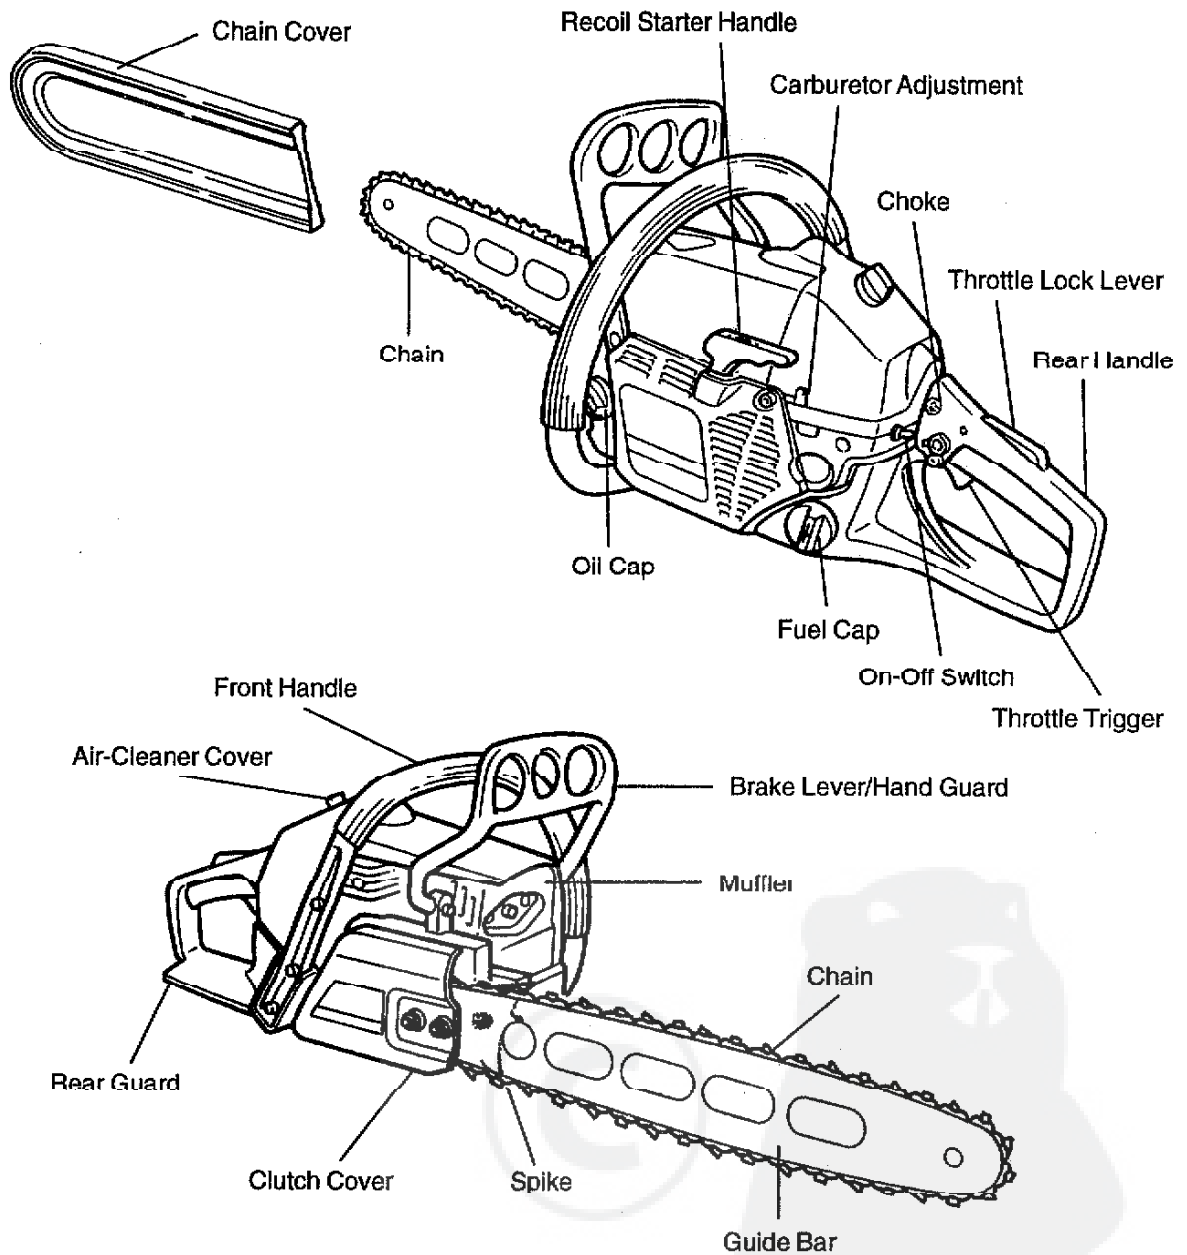

Using the accompanying illustrations as a guide, familiarize yourself with your machine and its various components.

Understanding your machine helps ensure top performance, long service life, and safer operation.



WARNING!

Do not make unauthorized modifications or alterations to any of these units or their components.

4. TECHNICAL SPECIFICATION

Model Name	394
Engine Type	2-cycle, Vertical-cylinder, Air-cooled
Displacement	38.9 cc
Bore × Stroke	40 × 31 mm
Maximum Power Output*1)	1.94 kW
Recommended Max rpm*2)	14,000 min ⁻¹
Recommended Idle rpm	3,000 min ⁻¹
Fuel	Gasoline-2-cycle Engine Oil Mixture-25:1
Fuel Tank Capacity	460 cc
Oil Tank Capacity	250 cc
Recommended Bar Size	14"-16"
Recommended Chain Type	Blount 21 BP
Recommended Bar Type	Sprocket-Nose Bar
Number of Spur Tooth	7
Type of Carburetor	Diaphragm
Ignition	Electronic Ignition System
Spark Plug	NGK BPMR7A
Starting	Recoil Starter
Power Transmission	Automatic Centrifugal Clutch
Chain Lubrication	Automatic, adjustable flow rate
Handle	Anti-vibration
Safety Devices	in conformity with the CE Mark regulations
Weight (less bar/chain)	4.3 kg
Sound Power Level*3)	105.8 dB (A)
Sound Pressure Level*4)	98.1 dB (A)
Vibration Level*5)	Front Handle: 3.52 m/s ² , Rear Handle: 6.79 m/s ²

*1) measured in accordance with ISO 7293

*2) with bar and chain

*3) measured in accordance with ISO/DIS 9207.2

*4) measured in accordance with EN 7182

*5) measured in accordance with ISO 7505

5. SAFETY PRECAUTIONS



WARNING!

Read all instructions carefully before operating your Shindaiwa chain saw.

1. Guard against KICKBACK. KICKBACK is the upward motion of the guide bar that occurs when the saw chain at the nose of the guide bar contacts an object. KICKBACK can lead to dangerous loss of control of the chain saw. To reduce KICKBACK:
 - a) With a basic understanding of KICKBACK, you can reduce or eliminate the element of surprise. Sudden surprise contributes to accidents.
 - b) Keep a good firm grip on the saw with both hands, the right hand on the rear handle, and the left hand on the front handle, when the engine is running. Use a firm grip with thumbs and fingers encircling the chain saw handles. A firm grip will help you reduce kickback and maintain control of the saw. Don't let go.
 - c) Only use replacement bars and chains specified by the manufacturer.
 - d) Do not overreach.
 - e) Do not let the nose of the guide bar contact a log, branch, ground, or any other obstruction.
 - f) Cut at high engine speeds.
 - g) Do not cut above shoulder height.
 - h) Follow manufacturer's sharpening and maintenance instructions for the saw chain.
2. Do not operate a chain saw when you are fatigued.
3. Use safety footwear; snug-fitting clothing; protective gloves; and eye, hearing and head protection devices.
4. Use caution when handling fuel. Move the chain saw at least 10 feet (3 m) from the fueling point before starting the engine.
5. Operate the chain saw only in well-ventilated areas.
6. Do not start cutting until you have a clear work area, secure footing, and a planned retreat path from the falling tree.
7. Before you start the engine, make sure that the saw chain is not contacting anything.
8. Do not allow other persons to be near the chain saw when starting or cutting with the chain saw. Keep bystanders and animals out of the work area.
9. Keep all parts of your body away from the saw chain when the engine is running.



WARNING! (continued)

10. Do not operate a chain saw that is damaged, is improperly adjusted, or is not completely and securely assembled. Do not run without clutch cover installed. Be sure that the saw chain stops moving when the throttle trigger is released.
11. Shut off the engine before setting it down.
12. Use extreme caution when cutting small size brush and saplings because slender material may catch the saw chain and be whipped toward you or pull you off balance.
13. When cutting a limb that is under tension, be alert for springback so that you will not be struck when the tension in the wood fibers is released.
14. Do not operate a chain saw in a tree unless you have been specifically trained to do so.
15. Open fuel cap slowly to release any possible build-up of pressure. Do not refuel a hot saw. Allow to cool before refueling.
16. Operation of a chain saw with faulty or damaged antivibration mounts can lead to higher vibration. Long-term vibration can cause damage to the operator's hands. For lowest vibration, replace damaged mounts immediately. Mounts hardened due to age or weathering should also be replaced.
17. Prolonged exposure to excessive noise is fatiguing and could lead to impaired hearing. The use of proper ear protection can reduce this potential hazard.
18. Carry the chain saw with the engine stopped, the guide bar and saw chain to the rear, and the muffler away from the body.
19. When transporting your chain saw, use the appropriate chain cover.
20. Keep chain properly adjusted and sharpened.
21. Young children and persons unfamiliar with chain saw use should not operate this machine.
22. When repairing or servicing, use only recommended Shindaiwa replacement parts.
23. Do not operate this or any chain saw without a muffler.
24. Keep the handles dry, clean and free of oil or fuel mixture.
25. All chain saw service, other than the items listed in the owner's maintenance instructions, should be performed by trained Shindaiwa chain saw service personnel.



6. INSTALLING THE GUIDE BAR AND SAW CHAIN

1. Remove the two nuts, turning them counter-clockwise.
2. Remove the clutch cover.
3. Remove and discard the spacer.
4. Place the guide bar over the guide bar studs and chain tensioner pin.
5. Install the chain loop over the drive sprocket, then align the chain drive links within the guide bar groove. Make sure the cutters are properly oriented.

NOTE:

For longest chain life, place new or replacement chain loops in oil and soak overnight before installation.

6. Install the clutch cover over the two bar studs. Install the two bar nuts and tighten with finger pressure only.

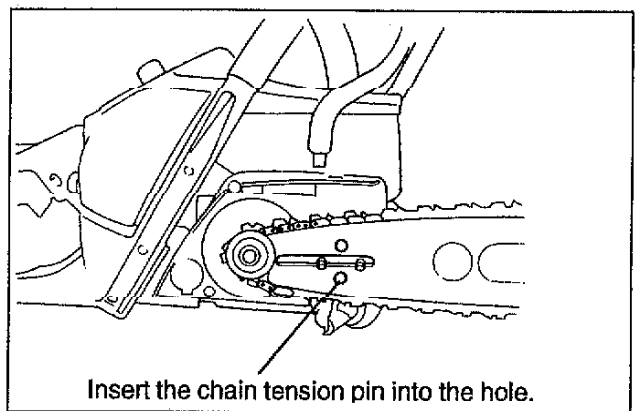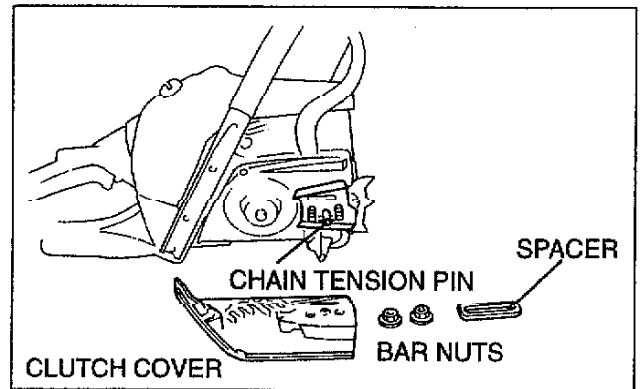

installed.

WARNING!

Never operate this saw without the clutch cover

7. ADJUSTING THE SAW CHAIN





IMPORTANT!

Proper chain adjustment is essential for maximum performance, chain life, and operator safety. Always inspect chain tension before operating this saw.

1. Adjusting Initially

- ① Place the saw on a flat surface and lift the bar nose slightly.
- ② To adjust chain tension:
 - Turn the chain tension screw clockwise to tighten the chain.
 - Turn the chain tension screw counter-clockwise to loosen the chain.
 - Hard-nose guide bar: Gently lift the chain at about mid-bar. Tension is correct when there is a gap of 3–3.5 mm (about 0.125") between the chain side-plates and the bar rail.
 - Sprocket-nose guide bar: The chain should be adjusted slightly tighter than on a hard-nose bar, but must still pull freely around the bar.
- ③ Tighten both bar nuts securely, making sure chain adjustment is correct for the bar installed.

2. Adjusting Chain Tension in the Field
Stop the saw, loosen both bar nuts about 1 turn each, then repeat Steps ①–③ above. Never operate the saw with a loose chain.

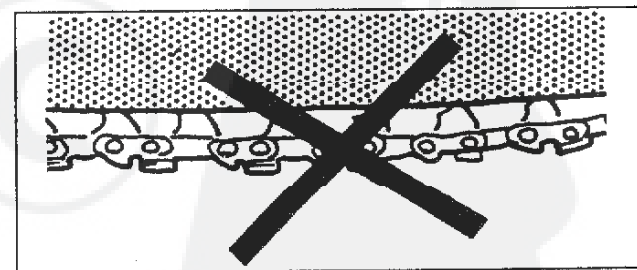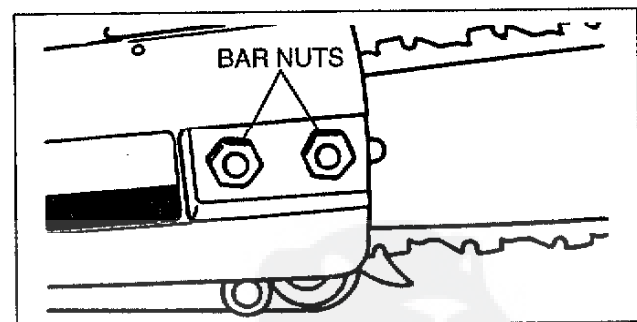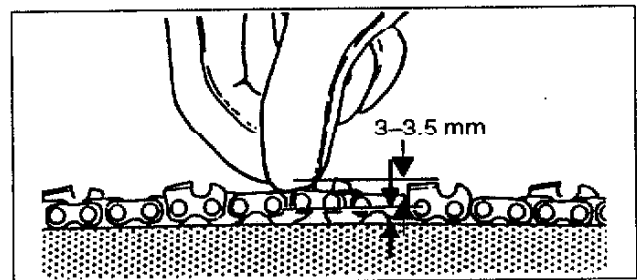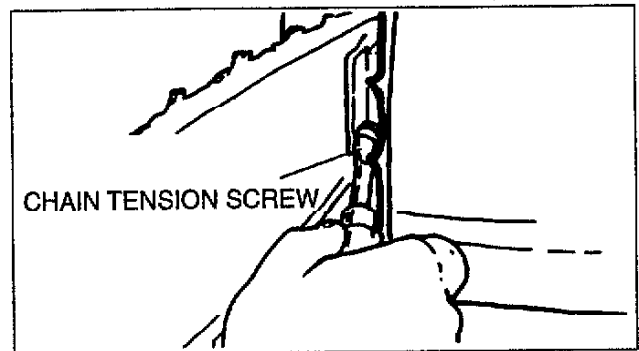

WARNING!

Inspect chain tension often during operation, especially when breaking in a new chain. A loose saw chain can unexpectedly jump the guide bar during operation, possibly causing serious personal injury.

8. FILLING FUEL AND CHAIN OIL

1. Fuel Mixture

Always use a gas/oil ratio of 25:1 Use only fresh, clean fuel.

2. Chain Oil

This oil performs an essential role to reduce guide bar and chain wear, and to facilitate smooth cutting. Always use clean oil.

3. Automatic Oiler

The guide bar and saw chain are lubricated automatically by an adjustable-rate oil pump that operates whenever the clutch drum rotates.


A temporary increase in oil flow rate is often desirable when cutting hardwoods or large-diameter softwoods, and can be provided as follows:

- ① Stop the saw. Make sure the ignition switch is in the "0" or "OFF" position.
- ② Place the saw on its side, with the clutch cover facing up.
- ③ Turn the oil flow rate adjustment screw with a screwdriver.
 - Turn counter-clockwise to increase bar and chain lubrication.
 - Turn clockwise to decrease bar and chain lubrication.



WARNING! MINIMIZE THE RISK OF FIRE!

- Never refuel a hot saw!
Always allow the saw to cool before fueling!
- Wipe all spilled fuel and move the saw at least 3 m away from the fueling point before starting!
- Never smoke or light fires near the saw or fuels!
- Never place flammable material near the engine muffler!
- Never operate the saw without the muffler in place!

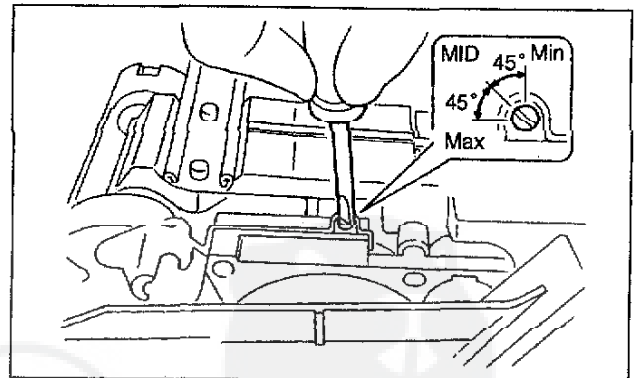

CAUTION!

Proper lubrication is critical to the performance and service life of the saw's oil pump, guide bar, and cutting chain. Always use a high quality lubrication oil designed for saw chain lubrication. Never use dry or reclaimed oil!

9. STARTING AND STOPPING THE ENGINE



WARNING!




Clear a safe work area before starting the saw! The saw chain will rotate when saw is started.

IMPORTANT!

- Engine ignition is controlled by a two-position “ON-OFF” switch located below the throttle lever. This switch is labeled “I” for ON and “0” for OFF.
- The throttle trigger cannot be moved without first depressing the lock lever.

1. Starting the engine

- a) When the engine is cold:
 - 1) Turn the switch ON.
 - 2) Pull the choke lever all the way out. (choke closed) The throttle is automatically set at a fast idle position.
- b) When the engine is warm:
 - 1) Turn the switch ON.
 - 2) Pull the choke lever all the way out and push it back to the original position. The throttle is automatically set at a fast idle position.
 - 3) Place the saw on the ground.
 - 4) Secure the saw by placing your right foot inside the rear handle and your left hand on the front handle as shown.
 - 5) Grip the starter handle with your right hand, pull the starter cord slowly until you feel the starter engage, then.
 - 6) ...start the saw by pulling the starter cord upward rapidly.

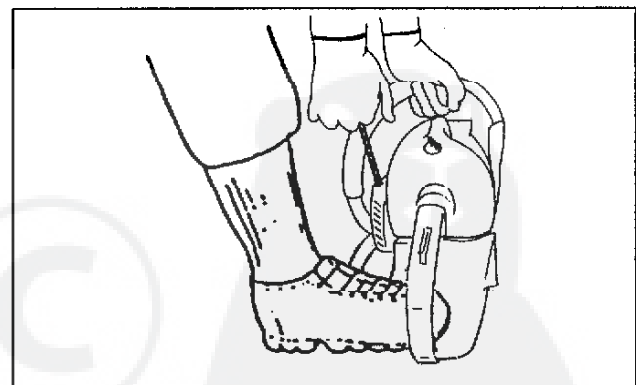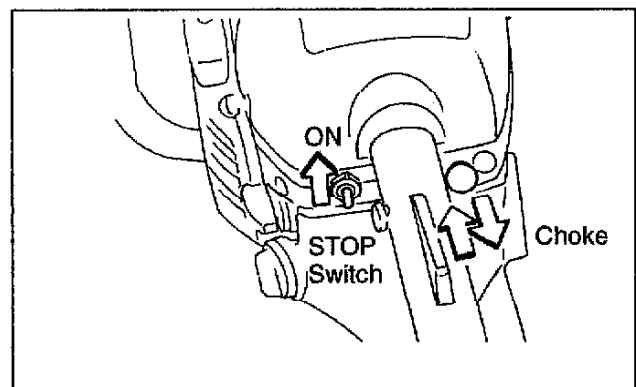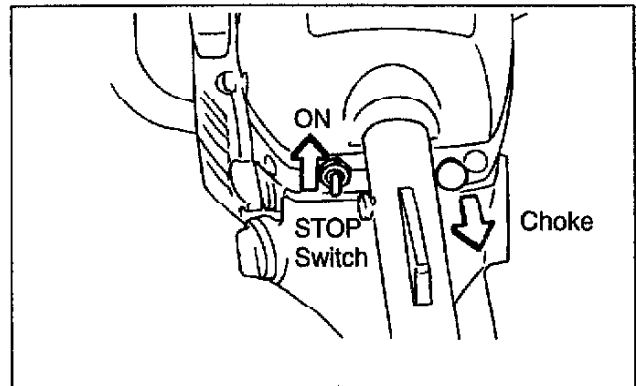

CAUTION!

The recoil starter can be easily damaged from abuse!

- Never pull the starter cord to its full length.
- Always engage the starter before cranking the engine.
- Always rewind the starter cord slowly.

When the engine fires:

- 1) Push the choke control in to its original position (open choke).
- 2) If the engine did not continue to run, pull the recoil again.
- 3) As the engine starts, clear excess fuel from the combustion area by revving the engine several times.



WARNING!

The saw chain will move as the engine accelerates!

2. Stopping the engine


Turn the switch OFF ("0" position) after idling at a low speed for 1 to 2 minutes.

- 4) Operating the throttle will automatically disengage the fast-idle setting.

If the engine does not start:

Repeat the appropriate starting procedures for a hot or cold engine. If the engine still will not start,

- 1) Check spark by disconnecting the spark plug and shorting against cylinder while pulling the starter cord. Make sure the switch is ON.
- 2) Disconnect the spark plug and inspect if the spark plug is fouled or soaked with fuel. If fouled or soaked:

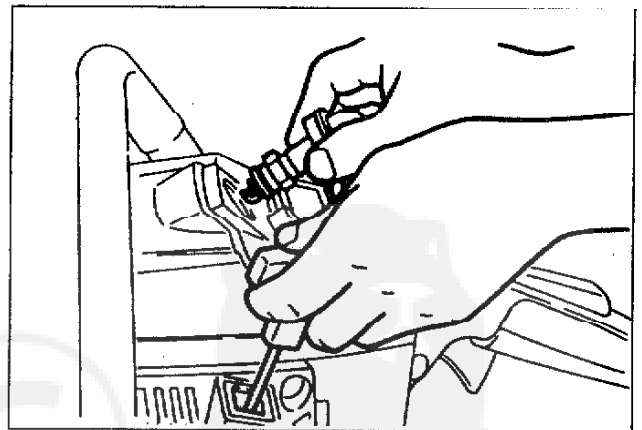

- Clean or replace the spark plug.
- Clear excess fuel from the combustion chamber by cranking the engine several times while the spark plug is removed.

10. CARBURETOR ADJUSTMENTS

With the engine running, adjust the carburetor as follows.

1. Idle Speed Adjustment


Use a screwdriver to slowly turn the idle speed adjusting screw clockwise or counter-clockwise until the engine idles at 3,000 rpm.



WARNING!

The saw chain must never rotate at engine idle speed!

- ⑤ If necessary, readjust the idle speed adjustment screw so the engine idles at 3,000 rpm.

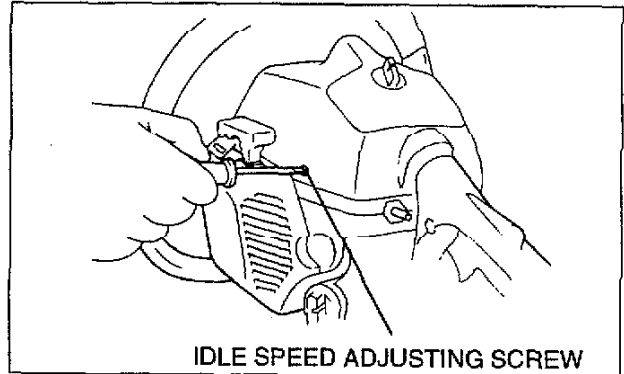


2. Standard Carburetor Setting

Low Speed Adjustment from closed:
 $1-1/4 \pm 1/4$ turns.

High Speed Adjustment from closed:
 $1-1/4 \pm 1/4$ turns.

3. Low Speed Adjustment (L)

- ① Using a small screwdriver, slowly turn the low speed adjustment screw clockwise (lean mixture), and note any changes in engine rpm. Turning the low speed adjustment screw clockwise should cause engine speed to increase, and then to decrease as the mixture becomes leaner.
- ② Note the needle position where engine speed first begins to decrease: This is called the lean drop-off point.
- ③ Turn the low speed adjustment-screw counter-clockwise (rich mixture) and note the point at which engine speed increases and then begins to decrease: This is called the rich drop-off point.
- ④ Adjust the low speed adjustment screw midway between the rich and lean drop-off point.

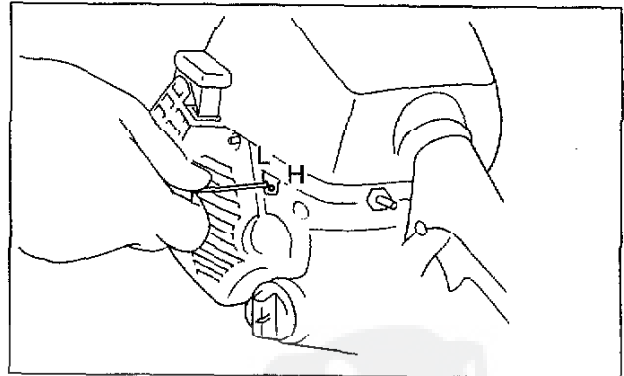

4. High Speed Adjustment (H)

No adjustment is necessary when the saw is new. After running about 10 hours, readjust the high speed adjustment screw to $1-1/4$ turns from the fully closed point.



CAUTION!


- Never run the engine at full throttle with no-load. This may cause seizure.
- Never operate this saw with the high speed adjustment screw adjusted to less than one turn. This may cause seizure.
- Never operate this saw above 14,000 rpm. This may cause seizure.

11. CHAIN BRAKE

This machine is equipped with inertia chain brake system. When sudden kickback occurs, the chain is automatically actuated and the chain stops instantly. Even though the operator's hand does not touch the brake lever the chain brake is actuated when kickback occurs.

1. Chain Brake Function

- ① When the brake lever is in POSITION 1, the chain is free.
- ② When the brake lever is in POSITION 2, the chain is locked.
- ③ Pull the brake lever towards the rear handle to make the chain free.

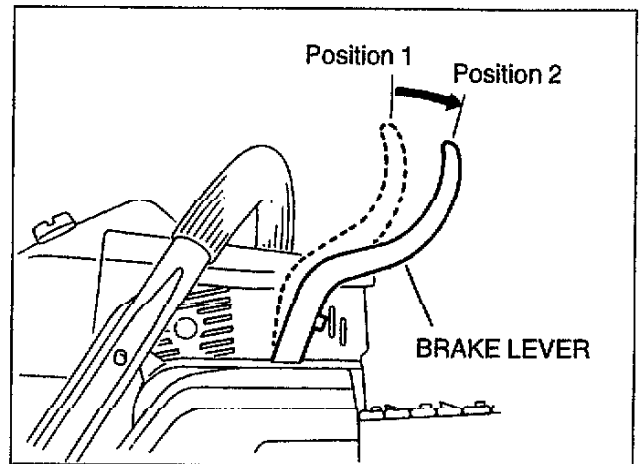

CAUTION!

When the chain brake has got actuated, the throttle trigger must be released at once.



WARNING!

The chain brake is installed only to reduce the risk of kickback! The chain brake is not a substitute for careful operation!

2. Chain Brake Maintenance

- Keep the brake mechanism clean and free of sawdust or debris.
- If the chain brake becomes worn or damaged, or fail to completely engage or release the clutch drum, return the saw to your dealer for repairs.



CAUTION!

- Never start or operate this saw while the chain brake is engaged!
- Never carry the saw by the brake lever. Carry the saw by the front handle.
- Always disengage the chain brake before removing or replacing the clutch cover.
- Never make carburetor adjustments while the chain brake is engaged!


12. CUTTING WITH THE SAW

1. Before Starting/While Operating

- a) Make sure you understand all the safety procedure.
- b) Clear a safe working area.
- c) Always wear eye protection such as a face shield or goggles.
- d) Always wear gloves.
- e) Wear close-fitting clothing to protect your legs and arms. Do not wear clothing or jewelry that could get caught in machinery or brush.
- f) Wear appropriate non-skid foot wear.
- g) Keep proper footing (Do not over-reach)!
- h) Use full-throttle while cutting, and apply only enough bar pressure to maintain speeds of 8,000—9,000 rpm.
- i) Never operate with a loose cutting chain!
- j) Never operate the saw if fastenings are loose or missing.
- k) Never operate the saw if any component parts are damaged, loose or missing.
- l) Stop the saw before moving it from the work area.

2. Felling Trees

- ① Determine the direction of fall.
- ② On the side of the tree facing the direction of fall, make a single 90° cut through about $1/3$ the tree's diameter.
- ③ Make a second cut at a 45° angle to the first cut to remove a notch from the tree.
- ④ Make the final felling cut on the opposite side of the tree about 5 cm higher than the bottom of the notch.

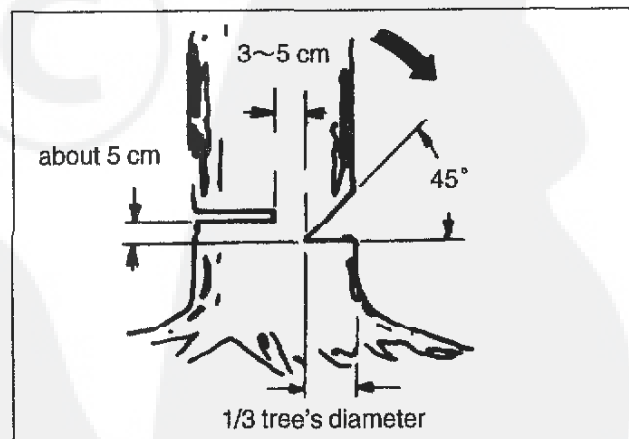

NOTE:

If the felling cut appears to be closing on the bar, use a mallet to drive one or two plastic or wooden wedges into the cut behind the bar.

- ⑤ Stop the saw, and put it down.
- ⑥ Use your retreat path to exit the area quickly.



WARNING!

- Failure to leave a wooden hinge during the falling or “backcut” can cause the tree to pinch the saw’s guide bar, and may also change the direction of fall!
- Always make the falling cut parallel to the bottom cut! An angled falling cut may cause the tree to split, possibly changing the direction of fall!




3. Bucking



WARNING!

Always cut downed timber from the uphill side of the wood! Be alert for potential injury from rolling or shifting logs! Downed timber may shift or roll unpredictably during cutting or handling.

- a) If the log is lying flat on the ground, start cutting from the top of the log. Cut with repeating level action using saw spike as a fulcrum. Do not cut into the ground.
 - b) If the log is supported on both ends, start your cut from the top of the log, down 1/3 the log’s diameter. Then, finish the cut by cutting up from the bottom. This helps prevent bar-pinching.
4. Limbing
Cut 1/3 from the bottom side and then cut through from the top. Then, finally cut the remaining part from the top side.

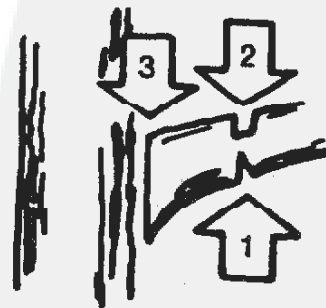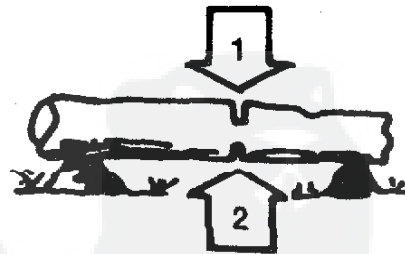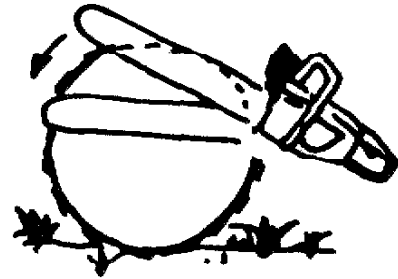


WARNING!

Do not overreach or attempt to cut above shoulder height.

13. ROUTINE MAINTENANCE


1. Saw Chain

Saw chain sharpness is essential in determining its performance. When cutter is in worn state, sharpen it at once. Cutting with a dull chain increases fatigue and greatly lowers cutting performance. When dirty due to grease or pitch, wash it with gasoline and immerse in oil to prevent rust.

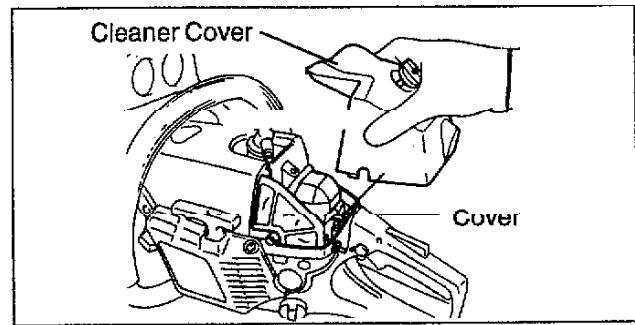




2. Guide Bar

Always clean the guide bar groove and oil hole. When they clogged with chips, remove them. For distribution of wear (and increased life), occasionally turn the bar over.

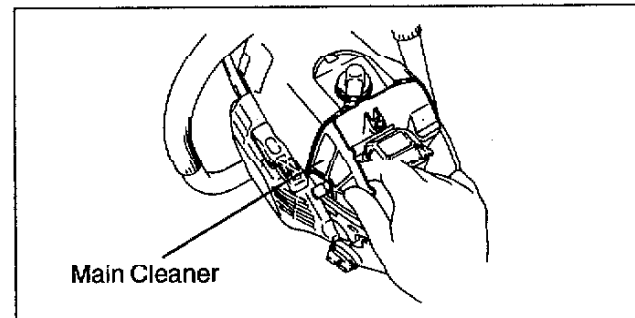


3. Air Cleaner

- 1) Pull the choke lever so that dust will not go into the elbow.
- 2) Loosen the air cleaner cover knob and remove the air cleaner cover.
- 3) Dust tends to accumulate inside the main cleaner and outside the sub-cleaner.
- 4) Remove the main cleaner with fingers. Remove the sub-cleaner from the elbow twisting the bottom end with a driver.
- 5) Rinse the air cleaners with gasoline or solvent. When blowing with air, blow from outside the main cleaner and from inside the sub-cleaner.
- 6) Put back the main cleaner properly. Put back the sub-cleaner to the elbow. Push the sub-cleaner downward until you hear a click sound.


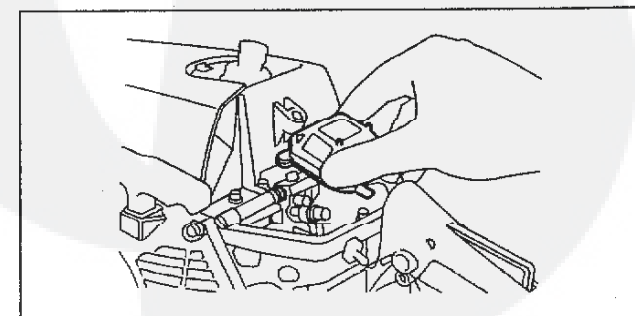
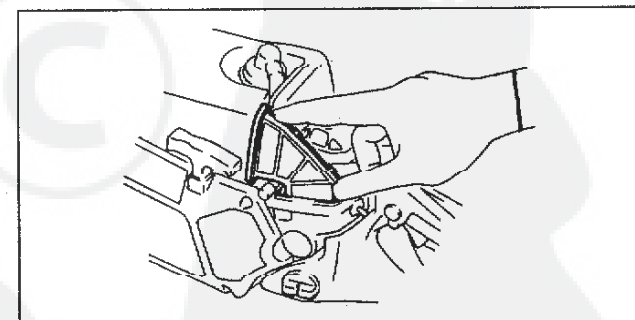
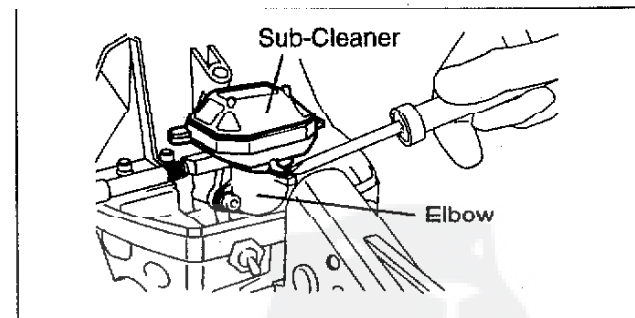


- 7) Put back the cleaner cover in the order of ① and ② as the illustration shows.
- 8) Tight the cleaner cover knob.

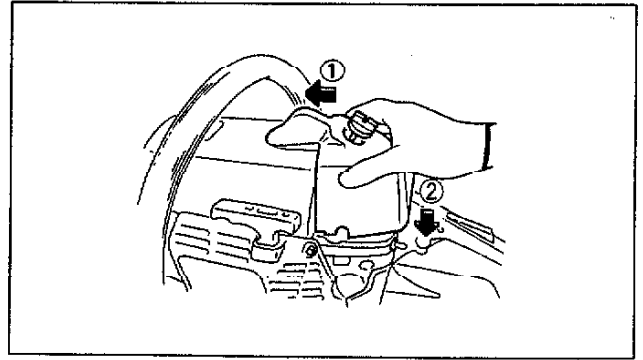


4. Periodical Inspection and Maintenance

- a) **Cylinder Fin Cleaning**
Cylinder fins clogged with dirt or dust can cause overheating. Clean between cylinder fins. When heavily clogged, clean them after removing the recoil case.
- b) **Fuel Filter**
Take the filter out from the fuel filler opening by using a wire hook. Remove both filter elements and rinse them well with gasoline.
- c) **Spark Plug Inspection**
Remove the spark plug and clean it and then adjust the plug gap to 0.6 mm.
- d) **Sprocket Inspection**
Remove the clutch cover and check the rim (which drives the chain behind the clutch drum). If there is any wear on the sprocket, replace it with a new one.

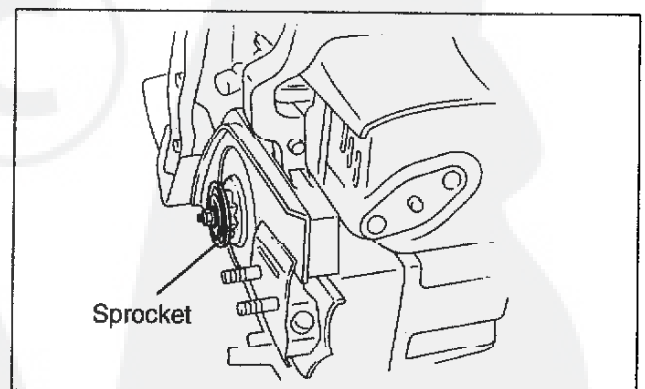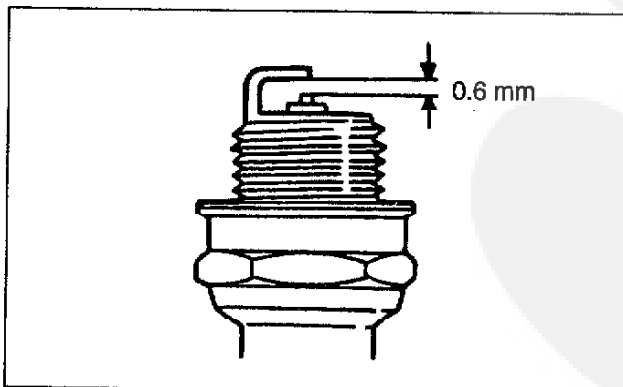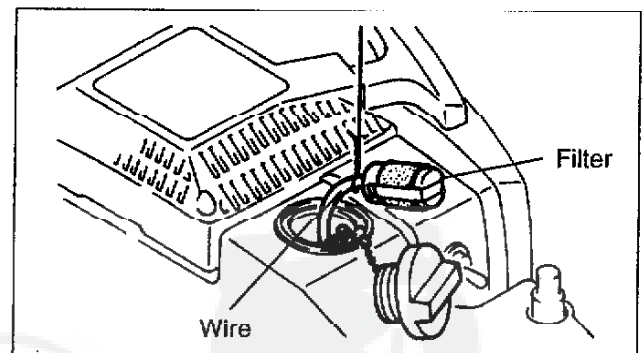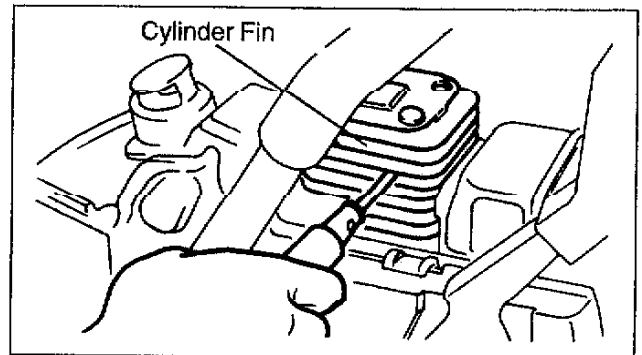

14. SAW CHAIN SHARPENING

1. Description

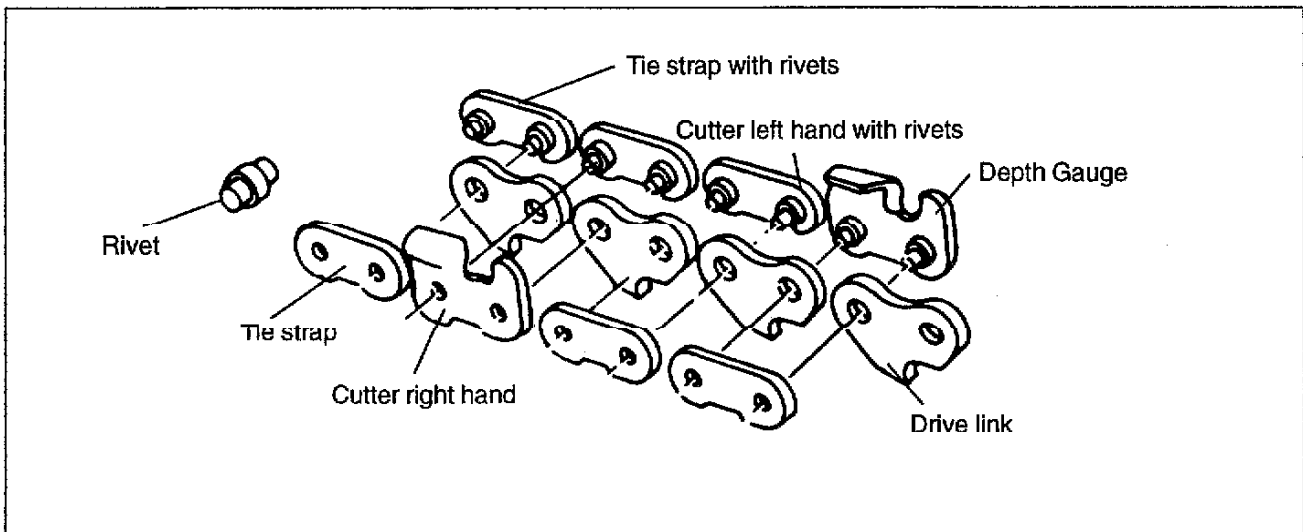


2. Function

- The depth gauge controls depth or amount of cut for each tooth.
- Both right and left cutters should always be sharpened to the same angle and depth.
- Drive links and saw chain together function to discharge sawdust.

3. Points of Sharpening

Sharpen all cutters and align right and left cutter angles to meet these specifications.

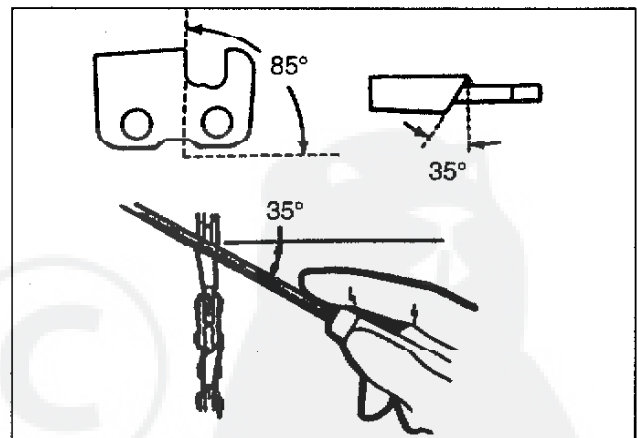


4. How to Sharpen


Sharpen all cutters to a 35° angle with a round file. Unequal filing can cause erratic sawing and vibration.

5. After Sharpening


When sharpening is completed, place the depth gauge joiner on all cutters as the illustration shows. File out (A) portion if it is higher than the joiner. Round the filed depth gauge as the illustration shows.

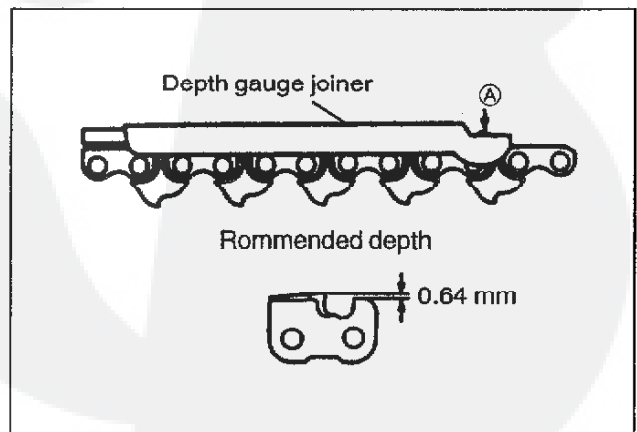

Good Sharpening Examples:

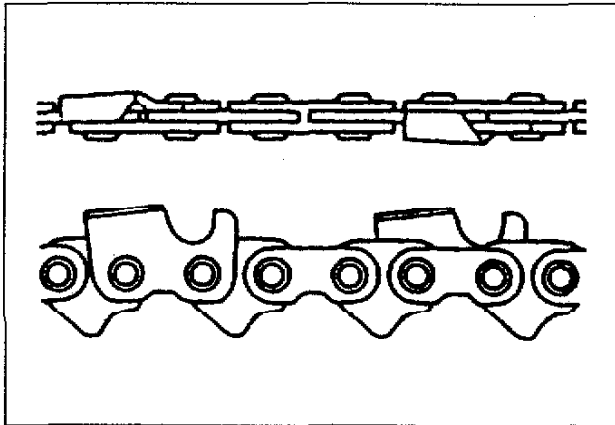


4. Unequal depth gauge

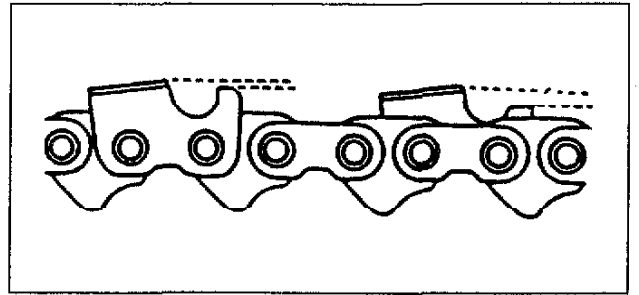


Wrong Filing Examples:


1. Unequal cutter angles

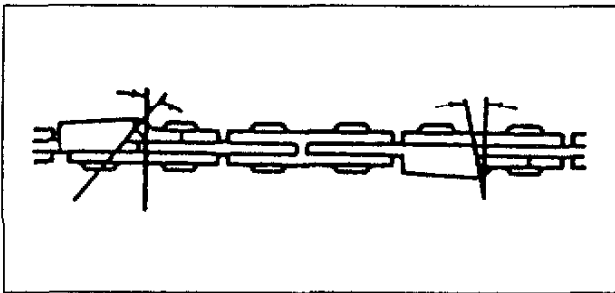

2. Unequal cutter lengths

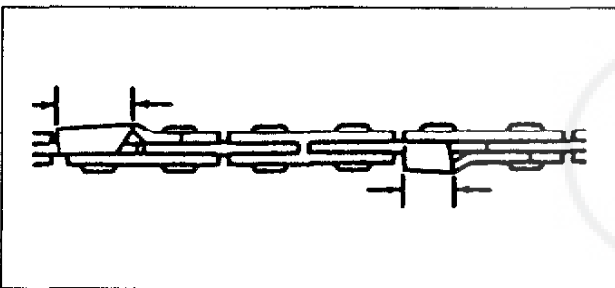

3. Inconsistent contour
(caused by filing too low or too high)

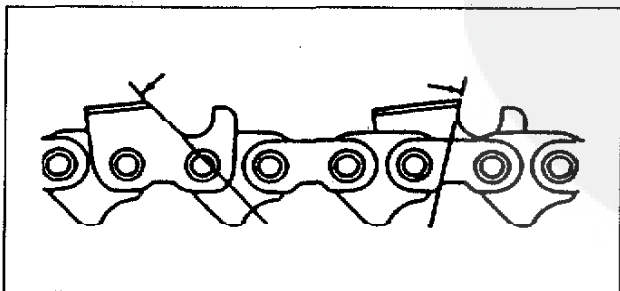

15. TROUBLESHOOTING

ENGINE DOES NOT START

What To Check		Possible Cause	Remedy
Does the engine crank?	NO	Faulty recoil starter. Fluid in the crankcase. Internal damage.	Return saw to dealer.
YES			
Good compression?	NO	Loose spark plug. Excess wear on cylinder, piston, rings.	Tighten and re-test. Return saw to dealer.
YES			
Does the tank contain fresh fuel of the proper grade?	NO	Stale or contaminated fuel mixture.	Drain and re-fill with fresh fuel of the correct mixture.
YES			
Is fuel reaching the cylinder and combustion chamber?	NO	Check for clogged fuel filter and/or vent.	Clean as required and re-start.
YES			
Is there spark at the spark plug wire terminal?	NO	Is the ignition switch ON? Faulty ignition ground. Faulty transistor unit.	Move switch to ON and re-start. Return saw to dealer.
YES			
Check the spark plug	NO	If the plug is wet, excess fuel may be in the cylinder. The plug may be fouled or improperly gapped. The plug may be damaged internally or may be the wrong size.	Crank the engine with the plug removed, replace the plug, and re-start. Clean and re-gap the plug to 0.24 inch (0.6 mm). Re-start. Replace the plug with an NGK BPMR 7A. Re-start.

ENGLISH

LOW POWER OUTPUT

What To Check	Possible Cause	Remedy
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Is the engine overheating? </div>	Operator is overworking the machine.	Cut at a slower rate. Sharpen the chain as required.
	Carburetor mixture is too lean.	Adjust the carburetor.
	Improper fuel ratio.	Re-fill with fresh fuel of the correct mixture.
	Fan, fan cover, cylinder fins dirty or damaged.	Clean, repair or replace as necessary.
	Carbon deposits on piston or in the muffler.	Decarbonize.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Engine is rough at all speeds. May also have black smoke and/or unburned fuel at the exhaust. </div>	Clogged air cleaner.	Service the air cleaner.
	Loose or damaged spark plug.	Tighten or replace.
	Air leakage or clogged fuel line.	Repair or replace fuel filter and/or fuel line.
	Water in the fuel.	Replace the fuel.
	Piston seizure.	Return saw to dealer.
	Faulty carburetor and/or diaphragm.	Return saw to dealer.
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> Engine is knocking. </div>	Overheating condition.	See above.
	Improper fuel.	Check fuel octane rating; check for presence of alcohol in the fuel. Refuel as necessary.
	Carbon deposits in the combustion chamber.	Decarbonize.

ADDITIONAL PROBLEMS

Symptom	Possible Cause	Remedy
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Poor acceleration.</div>	Clogged air cleaner.	Clean the air cleaner element.
	Clogged fuel filter.	Replace the fuel filter.
	Chain brake engaged.	Inspect and/or test brake. Return to dealer as required.
	Carburetor mixture too rich or too lean.	Adjust carburetor.
	Idle speed set too low.	Adjust: 3,000 rpm.
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine stops abruptly.</div>	Switch turned off.	Set the switch to "I" (ON) and re-start.
	Fuel tank empty.	Refuel.
	Clogged fuel filter.	Clean or replace filter as required.
	Water in the fuel.	Drain; replace with clean fuel.
	Shorted spark plug or loose terminal.	Clean or replace spark plug. Tighten the terminal.
	Ignition failure.	Replace the ignition unit.
	Piston seizure.	Return saw to the dealer.
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Engine difficult to shut off.</div>	Ground (stop) wire is disconnected, or switch is defective.	Test and replace as required.
	Overheating due to incorrect spark plug.	Correct plug: NGK BPMR 7 A.
	Overheated engine.	Idle engine until cool.
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Chain rotates at idle speed.</div>	Engine idle too fast.	Set idle: 3,000 rpm.
	Broken clutch spring or shoe.	Replace spring / shoes as required.
<div style="border: 1px solid black; padding: 2px; display: inline-block;">Excessive vibration.</div>	Worn or damaged sprocket, chain or bar.	Inspect and replace chain components as required.
	Bent crankshaft.	Return saw to dealer.

16. DECLARATION OF CONFORMITY

DECLARATION OF CONFORMITY

We hereby confirm that the Shindaiwa engine chain saws,
Models: 300S, 357, 377, 394, 440, 488, 757,

have successfully passed the CE Mark approval tests carried out by
Le Centre Technique du Bois et de l'Ameublement (CTBA), 10, avenue de
Saint Mandé, 75012 Paris.

These models are in conformity with:

Directive 89/392/EEC

Directive 89/336/EEC

Standard EN 608

Standard EN 50082

and obtained the following register numbers respectively.

300S: 380-080-A-0045-11-95

357: 380-080-B-0041-07-95

377: 380-080-A-0050-09-96

394: 380-080-A-0052-05-97

440: 380-080-A-0012-11-94

488: 380-080-A-0042-09-95

757: 380-080-A-0047-06-96

SHIN-DAIWA KOGYO CO., LTD.

35 Shinujigami, Chiyoda-cho,
Yamagata-gun, Hiroshima 731-1514
JAPAN

TEL: 0826 72 6011

FAX: 0826 72 7005


M. Matsumoto
Vice President



SHIN-DAIWA KOGYO CO., LTD.

Head Office: 35, Shin-Ujigami, Chiyoda-cho,
Yamagata-Gun, Hiroshima, 731-1514,
Japan

TEL NO.: 0826 72 6011
FAX NO.: 0826 72 7005

72358-93110 (N)