



HT700

Item	Spec.
LZEHT700-1	Blade sheath
LZEHT700-2	Nut M5
LZEHT700-3	Blade washer
LZEHT700-4	Nut M4
LZEHT700-5	Aluminium protecting head
LZEHT700-6	Lower blade
LZEHT700-7	Upper blade
LZEHT700-8	Blade ring
LZEHT700-9	Blade liner
LZEHT700-10	Nut M5*14
LZEHT700-11	Aluminium bar
LZEHT700-12	Aluminium blocking bar
LZEHT700-13	Nut M4*22
LZEHT700-14	Label
LZEHT700-15	Left machine shell
LZEHT700-16	Bracket
LZEHT700-17	Self -driving nut ST4*16
LZEHT700-18	Protecting cover
LZEHT700-19	Right machine shell
LZEHT700-20	Self -driving nut ST4.2*18-F
LZEHT700-21	Handle button
LZEHT700-22	button spring
LZEHT700-23	Right mass
LZEHT700-24	Machine shell insert
LZEHT700-25	Spring
LZEHT700-26	Board
LZEHT700-27	Front hand button
LZEHT700-28	soft shaft board
LZEHT700-29	Left handle
LZEHT700-30	Electric sensor
LZEHT700-31	Terminal
LZEHT700-32	Cable press
LZEHT700-33	Main hand button
LZEHT700-34	Blade liner
LZEHT700-35	Oil cover
LZEHT700-36	Shell Support
LZEHT700-37	Blade fixing slot
LZEHT700-38	Self -driving nut M5*30
LZEHT700-39	Cable
LZEHT700-40	Cable sheath
LZEHT700-41	Steel wire
LZEHT700-42	Lip board
LZEHT700-43	soft shaft board
LZEHT700-44	Lip pole assey
LZEHT700-45	Lip pole spring
LZEHT700-46	Lip pole cap
LZEHT700-47	Main hand button
LZEHT700-48	position -fixing board
LZEHT700-49	single switch

LZEHT700-50	Capacitor
LZEHT700-51	Upper cover for motor
LZEHT700-52	Bearing 608
LZEHT700-53	Brush assey
LZEHT700-54	Brush bracket
LZEHT700-55	Brush insert
LZEHT700-56	Rotor-700W
LZEHT700-57	Stator-700W
LZEHT700-58	Self -driving nut M4*30
LZEHT700-59	Lower cover for motor
LZEHT700-60	Nut M4*60
LZEHT700-61	Bearing 609
LZEHT700-62	Core bracket
LZEHT700-63	wheel washer
LZEHT700-64	Bearing HK0810
LZEHT700-65	Moving control mass
LZEHT700-66	Sheath for moving control mass
LZEHT700-67	driven wheel
LZEHT700-68	button spring
LZEHT700-69	whole partial core mass
LZEHT700-70	Spring ring 32
LZEHT700-71	Nut M6 Left

