
10 Cu. Ft. Dump Cart

LCP97 ASSEMBLY INSTRUCTIONS


9/99

ASSEMBLY


- 1.) Attach Carriage Plate (6) and Re-inforcing Plate (28) using 3/8" x 1-1/4" Truss Head Bolts (29) and 1/2" Flat Washers (30) from the inside of the Body (1). Secure with 3/8" Lockwashers (15) and 3/8" Nuts (17). (Figure 1)
- 2.) Bolt Pedestal (8) at front of Body with 5/16" Truss Head Bolts (14) and 1/2" Flat Washers (30) from inside. On the outside use 5/16" Lockwashers (31) and secure with 5/16" Nuts (32). (Figure 2)
- 3.) Insert 1/4" Spacer (12) through Spring (13) and large hole at bottom of Latch (11). Be sure Spring is attached to Latch as shown. Push Latch down through slot in Tow Bar (2) as shown NOTE: Grab the Latch handle from the other side of the Tow Bar and pull down to align the Spacer with the holes in the sides of the Tow Bar. Slide 1/4" x 3-1/2" Bolt (21) through side of Tow Bar, Washer (23), Spacer, Washer (23), and other side of Tow Bar. Secure with 1/4" Reverse Locknut (22). (Figure 3)
- 4.) Attach Clevis (10) to top of Tow Bar (2) with 5/16" Bolts (18), from bottom side of Tow Bar place 5/16" Lockwashers (20) and 5/16" Nuts (19). (Figure 4)
- 5. Attach Axle Supports (9) on the inside of carriage plate on bottom of Body (1). Use 3/8" Bolts (16), 3/8" Lockwashers (15), and secure with 3/8" Nuts (17). (Figure 5)Do not tighten at this time.

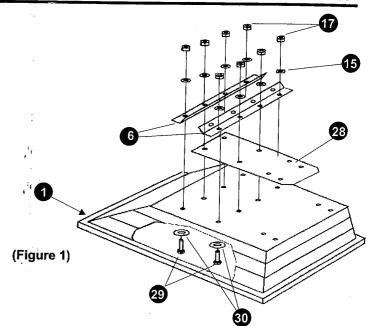


(Figure 2)

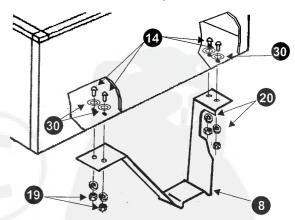

(Figure 3)

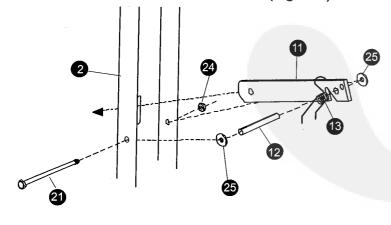

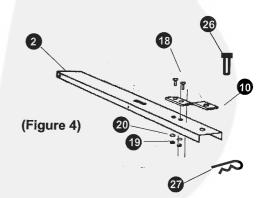

ASSEMBLY INSTRUCTIONS:

10 Cu. Ft. Dump Cart

OPERATION:

TO DUMP - Pull latch toward mower and Cart Body will tilt back to dump position.

TO RETURN TO PULLING POSITION -Push down on front edge of Cart Body until Latch engages and secures to Tow Bar.

Tractor speed should be governed by weight of load. The heavier the load, the slower the speed for safe operation.

MAINTENANCE:

Grease Wheels at regular intervals, at least every six months, more frequently if used regularly.

Check tire pressure at regular intervals. Proper inflation will prolong life of tire.

NOTE: 650# Maximum Capacity

Approximate weight (1) Cu. Ft. DIRT-150# SAND-125# GRAVEL-110#

Max. Speed 4 MPH

WARNING OF DANGER OF IMPROPER USE OF THIS TRAILER CART. THIS UNIT IS INTENDED FOR USE ONLY WITH RIDING MOWERS OR LAWN TRACTORS. IT IS DEFINITELY NOT FOR HIGHWAY USE, BEING PULLED AT HIGH SPEEDS, OR TRANSPORTING PASSENGERS OF ANY SORT. SUCH USE COULD RESULT IN INJURIES FOR WHICH WE CANNOT BE HELD RESPONSIBLE.

3.) Assemble bottom of Axle Supports (9) with eight Bolts (16), ockwashers (15), and Nuts (17), DO NOT TIGHTEN AT THIS TIME. Slide Axle (3) through one pair of Axle Supports, one 3" Spacer (22), Tow Bar (2), the other 3" Spacer (22), and through he other pair of Axle Supports. (Figure 6)

7.) Center the Axle and place the 1-1/4" Spacers (23) on each and of Axle. Then place Washer (7) over Axle, followed by Wheel (4) and another Washer (7) on the outside of Wheel. Secure with Cotter Pin (5). Repeat for other side. (Figure 5)

3.) Tighten all nuts and bolts.

LEASE DO NOT RETURN THIS MERCHANDISE TO THE TORE. CALL US AND WE WILL TAKE CARE OF ANY ROBLEM YOU MIGHT HAVE WITH THIS PRODUCT.

DW TO ORDER PARTS:

hen ordering parts, always give model #, part #, part description 23 d inspector#.

END TO: Parts Division

(800) 225 - 5891 Ext. 226

316 Limit Street

(217) 735 - 1590

Lincoln, IL 62656

FAX (217) 735 - 2435

LIMITED WARRANTY

unit is warranted against defects in materials and workmanship to the original purchaser, under normal and service, for a period of ninety (90) days from date of sale.

ng the Warranty Period, we will repair or replace at our option free of charge to the original purchaser, any of the unit that our examination shows to be defective in workmanship or materials.

Warranty does not apply to damage in transit or damage caused by misuse, abuse, neglect, normal wea erations by unauthorized persons.

PRECISION PRODUCTS, INC. 316 Limit Street, Lincoln, IL 62656
Phone (217) 735 - 1590 FAX (217) 735 - 2435

		4	4.	
	Ref.	Parts		
	No	No	Description	Qty
	1	4612	Plastic Body	1
	2	4631P	Towbar	1
	3	1252	Axle	1
	4	1267	Wheel	2
	5	1262	Cotter Pin	2 2 2
	6	4600P	Carriage Plate	2
	7	1264	3/4" Flat Washer	4
-	8	4630B	Pedestal	1
	9	4467P	Axle Support	4
	10	1243P	Clevis	1
1	11	1265P	Latch	1.
ŀ	12	4468	1/4" x 2-3/4" Spacer	1
1	13	4497	Spring	1
1	14	1586	5/16" x 3/4" Truss Hd Bolt	4
1	15	1274	3/8" Lockwasher	24
	16	1272	3/8" Bolt	16
ľ	17	1273	3/8" Nut	24
l	18	1248	5/16" Bolt	2
	19	1275	5/16" Nut	6
ı	20	1276	5/16" Lockwasher	6
l	21	4466	1/4" x 3-1/2" Bolt	1
	22	4470	3" Spacer	2
	23	4471	1-1/4" Spacer	2
	24	1558	1/4" Reverse Locknut	1
ŀ	25	1817	1/4" Washer	2
	26	1840	1/2" x 1-3/4" Clevis Pin	1
	27	1042	#14 Hitch Pin Clip	1
	28	4621P	Reinforcing Plate	1
	29	1599	3/8" x 1-1/4" Tuss Hd Bolt	8
L	30	1506	1/2" Flat Washer	12
	1.0		The second secon	

