


TS56

125LB TOW-BEHIND

SPREADER

ASSEMBLY AND OPERATION INSTRUCTION MANUAL



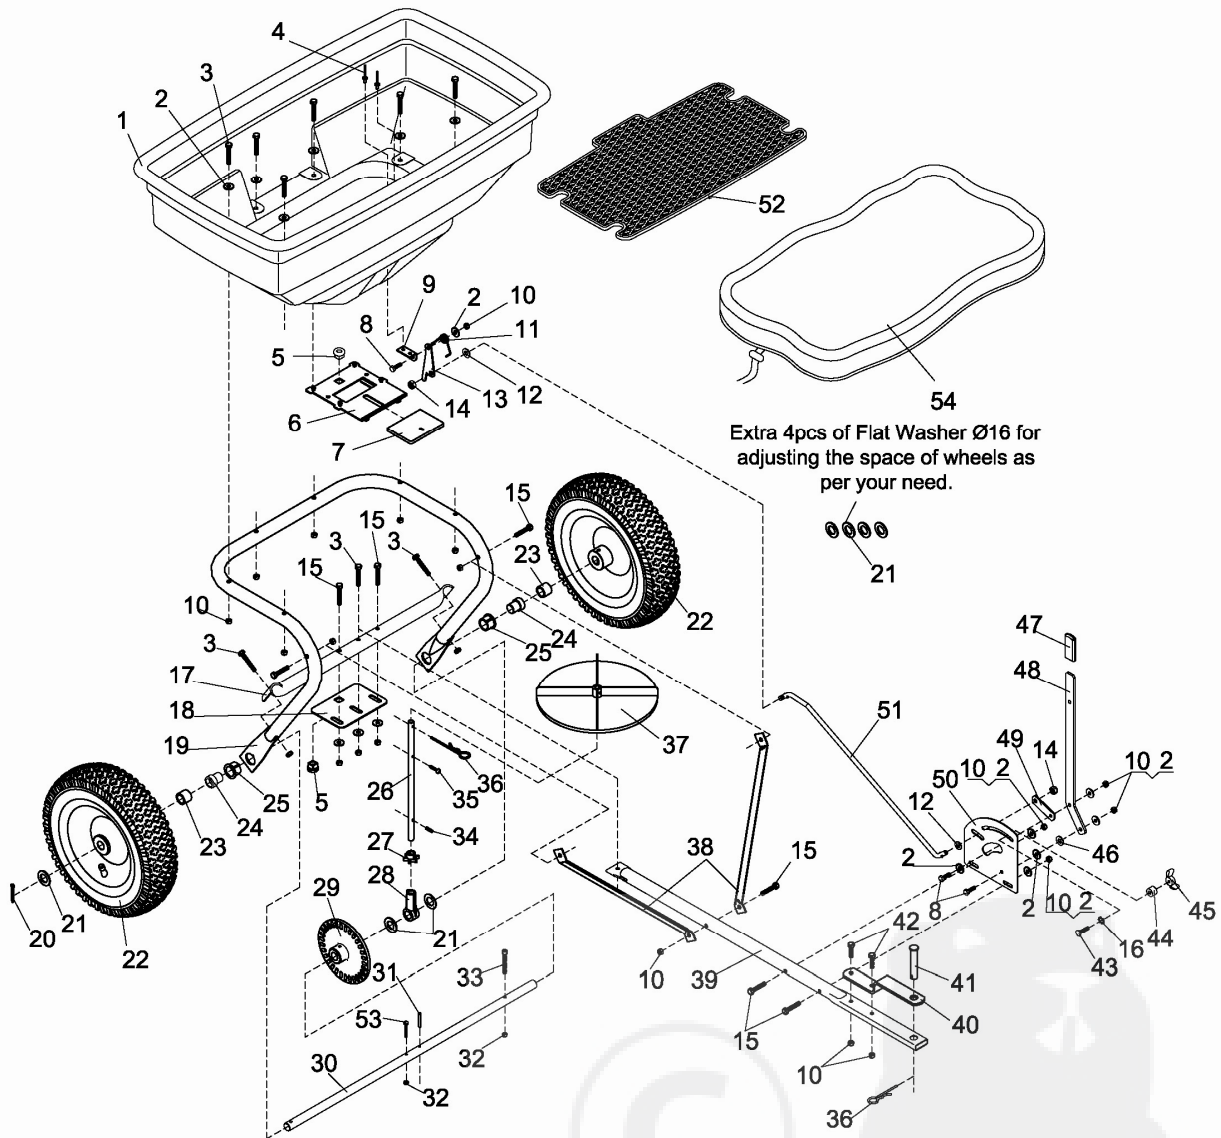

PARTS LIST

Ref#		Description	Qty	Ref#		Description	Qty
1	TS56-1	Hopper Assembly	1	28	TS56-28	Swivel Axle Base	1
2	TS56-2	Big Flat Washer Ø6	16	29	TS56-29	Gear (Driver)	1
3	TS56-3	Hex Bolt M6x40	9	30	TS56-30	Wheel Axle	1
4	TS56-4	Rivet Ø5x10	2	31	TS56-31	Pin Ø4x30	1
5	TS56-5	Swivel Axle Bushing	2	32	TS56-32	Nylon Lock Nut M5	2
6	TS56-6	Fixed Adjustable Plate	1	33	TS56-33	Inner Hex Bolt M5x45	1
7	TS56-7	Active Adjustable Plate	1	34	TS56-34	Pin Ø3x16	1
8	TS56-8	Hex Bolt M6x20	3	35	TS56-35	Screw M4x20	1
9	TS56-9	Base for Torsion Spring	1	36	TS56-36	R Pin Ø3	2
10	TS56-10	Nylon Lock Nut M6	21	37	TS56-37	Impeller	1
11	TS56-11	Torsion Spring	1	38	TS56-38	Brace Hitch	2
12	TS56-12	Flat Washer Ø8	2	39	TS56-39	Hitch Tube	1
13	TS56-13	Fix Plate for Connecting Rod	1	40	TS56-40	Hitch Bracket	1
14	TS56-14	Nylon Lock Nut ,M8	2	41	TS56-41	Pin Ø12x65	1
15	TS56-15	Hex Bolt M6x35	7	42	TS56-42	Hex Bolt M6x25	2
16	TS56-16	Teeth Lock Washer Ø8	1	43	TS56-43	Carriage Bolt M6x25	1
17	TS56-17	Crossover Tube	1	44	TS56-44	Spacer	1
18	TS56-18	Swivel Axle Fix Plate	1	45	TS56-45	Wing Nut	1
19	TS56-19	Frame Tube Assembly	1	46	TS56-46	Nylon washer	1
20	TS56-20	Cotter Pin Ø5x35	1	47	TS56-47	Handle Grip	1
21	TS56-21	Flat Washer Ø16	7	48	TS56-48	Adjustable Handle	1
22	TS56-22	Pneumatic Wheel	2	49	TS56-49	Connect Rod	1
23	TS56-23	Wheel Axle Bushing	2	50	TS56-50	Gauge Plate	1
24	TS56-24	Inner Axle Bushing	2	51	TS56-51	Adjustment Rod	1
25	TS56-25	Outer Axle Bushing	2	52	TS56-52	Hopper Screen	1
26	TS56-26	Swivel Axle	1	53	TS56-53	Hex Bolt M5 x 40	1
27	TS56-27	Pinion Gear	1	54	TS56-54	Rain Cover	1

