

REPAIR PARTS MANUAL MODEL NO. RZLT1236B LAWN TRACTOR



178949 3.21.01 RD PRINTED IN U.S.A.

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:


- Product "Lawn Tractor"
- Model Number "RZLT1236B"
- Part Number
- Part Description

TABLE OF CONTENTS

SCHEMATIC	3
ELECTRICAL	4-5
CHASSIS	6-7
DRIVE	8-9
STEERING WHEEL	10-11
ENGINE	12-13
MOWER DECK	
MOWER LIFT LEVER	
SEAT	
DECALS	
WARRANTY	19-20


TRACTOR - - MODEL NUMBER RZLT1236B

SCHEMATIC

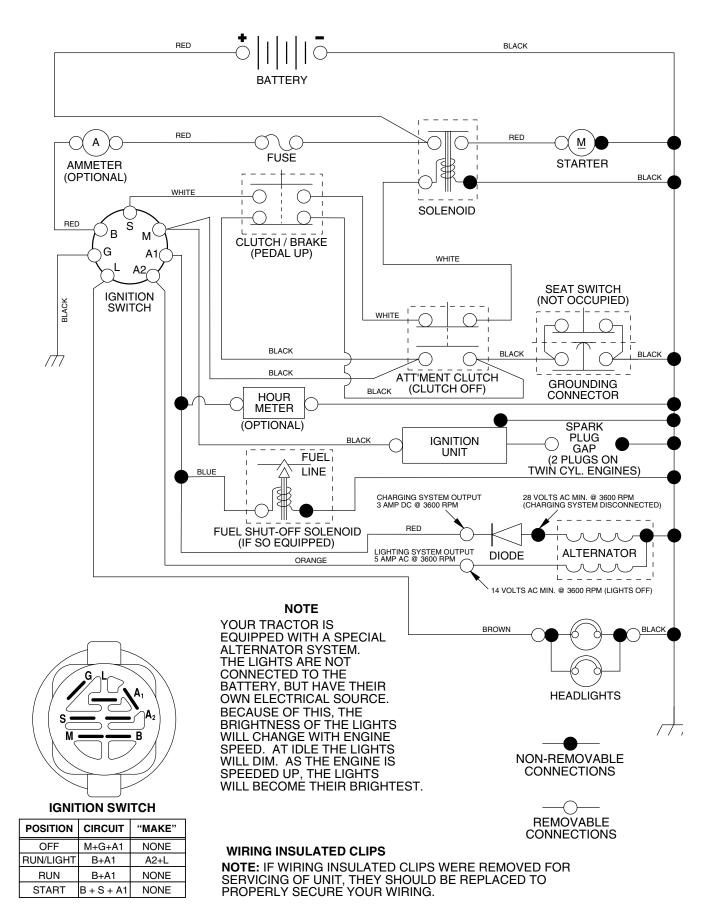

TRACTOR - - MODEL NUMBER RZLT1236B

ELECTRICAL

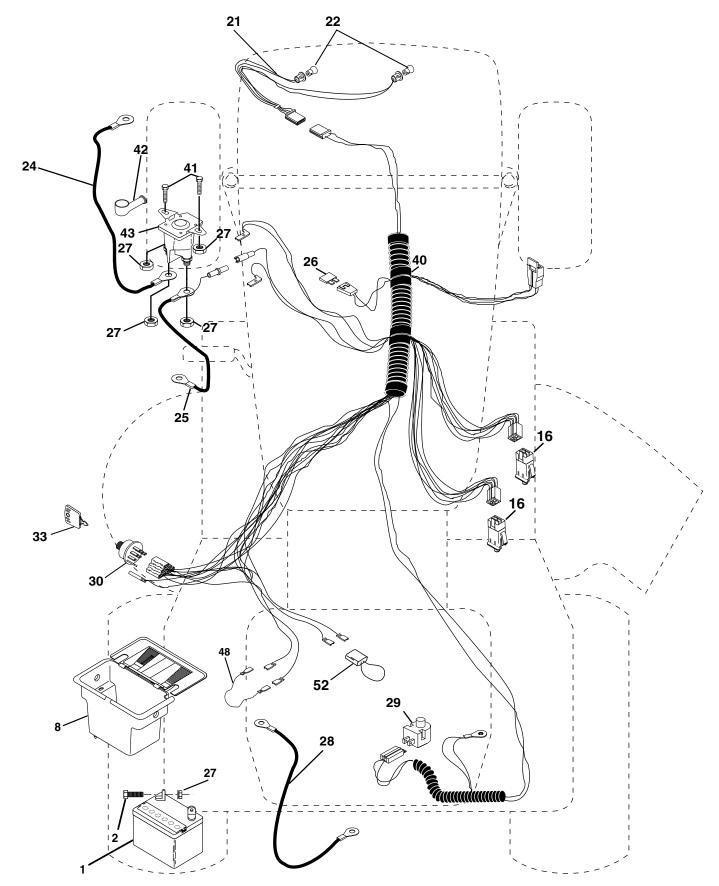


TRACTOR - - MODEL NUMBER RZLT1236B

ELECTRICAL

KEY NO.	part No.	DESCRIPTION
1	144925	Battery 12 Volt 25 AMP
2	74760412	Bolt Hex Hd 1/4-20unc X 3/4
8	156417	Case Battery
16	153664	Switch Interlock Push-In
21	166181	Harness Asm Light W/4152j
22	4152J	Bulb Light #1156
24	4799J	Cable Battery 6 Ga 11" red
25	146147	Cable Battery 6 Ga 44" red
26	175158	Fuse
27	73510400	Nut Keps Hex 1/4-20
28	4207J	Cable Ground 6 Ga 12" black
29	121305X	Switch Plunger Nc Gray
30	175566	Switch Ign
33	140401	Key Ign
40	178437	Harness Ignition
41	71110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	131563	Cover Terminal Red
43	178861	Solenoid
48	140844	Adapter Ammeter
52	141940	Protection Wire Loop

NOTE: All component dimensions give in U.S. inches 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER RZLT1236B CHASSIS AND ENCLOSURES

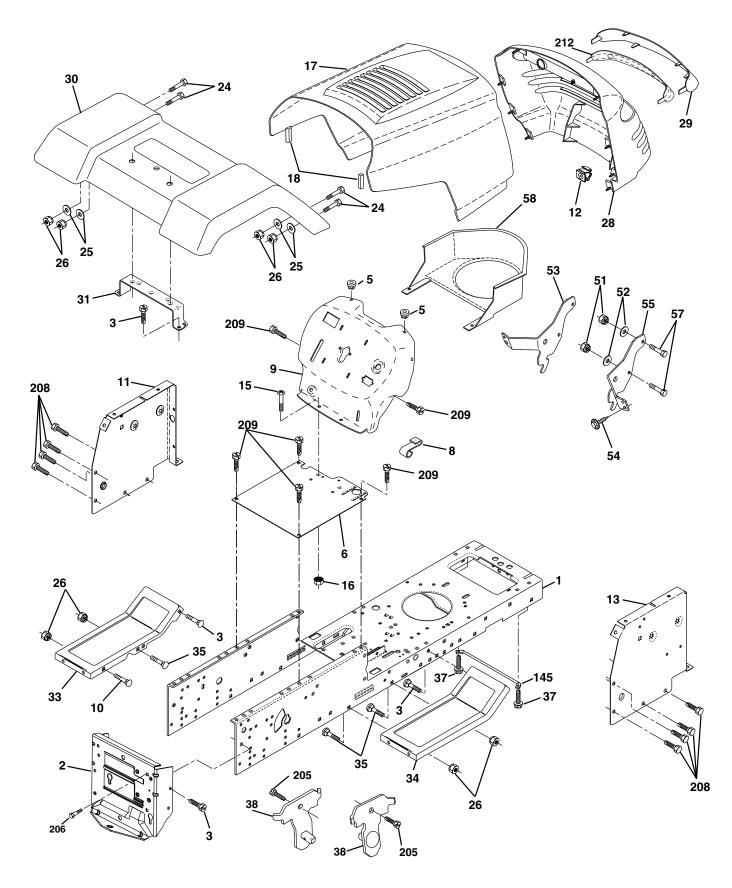


TRACTOR - - MODEL NUMBER RZLT1236B CHASSIS AND ENCLOSURES

KEY NO.	Part No.	DESCRIPTION
1 2 3 5 6 8 9 10 11 2 13 15 16 17 18 24 26 28 29 31 33 4 35 7 8 5 5 5 7 8 45 5 7 8 12 35 4 55 7 8 12 56 8 9 10 11 2 13 15 16 17 18 24 25 6 28 29 30 13 34 35 7 85 15 55 7 8 15 57 8 12 15 16 17 18 24 25 6 28 29 31 33 4 35 7 8 57 8 57 57 57 57 57 57 57 57 57 57 57 57 57	174620 176554 17060612 155272 155923 155138 168347X011 72140608 155927 145660 172107X010 74180512 73510500 159639X505 126938X 74780616 19131312 73800600 140434 140273X599 169467X505 136619 145244X505 145243X505 72110606 17490508 175710 73800400 19091416 144697 161464 144696 74780412 150127 156524 17490608 170165 17670608 17000612 156229 5479J	Chassis Drawbar 12 Ga. Screw 3/8-16x3/4 Bumper Hood/Dash Saddle LT Fender Shift Clip Retainer Slide-On Dash Private Label Bolt Carriage 3/8-16 x 1 Panel Pnt Dash Lh Clip Tinnerman Grille P/L Panel Dash Rh Screw, Mach Trhd 5/16-18 UNC x 3/4 Nut Keps 5/16-18 UNC Hood Paint Steel Private Label Bumper Hood Bolt Fin Hex 3/8-16 unc X 1 Gr. 5 Washer 13/32 X 13/16 X 12 Ga Nut Lock Hex W/Ins 3/8-16 Unc Grille/Lens Asm. Lens Grille Private Label Fender Pnt Bracket Fender Footrest Pnt Lh Footrest Pnt Rh Bolt Rdhd Sht Sqnk 3/8-16 X3/4 Screw Thdrol 5/16-18 x 1/2 Tyt Bracket, Asm. Pivot, Mower Rear Nut Lock Hex W/Ins 1/4-20 Washer 9/32 x 7/8 x 16 Ga. Bracket, Grille, LH Screw Hex Wshd 8-18 x 7/8 Bracket, Grille, RH Bolt Hex 1/4-20 x 3/4 Air Duct P/L Rod Pivot Chassis/Hood Screw, Thdrol 3/8-16 x 1/2 Bolt, Shoulder 5/16-18 Screw 3/8-16 x 1/2 B.D. Screw Hxwsh 3/8-16 x 3/4 Insert Lens Plug Button

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER RZLT1236B

DRIVE

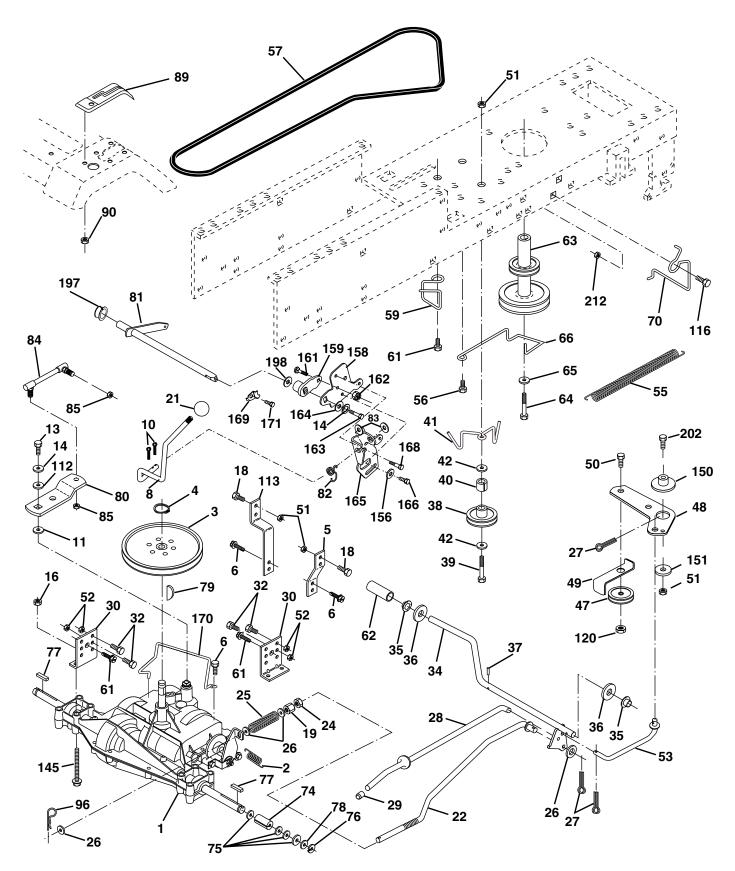

TRACTOR - - MODEL NUMBER RZLT1236B

DRIVE


KEY	PART	
NO.	NO.	DESCRIPTION
1		Transaxle, Peerless 206-544C
		Order Parts From Transaxle Manufacturer
2	146682	Spring Return Brake T/a Zinc
3	123666X	Pulley Transaxle 18" tires
4	12000028	Ring Retainer # 5100-62
5	121520X	Strap Torque 30 Degrees
6	17060512	Screw Thdrol 5/16-18 X 3/4 TYT
8	165619	Rod Shifter
10	76020416	Pin Cotter 1/8 X 1 Cad
11	105701X	Washer Plate Shf 388 Sq Hole
13	74550412	Bolt 1/4-28 Unf Gr 8 W/Patch
14	10040400	Washer Lock Hvy Helical 1/4
16	73800500	Nut, Lock
18 19	74780616	Bolt, Fin Hex 3/8-16 x 1 Gr. 5
21	73800600 106933X	Nut Lock 3/8-16 Unc Knob
22	130804	Rod Brake Blk Zinc 26 840
24	73350600	Nut Hex Jam 3/8-16 Unc
25	106888X	Spring Rod Brake 2 00 Zinc
26	19131316	Washer 13/32 X 13/16 X 16 Ga
27	76020412	Pin Cotter 1/8 X 3/4 Cad
28	175765	Rod Brake Parking LT/YT
29	71673	Cap Brake Parking Black
30	174973	Bracket Mtg Transaxle
32	74760512	Bolt Hex Hd 5/16-18unc X 3/4
34 35	175578 120183X	Shaft Asm Pedal Foot
36	19211616	Bearing Nylon Blk 629 ld Washer 21/32 X 1 X 16 Ga
37	1572H	Pin Roll 3/16 X 1"
38	165936	Pulley Idler Flat
39	74760648	Bolt Fin Hex 3/8-16unc X 2-3/4
40	175461	Spacer Split Steel
41	175556	Keeper Belt
42	19131312	Washer 13/32 X 13/16 X 12 Ga
47	127783	Pulley Idler V Groove Plastic
48	154407	Bellcrank Clutch Grnd Drv Stl
49 50	123205X	Retainer Belt Style Spring
50 51	74760624 73680600	Bolt Hex Hd 3/8-16unc X 1-1/2 Nut Crownlock 3/8-16 Unc
52	73680500	Nut Crownlock 5/16-18 Unc
53	105710X	Link Clutch
55	105709X	Spring Return Clutch 6 75
56	17060616	Screw 3/8-16 x 1
57	130801	V-Belt Ground Drive 95 25
59	169691	Keeper Belt Span Ctr
61	17060612	Screw Thdrol 3/8-16x3/4
62	8883R	Cover Pedal Blk Round

KEY	PART	
NO.	NO.	DESCRIPTION
63	175410	Engine Pulley
64	71170764	Bolt Hex
65	10040700	Washer Lock Hvy Hlcl Spr 7/16
66	154778	Keeper Belt Engine
70	134683	Guide Belt Mower Drive RH
74	137057	Spacer Axle
75	121749X	Washer 25/32 X 1 1/4 X 16 Ga
76	12000001	E-ring
77	123583X	Key Šquare 2 0 X 1845/ 1865
78	121748X	Washer 25/32 X 1-5/8 X 16 Ga
79	2228M	Key Woodruff #9 3/16 x 3/4
80 81	131846 165594	Arm Shift Shaft
82	123782X	Spring Torsion T/a
o∠ 83	1237627	Washer 17/32 X 3/4 X 16 Ga
84	166228	Link, Transaxle
85	150360	Nut Lock Center 1/4 - 28 FNTHD
89	169370X428	Console Shift
90	124346X	Nut Self-thd Wsh-hd 1/4 Zinc
96	4497H	Retainer Spring
112	19091210	Washer 9/32 x 3/4 x 10 Ga.
113	127285X	Strap Torque LT
116	72140608	Bolt Rdhd Sq Neck 3/8-16 x 1.00
120	73900600	Nut Lock Flg. 3/8-16
145	74490540	Bolt Hex Flghd 5/16-18
150	175456	Spacer Retainer
151	19133210	Washer 13/32 x 2 x 10 Ga.
156	166002	Washer Srrted 5/16ID x 1 x .125
158	165589	Bracket Shift Mount
159	165494	Hub Tapered Flange Shift Lt
161	72140406	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
162	73680400	Nut Crownlock 1/4-20 Unc
163	74780416	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
164	19091010	Washer 5/8 x .281 x 10 Ga
165	165623	Bracket Pivot Lever
166 168	166880 165492	Screw 5/16-18 x 5/8 Bolt Shoulder 5/16-18 x .561
169	165581	Plate Fastening Lt
170	173898	Keeper Belt
171	17490608	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
197	169613	Nyliner, Snap-In
198	169593	Washer, Nylon
202	72110614	Bolt, Carriage 3/8-16 Unc x 1-3/4 Gr 5
212	145212	Nut Hex Flange Lock
	· · -	<u> </u>

NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER RZLT1236B

STEERING ASSEMBLY

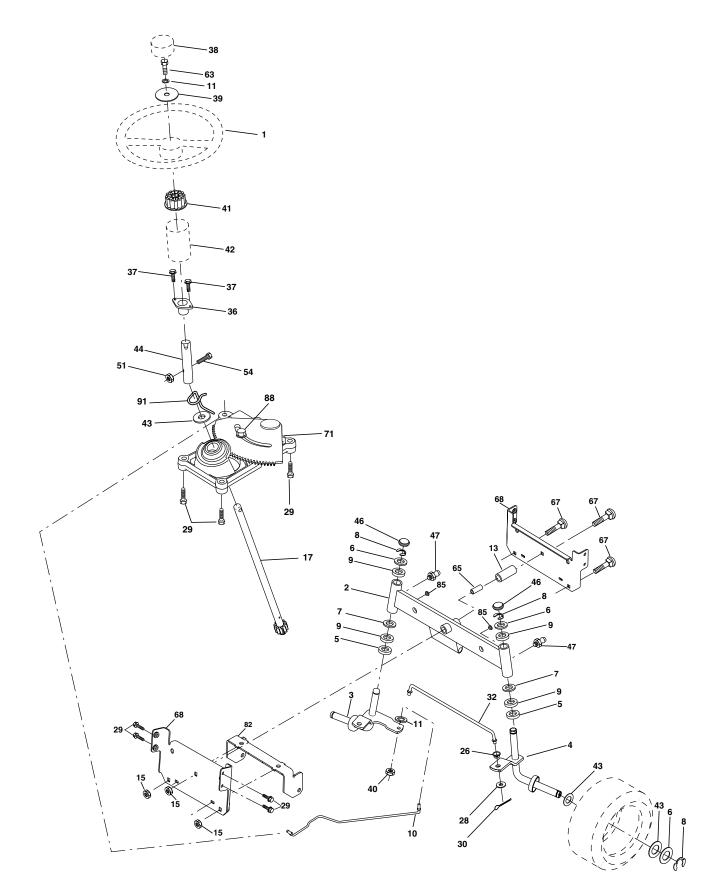

TRACTOR - - MODEL NUMBER RZLT1236B


STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
NO. 1 2 3 4 5 6 7 8 9 10 11 13 15 17 26 28 29 30 32 36 37 38 39 40 41 42 43 44	NO. 140044X428 154427 169840 169839 6266H 121748X 19272016 12000029 3366R 175121 10040600 136518 145212 177876 126847X 19131416 17060612 76020412 130465 155099 152927 140045X428 19133812 7810H 100711L 145054X428 121749X 153720	Wheel Steering Blk Axle Asm Fr LT W/gzks 38/42 Spindle Asm LH Spindle Asm RH Bearing Race Thrust Harden Washer 25/32 X 1-5/8 X 16 Ga Washer 27/32 X 1-1/4 X 16 Ga Ring Klip #t5304-75 Bearing Col Strg Blk Link Drag Washer Lock Hvy Hlcl Spr 3/8 Bearing Axle Nut Lock Flange Shaft Asm Strg Private Label Bushing Link Drag Blk LR Washer 13/32 X 7/8 X 16 Ga Screw 3/8-16x3/4 Pin Cotter 1/8 X 3/4 Cad Rod Tie Wire Form 19 75 Mech Bushing Strg ScrewTT #10-32 X 5 X 3/8 Flange Cap Strg Wh AYP P/L Washer 13/32 X 2-3/8 X 12 Ga Nut Lock Center 3/8-24unf Adaptor Wheel Strg 758/753 ID Boot Steering Washer 25/32 X 1 1/4 X 16 Ga Shaft Extention Steering
46	121232X	Cap Spindle Fr Top Blk
47	6855M	Fitting Grease
51	73800500	Nut Lock Hex w/Ins 5/16-18
54	74780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
63	74780616	Bolt Fin Hex 3/8-16 x 1 Gr. 5
65	160367	Spacer Axle
67	72140618	Bolt Rdhd 3/8-16 x 2-1/4
68	169827	Brace Axle
71	175146	Steering Asm.
82	169835	Bracket, Susp. Chassis, Front
85	133835	Fastener, Christmas Tree
88	175118	Bolt Shoulder 7/16-20
91	175553	Clip Steering

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER RZLT1236B

ENGINE

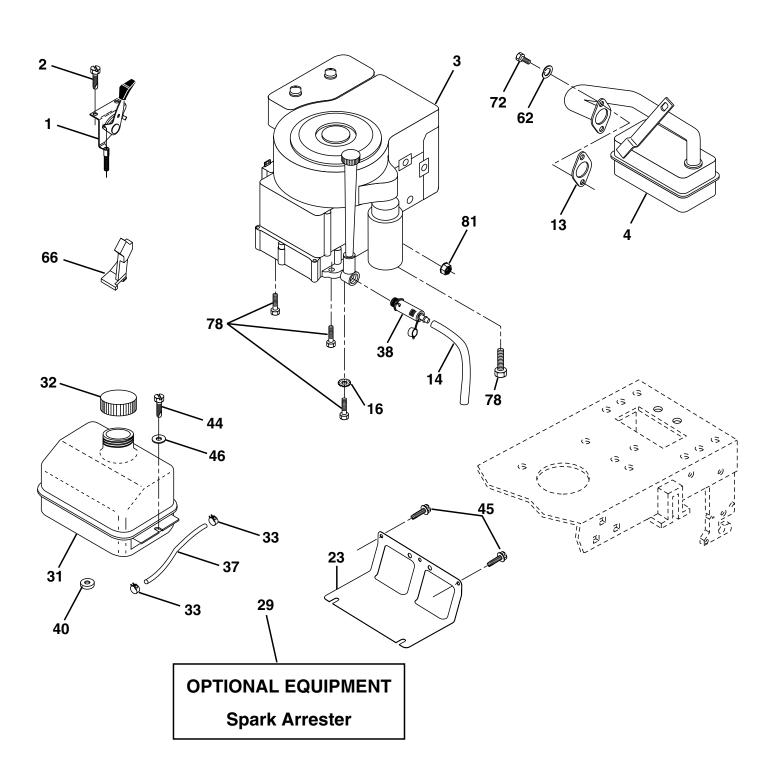

TRACTOR - - MODEL NUMBER RZLT1236B


ENGINE

KEY NO.		DESCRIPTION
1	170865	Control Th/ch Flag
2	17720410	Screw Hex Thd Cut 1/4-20x5/8 T
3		Engine, Briggs Model 289707 Order Parts From Engine Manufacturer
4	137348	Muffler LT B&S
13	165291	Gasket Eng
14	148456	Tube Drain Oil Easy
16	11050600	Washer Lock Ext Tooth 3/8
23	169837	Shield Brn/Dbr Guard
29	137180	Kit Spark Arrestor (Flat Scrn)
31	109202X	Tank Fuel Front
32	140527	Cap Asm Fuel W/sym Vented
33	123487X	Clamp Hose Black
37	137040	Line Fuel 20"
38	148315	Plug Drain Oil Easy
40	124028X	Bushing
44	17670412	Screw Hexwsh Thdrol 1/4-20x3/4
45	17000612	Screw Hxwsh 3/8-16 x 3/4 BD
46	19091416	Washer 9/32 X 7/8 X 16 Ga
62	10040500	Washer Lock Hvy Hlcl Spr 5/16
66	127951	Stop Throttle 3000 RPM
72	71070512	Screw Hexhd Cap 5/16-18x 3/4
78	17060620	Screw Thdrol 3/8-16x1-1/4 TYTT
81	73510400	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER RZLT1236B

MOWER DECK

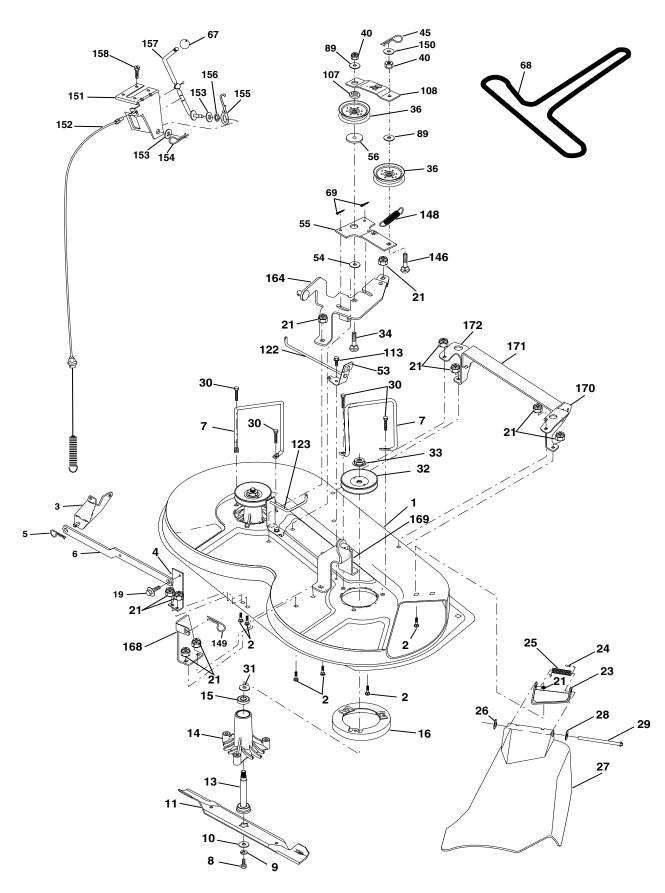


TRACTOR - - MODEL NUMBER RZLT1236B

MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	174595	Mower Deck Assembly	56	165723	Spacer, Retainer
2	72140506 138017	Bolt Bracket Accombly Sway Bar, Front	67 68	106932X 174978	Knob Round V-Belt
3 4	175654	Bracket Assembly,Sway Bar, Front Bracket Sway Bar	69	76020312	Pin cotter 3/32 x 3/4 Cad
5	4939M	Retainer Spring	89	19131612	Washer $13/32 \times 1 \times 12$ Ga.
6	130832	Arm, Suspension	107	133502	Spacer Arm Idler Upr Hdw
7	140608	Keeper Belt Lh	107	133503	Stiffener Arm Idler Upper
8	850857	Bolt, Hex 3/8-24 x 1.25 Gr. 8	113	17490508	Screw Thdrol 5/16-18 x 1/2
9	10030600	Washer, Lock	122	174505	Rod Brake Mandrel Lh
10	140296	Washer, Hardened	123	174504	Rod Brake Mandrel Rh
11	138496	Blade	146	165891	Bolt Carriage Idler
13	137645	Shaft Assembly, Mandrel, Vented	148	169022	Spring Return Idler
14	128774	Housing, Mandrel, Vented	149	165898	Retainer Spring Yellow Zinc
15	110485X	Bearing, Ball, Mandrel	150	19091216	Washer 9/32 x 3/4 x 16 Ga.
16	174493	Stripper, Mower Deck	151	169670	Bracket Clutch
19	132827	Bolt, Shoulder	152	176079	Cable Clutch
21	73680500	Nut Crownlock 5/16-18 UNC	153	169674	Washer Flat 3/8" Type B
23	136631	Bracket, Deflector	154	169675	Spring Retainer
24	105304X	Cap, Sleeve	155	169671	Spring Retention Lever
25	123713X	Spring, Torsion, Deflector	156	169672	Spacer
26	110452X	Nut, Push	157	169669	RodClutch
27	175029X428		158	17720410	Screw Hex Thd Cut 1/4-20 x 5/8
28	19111016	Washer 11/32 x 5/8 x 16 Ga.	164	174976	Idler Asm Support & Susp. 36"
29	121980X	Rod, Hinge Screw Thdrol Washer Head	168	172377	Bracket Deck Cable 36"
30 31	157722 129963		169	174977	Bracket Asm Suspension Rh
32	153531	Washer, Spacer Pulley, Mandrel	170	172359	Bracket Suspension Rf
32 33	178342	Nut, Toplock, Flanged	171 172	165237 172355	Brace Support Susp. Frt. CRD/36" Bracket Suspension Lf
33 34	72110614	Bolt		130794	Mandrel Assembly (Includes Key
36	131494	Pulley, Idler, Flat		130734	Numbers 8-10, 13-15, 31 and 32)
40	73680600	Nut Crownlock 3/8-16 UNC		175254	Replacement Mower, Complete
45	4497H	Retainer		175254	heplacement wower, complete
53	130840	Brake Asm Mower Vented			
54	133943	Washer, Hardened	ΝΟΤΙ		nent dimensions given in U.S. inches
55	133840	Arm, Idler	NOT	1 inch = 2	
		'		1 11011 - 20	••••••••

TRACTOR - - MODEL NUMBER RZLT1236B

LIFT

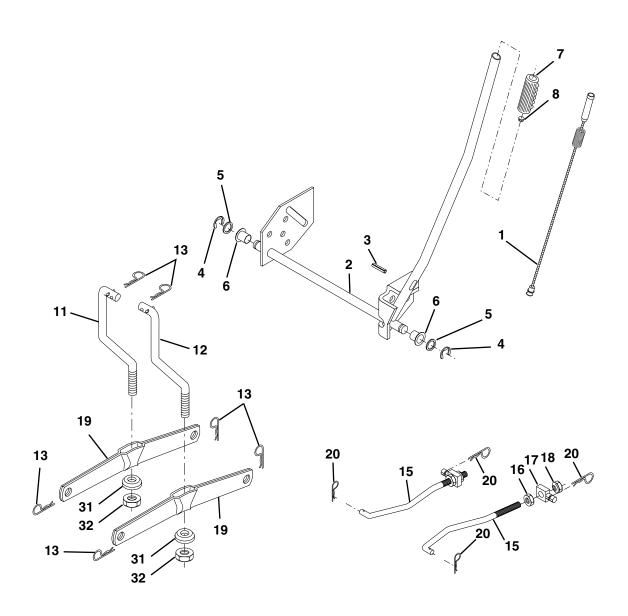


KEY NO.	PART NO.	DESCRIPTION
1	159460	Wire Asm Inner/Sprg w/plunger
2	159471	Shaft Asm Lift
3	105767X	Pin Groove
4	12000002	E Ring #5133-62
5	19211621	Washer 21/32 X 1 x 21 Ga
6	120183X	Bearing Nylon
7	109413X	Grip Handle Bicycle Matte Blk
8	124526X	Button Plunger
11	139865	Link Lift LH
12	139866	Link Lift RH

KEY NO.	PART NO.	DESCRIPTION
13	4939M	Retainer Spring
15	173288	Link Front
16	73350800	Nut Jam Hex 1/2-13 Unc
17	175689	Trunnion Blk Zinc
18	73800800	Nut Lock W/wsh 1/2-13 Unc
19	139868	Arm Suspension Rear
20	163552	Retainer Spring
31	169865	Bearing Pvt. Lift
32	73540600	Nut Crownlock 3/8-24
NOTE		

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER RZLT1236B

SEAT ASSEMBLY

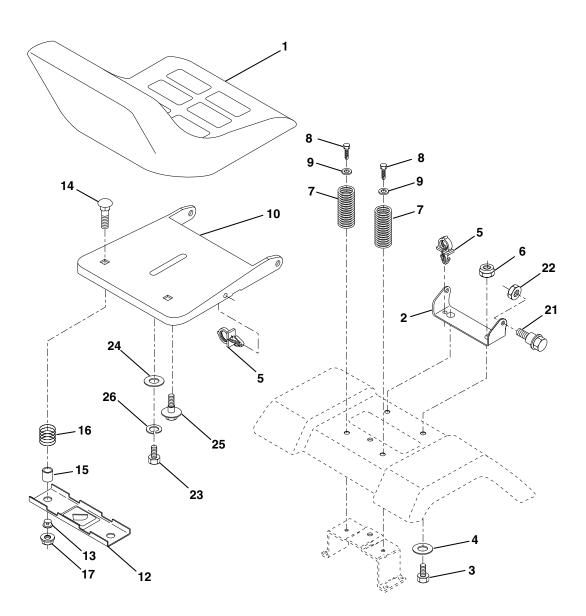


KEY	PART		KEY	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
1	127426X	Seat	14	72050412	Bolt Rdhd Sht Nk 1/4-20 x 1-1/2
2	140551	Bracket Pivot Seat	15	134300	Spacer Split
3	71110616	Bolt Hex 3/8 - 16 x 1 Blk	16	121250X	Spring Cprsn
4	19131610	Washer 13/32 x 1"	17	123976X	Nut Lock 1/4 Lge Flg Gr 5 Zinc
5	145006	Clip Push-In	21	171852	Bolt Shoulder 5/16-18 UNC-2A BD
6	73800600	Locknut, Hex W/Ins 3/8 - 16 Unc	22	73800500	Locknut, Crown 5/16-18 UNC
7	124181X	Spring Seat Cprsn 2 250 Blk Zi	23	71110814	Bolt Hex Black
8	17000616	Screw Thdrol 3/8-16 x .5	24	19171912	Washer 17/32 x 1-3/16 x 12 Ga
9	19131614	Washer 13/32 x 1 x 14 Ga	25	127018X	Bolt Shoulder 5/16-18 x 62
10	174894	Pan Seat	26	10040800	Washer Lock Hvy Hlcl Spr 1/2
12 13	121246X 121248X	Bracket Mounting Switch Bushing Snap Blk Nyl 50 Id	NOTE	All compon 1 inch = 25	ent dimensions given in U.S. inches


1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER RZLT1236B

DECALS

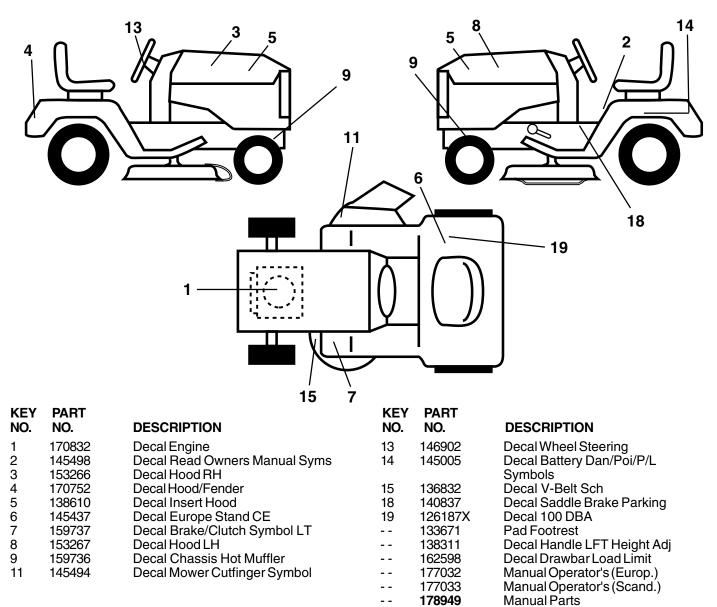

WHEELS & TIRES

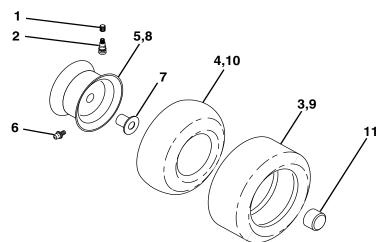

KEY NO.	NO.	DESCRIPTION
1	59192	Cap Valve Tire
2	65139	Stem Valve
3	106222X	Tire F Ts 15 X 6 0 - 6 Service
4	59904	Tube Front (Service Item Only)
5	106732X427	Rim Asm 6" (front White Service)
6	278H	Fitting Grease (Front Wheel Only)
7	9040H	Bearing Flange (Front Wheel Only)
8	106108X427	Rim Asm 8" (rear White Service)
9	124635X	Tire R Ts 18 x 8.5-8 C Service
10	7152J	Tube Rear (Service Item Only)
11	104757X428	Cap Axle Blk 1 50 X 1 00
	144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm.

KEV

DADT



LIMITED WARRANTIES

FOR

NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same manner and to the same extent EXCEPT such Power Train Components Incorporated in equipment used for rental purposes are warranted in the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components Incorporated in equipment used for rental purposes

B. Products And Items Not Warranted

- 1. Alterations or Modifications of Power Train Components.
- 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of one (1) year from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine. Please contact your nearest dealer where they will send the machine to the engine manufacturer.
- 2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by your dealer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In case of any problem within the boundaries of this warranty, contact the nearest department store, indicate the model number, serial number and the date of purchase of your machine. This warranty does not apply to accidental damages. All implicit warranties are limited to the same time frames. Or contact:

E.M. Services 54 Rue Lambrechts 92400 Courbevoie France Telephone: (1) 46678078 Fax: (1) 46678095

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN.

