

# User's instructions for LAV350

## Charges max 350 kg

### A Important information

The Lift LAV350 has been constructed to lift your tractor laterally with the sole purpose of facilitating the maintenance of your tractor (cleaning of mowing deck). Every other application will not be covered by the constructor's responsibility.

### B. Working instructions ! Never slide underneath the mower.

- Deploy the screw vertically and place the sphere shaped end in the housing of the structure, on the ground.
- Lock the fitting by fixing it into the U shaped form using the 2 supplied screws.
- Always work with shut down engine and on stable and firm ground.
- Take off the collection bag if necessary.
- Always place the lift with the manoeuvring screw at the air filter side of the engine.
- Keep children at a distance.
- In order to avoid all risk of wrong manoeuvring (rocking effect), it is advisable to place the lawn mower next to the wall of your house or garden house before lifting.
- Place the rear wheels onto the central part of the lift for the models with central mowing deck. For models with the mowing deck in front, place the front wheels on the lift fork.
- The lifting must be done with shut down engine, handbrake on and whilst turning the lift-rise clockwise.
- Do not position your feet on the ground structure whilst lifting
- When lifted, fix the lift by means of the security candles and attach the top rear wheel to the structure with the supplied strap.



### C. Maintenance

Periodically grease the lifting screw. Material needs to be kept from bad weather conditions.

