


REPAIR PARTS

GRASS CATCHER - - MODEL NUMBER CE42A

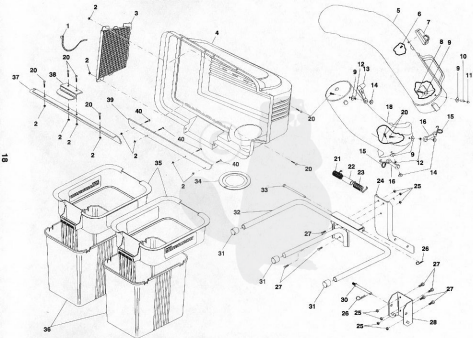

REPAIR PARTS

GRASS CATCHER- - MODEL NUMBER CE42A

**KEY PART
NO. NO. DESCRIPTION**

1 7192J Tie, Cable
 2 69180 Locknut #10-24
 3 127533 Screen, Cover
 4 126816 Cover
 5 126840 Chute, Upper
 6 18021008 Screw, Special #10-14 x 1/2
 7 130933 Full Bagger Indicator
 8 87175 Screw, #10-24 x 1-1/8
 9 19061216 Washer 3/16 x 3/4 x 16 Ga.
 10 7206J Spacer, Split
 11 60867 Nut, Acorn #10-24
 12 10071000 Washer, lock
 13 109808X Latch, Chute
 14 2029J Nut, Weld
 15 130760 Latch, Hook
 16 130759 Rubber, Latch
 18 131271 Chute, Lower
 20 71161010 Screw #10-24 x 5/8
 21 132796 Spring, Cover L.H. (black)

**KEY PART
NO. NO. DESCRIPTION**

22 133235 Spacer, Cover
 23 132983 Spring, Cover R.H. (gray)
 24 126813X Post, Support
 25 63124 Locknut 5/16 x 18
 26 4939M Spring, Retainer
 27 74760512 Bolt, Hex 5/16-18 x 3/4
 28 130889 Bracket, Mounting
 30 131137 Pin, Support Post
 31 134496 Cap, Tubing End
 32 126919X Bagger, Frame
 33 128600 Pin, Hinge
 34 127534 Gasket, Cover
 35 129585 Container, Top
 36 129586 Container, Bottom
 37 132256 Seal, Cover
 38 131859 Latch Handle, Cover
 39 135495 Strip, Seal
 40 71141008 Screw #10-24 x 1/2
 — 104419X Bag, 3.0 mil. 30 Gallon Trash (not included with bagger)
 — 132410 Owner's Manual (English)
 — 130933 Owner's Manual (French)

