

LDT-1002 & LDT1002GY 10 Cu. Ft. Dump Cart

ASSEMBLY INSTRUCTIONS



**Painted parts have two part numbers due to the two available colors for this model.

Tools Needed For Cart Assembly:


Two - 7/16" Wrenches Two - 1/2" Wrenches One - 9/16" Wrench One - Pair Pliers

One - Large Flat Blade Screw Driver

B Body (Black) BY Body (Gray) BY Tow Bar (Black) BY Tow Bar (Gray)	Qty 1	Ref. No. 10 11 12	Parts No 1262 1264	Description Cotter Pin 3/4" Flat Washer
B Body (Black) Body (Gray) B Tow Bar (Black)	1	10 11	1262	
By Body (Gray) B Tow Bar (Black)	1	11		
B Tow Bar (Black)	1		1264	
	1	10		3/4 Flat Washer
GY Tow Bar (Gray)		12	4468	1/4" x 2-3/4" Spacer
	1 1	13	1586	5/16" x 3/4" Truss Hd Bolt
B Tailgate (Black)	1	14	4497	Spring
Y Tailgate (Gray)		15	4552	3/8" x 3/4" Truss Head Bolt
B Pedestal (Black)	1	16	1273	3/8" Hex Head Nut
Y Pedestal (Gray)	1 11	17	1248	5/16" x 3/4 Hex Head Bolt
B Undercarriage (Black)	1	18	1275	5/16" Hex Head Nut
Y Undercarriage (Gray)	1 1	19	1274	3/8" Lock Washer
Clevis (Black)	1 1	20	1276	5/16" Lock Washer
Y Clevis (Gray)	1 !!	21	4466	1/4" x 3-1/2" HH Bolt
P Latch (Black)	1 1	22	1558	1/4" Lock Nut
Y Latch (Gray)		23	1817	1/4" Flat Washer
Axle	1	24	1840	1/2" x 1-3/4" Clevis Pin
I Manage	2	25	1042	#14 Hitch Pin Clip
G G G G G	GY Pedestal (Gray) 6B Undercarriage (Black) GY Undercarriage (Gray) Clevis (Black) GY Clevis (Gray) 5P Latch (Black) GY Latch (Gray)	GY Pedestat (Gray) 1 1 1 1 1 1 1 1 1	GY Pedestal (Gray) 17 17 18 17 18 17 18 17 18 19 19 19 19 19 19 19	GY Pedestal (Gray) 17 1248


1.) Insert 1/4" Spacer (12) through Spring (14) and the hole at bottom of Latch (7). Be sure Spring is attached to Latch as shown. Push Latch down through slot in Tow Bar (2) as shown. NOTE: Grab the Latch Handle from the other side of the Tow Bar and pull down to align the Spacer with the holes in the sides of the Tow Bar. Slide 1/4" × 3-1/2" Bolt (21) through side of Tow Bar, Washer (23), Spacer, Washer (23), and other side of Tow Bar. Secure with 1/4" Lock Nut (22).

Attach the Clevis (6) to the Tow Bar using 5/16" x 3/4" Hex Head Bolts (17), 5/16" Lock Washers (20) and 5/16" Hex Head Nuts (18). Insert the 1/2" x 1-3/4" Clevis Pin (24) through the large hole in the Clevis and Tow Bar. Secure the Clevis Pin by inserting the #14 Hitch Pin Clip (25) through the small hole on the end.

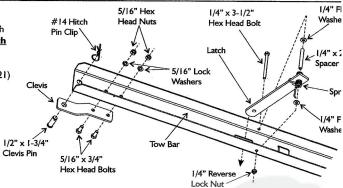

2.) Attach Undercarriage Axle Support (5) on bottom of Body (1). Use 3/8" x 3/4" Truss Head Bolts (15), 3/8" Lock Washers (19), and secure with 3/8" Hex Head Nuts (16).


Bolt the Pedestal (4) at front of Body with 5/16" x 3/4" Truss Head Bolts (13) from inside. On the outside, use 5/16" Lock Washers (20) and secure with 5/16" Hex Head Nuts (18).

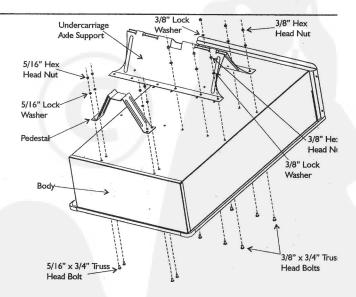

LDT1002 & LDT1002GY ASSEMBLY INSTRUCTIONS Continued

3.) Slide the Axle (8) halfway through the Undercarriage Axle Support. Next, insert the Axle through both holes in the end of the Tow Bar and on through the other side of the Undercarriage Axle Support. Connect the Tow Bar to the Pedestal using the Tow Bar Latch.

Place a 3/4" Flat Washer (11) over the Axle up against the Undercarriage Axle Support. Next, place a Wheel (9) onto the Axle. Place another 3/4" Flat Washer (11) over the Axle and secure the Wheel into place by inserting the Cotter Pin (10) through the hole in the end the Axle and spreading the legs of the Cotter Pin outward. Repeat the Wheel attachment step for the other wheel.

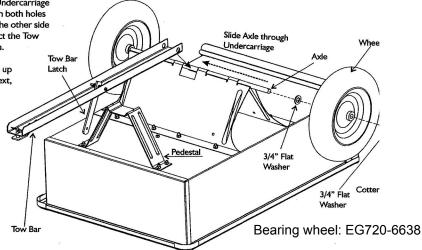

OPERATION

TO DUMP - Pull latch toward mower and Cart Body will tilt back to dump position. TO RETURN TO PULLING POSITION -Push down on front edge of Cart Body until Latch engages and secures to Tow Bar. Tractor speed should be governed by weight of load. The heavier the load, the slower the speed for safe operation.

MAINTENANCE

Grease Wheels at regular intervals, at least every six months, more frequently if used regularly.

Check tire pressure at regular intervals. Proper inflation will prolong life of tire.

NOTE:

650 Lbs. Maximum Capacity Approximate weight (I) Cu. Ft. DIRT-150# SAND-125# GRAVEL-110# Max. Speed 4 MPH

WARNING OF DANGER OF IMPROPER USE OF THIS TRAILER CART. THIS UNIT IS INTENDED FOR USE ONLY WITH RIDING MOWERS OR **GARDEN TRACTORS. IT IS DEFINITELY NOT** FOR HIGHWAY USE, BEING PULLED AT HIGH SPEEDS, OR TRANSPORTING PASSENGERS OF ANY SORT. SUCH USE COULD RESULT IN INJURIES FOR WHICH WE CANNOT BE HELD RESPONSIBLE.

CUSTOMER SUPPORT

At Precision Products, Inc. delivering quality, value and outstanding service is our goal. However, sometimes parts do become damaged or lost during transport from our facilities to the store. If you have any problems, please do not return this merchandise to the store. Call us and we will take care of any problem you may have with this unit.

When ordering replacement parts, please have the model number, part description and part number available.

Send To: Precision Products, Inc.

> 316 Limit Street Lincoln, IL 62656

Toll Free (800) 225-5891 Ext. #20

Phone (217) 735-1590 Fax (217) 735-2435

Visit us on the web: www.precisionprodinc.co

LIMITED WARRANTY

This unit is warranted against defects in materials and workmanship to the original purchaser, under normal use and service for a period of ninety (90) days from the date of sale. During the Warranty Period, we will repreplace, at our option, free of charge to the original purchaser, any part of the unit that our examination shows be defective in workmanship or materials.

This Warranty does not apply to damage in transit or damage caused by misuse, abuse, neglect, normal wear, or alterations by unauthorized persons.


Latch Handle Assembly Instructions

Tools Needed For Latch Assembly

Two-7/16" Wrenches


Step 1

Slide Spring over the Latch Handle as shown below.

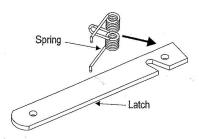


Step 3

Slide the Latch, Spring and Spacer through the Tow Bar. This will cause the Spring to open.

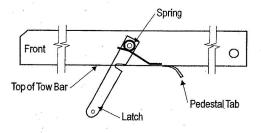


Step 5

Slide a 1/4" x 2-3/4" Hex Head Bolt through the Washers and Spacer and secure with a 1/4" Nylon Lock Nut.

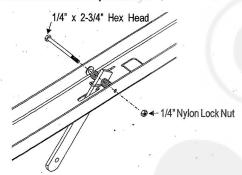


Step 2

Slide the 1/4" x 2-3/4" Spacer through the Spring and Latch as shown below.

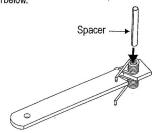


Step 4

Slide a 1/4" Flat Washer on each side of the Spacer.

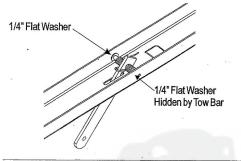

Finish

If assembled correctly the latch should be forced toward the back of the $\operatorname{\sf Tow}\nolimits$ Bar by the spring.

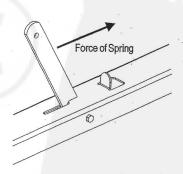

Manufactured by Precision Products Inc., 316 Limit St., Lincoln, Illinois 62656 U.S.A.

####

06/06 Rev.1

Precision