

EDR-260


Serial number: 20000001-20999999

Last update date: 03/16/2020

TABLE OF CONTENTS

CYLINDER, PISTON, CRANKSHAFT.....	1
CRANKCASE	3
MAGNETO.....	5
GEAR CASE.....	7
AIR CLEANER, CARBURETOR.....	11
CARBURETOR.....	13
FUEL TANK.....	15
MUFFLER.....	17
RECOIL STARTER, PULLY	19
HANDLE.....	21
ACCESSORIES	23


CYLINDER, PISTON, CRANKSHAFT

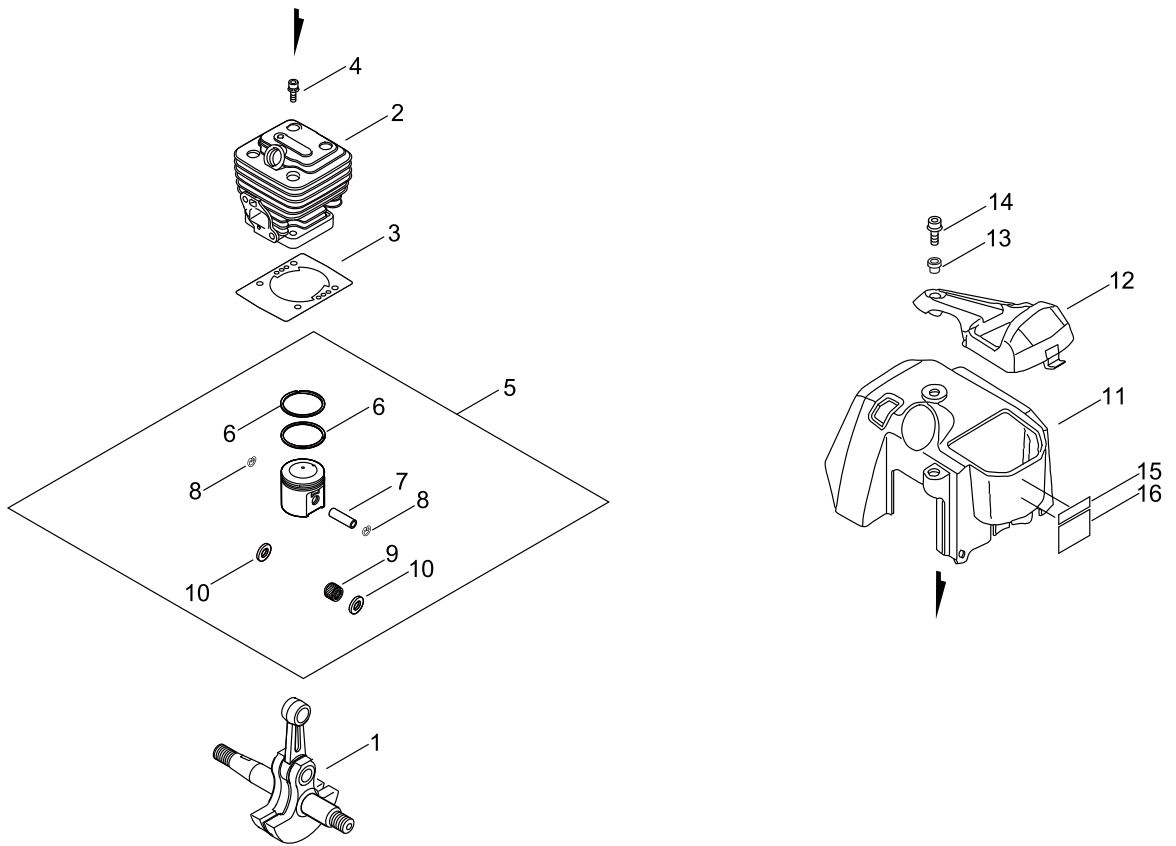

CYLINDER, PISTON, CRANKSHAFT

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A011-001110	CRANKSHAFT,ASY	1	
2		A130-000371	CYLINDER	1	
3		V100-000070	GASKET,CYL	1	
4		900162-05022	BOLT HSH	4	5*22
5		P021-004740	PISTON KIT	1	
6	+	A101-000010	RING,PISTON	2	
7	+	V606-000000	PIN,ENG 8	1	5*8*28
8	+	100015-04630	CIRCLIP, PISTON PIN	2	
9	+	V553-000020	BEARING,NEEDLE 8	1	KBK8X11X8.8X4
10	+	100014-55930	SPACER, PISTON PIN	2	
11		A160-001130	COVER,CYLINDER	1	
12		A161-000090	DUCT,AIR	1	
13		V353-000020	COLLAR,5	1	12*5.5*4.5L
14		900106-05016	BOLT HSH, FLANGE	1	5*16
15		X503-009440	LABEL,MODEL	1	EDR-260
16		X505-002570	LABEL,CAUTION	1	SA25*31


CRANKCASE

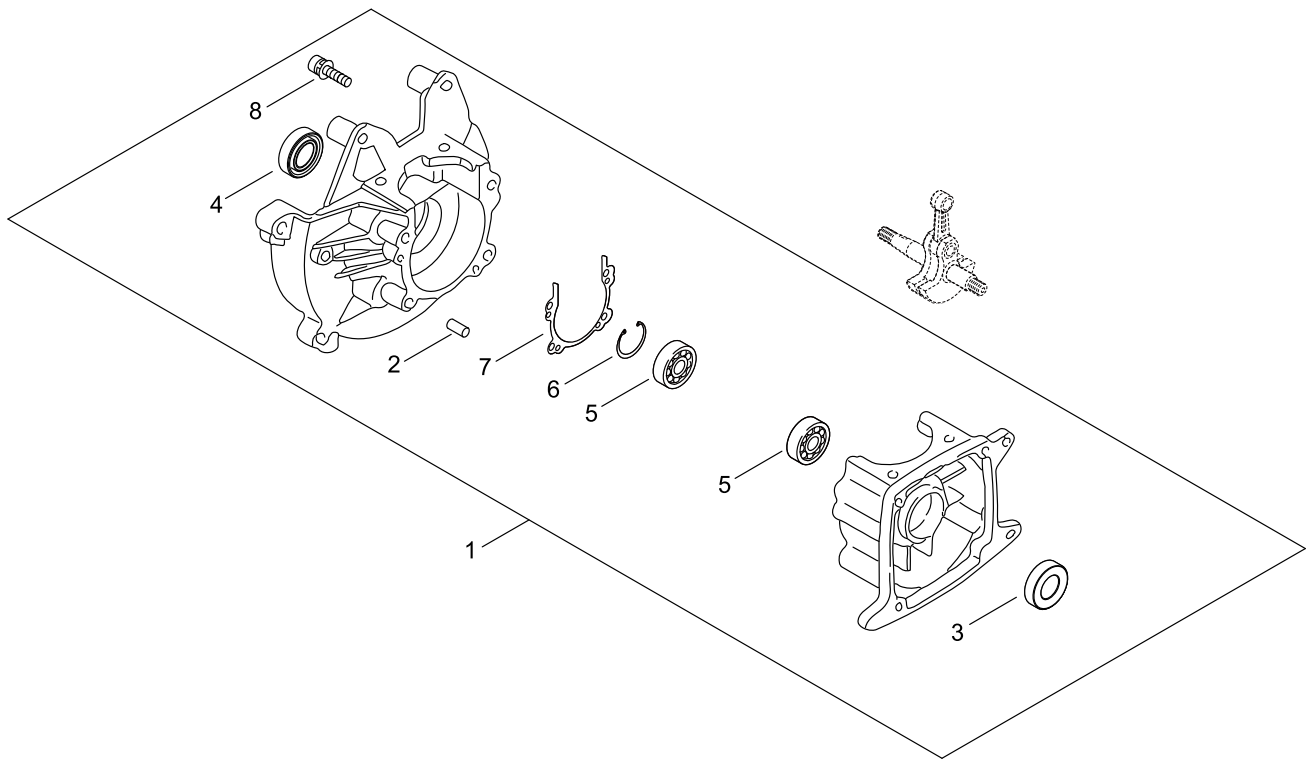

CRANKCASE

Key No.	LV (+)	Part No	Description	Qty	Standard
1		P021-000941	CRANKCASE KIT	1	
2	+	V622-000090	PIN,STRAIGHT 4	2	
3	+	100213-05530	OILSEAL	1	ISCD 12 22 7
4	+	100212-28230	OILSEAL ISCD 12*28*7	1	ISCD 12*28*7
5	+	900800-36001	BEARING, BALL	2	6001
6	+	900702-00028	RETAINING RING, INTERNAL	1	CR-28
7	+	100242-55930	GASKET, CRANKCASE	1	
8	+	900162-05025	BOLT HSH	4	5*25


MAGNETO

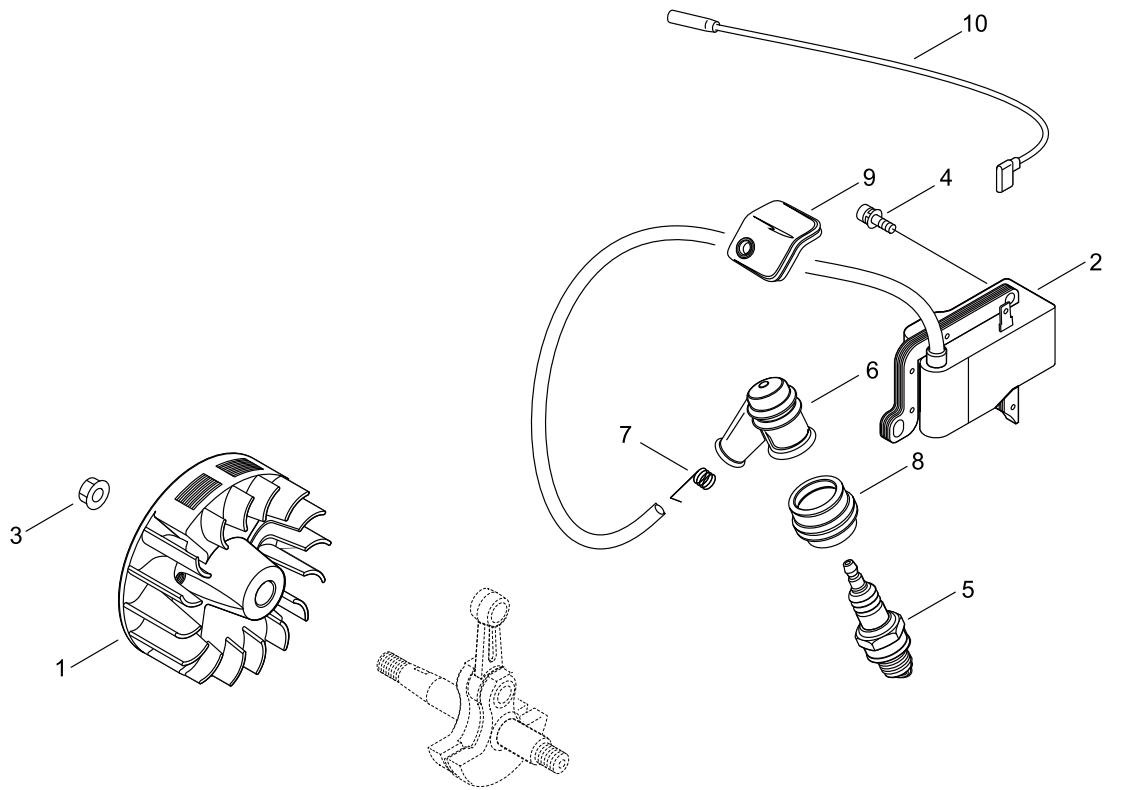

MAGNETO

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A409-001191	ROTOR, MAGNETO	1	ID#C8429
2		A411-000110	COIL,IGNITION	1	
3		900515-00008	NUT, FLANGE	1	8
4		900162-05016	BOLT HSH	2	5*16
5		159010-19830	PLUG, SPARK (BPM-8Y)	1	BPM-8Y
6		A427-000013	CAP,SPARK PLUG	1	
7		A426-000010	TERMINAL,SPARKPLUG	1	
8		A429-000000	COVER,CAP	1	
9		150112-42030	BUSHING	1	
10		162010-56430	LEAD, GROUND	1	145L


GEAR CASE

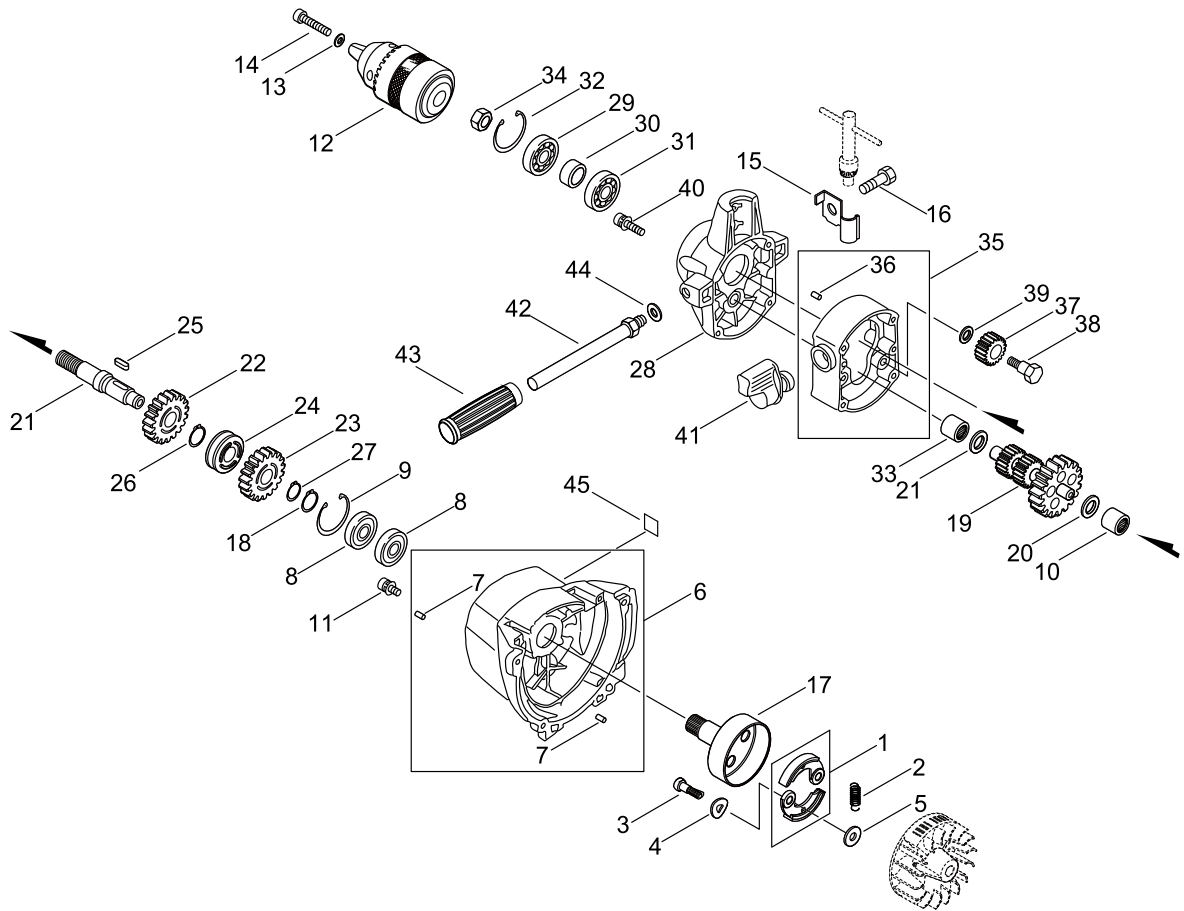

GEAR CASE

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A553-000010	ARM,CLUTCH	2	
2		V451-000090	SPRING,TENSION	1	
3		175046-56030	SHAFT, CLUTCH	2	
4		175049-56030	WASHER	2	8.5*16*0.5
5		175048-05530	WASHER (I)	2	6.2*19*1.0
6		P021-005831	COVER,FAN	1	
7	+	900330-40080	ROLLER	4	4*8
8		900801-06002	BEARING, BALL	2	6002LU(DU)
9		900702-00032	RETAINING RING, INTERNAL	1	CR-32
10		604221-05560	BEARING,NEEDLE	1	
11		900162-05018	BOLT HSH	4	5*18
12		604051-05560	CHUCK	1	
13		175014-04630	WASHER, CLUTCH	1	
14		900105-06020	BOLT HSH	1	6*20
15		897575-05560	SPRING, FLAT	1	
16		900100-10015	BOLT	1	10*15
17		A556-000250	DRUM,CLUTCH	1	
18		900701-00015	RETAINING RING, EXTERNAL	1	CS-15
19		P021-005820	GEAR W/SHAFT	1	
20		604223-05560	WASHER	2	
21		606021-20960	SHAFT, AXLE	1	
22		V650-000130	GEAR,SPUR	1	
23		V650-000140	GEAR,SPUR	1	
24		P021-005840	NAIL, CLUTCH	1	
25		900325-04016	KEY, FEATHER	1	4*4*16
26		900701-00015	RETAINING RING, EXTERNAL	1	CS-15
27		900701-00012	RETAINING RING, EXTERNAL	1	CS-12
28		C531-000182	CASE,GEAR	1	
29		900802-06002	BEARING, BALL	1	6002LLU(DDU)
30		604044-05560	COLLAR	1	
31		900800-36002	BEARING, BALL	1	6002
32		900702-00032	RETAINING RING, INTERNAL	1	CR-32
33		604221-05560	BEARING,NEEDLE	1	
34		224319-20960	NUT, 12	1	
35		P021-005801	CASE, GEAR	1	
36		900330-40080	ROLLER	2	4*8
37		V650-000150	GEAR,SPUR	1	
38		V204-000070	BOLT,6	1	
39		V305-000020	WASHER,CIRCULAR 7	1	
40		900162-05050	BOLT HSH	4	5*50
41		703005-20960	LEVER, CLUTCH	1	
42		C400-000090	HANDLE,FRONT	1	
43		351515-22330	GRIP	1	


GEAR CASE

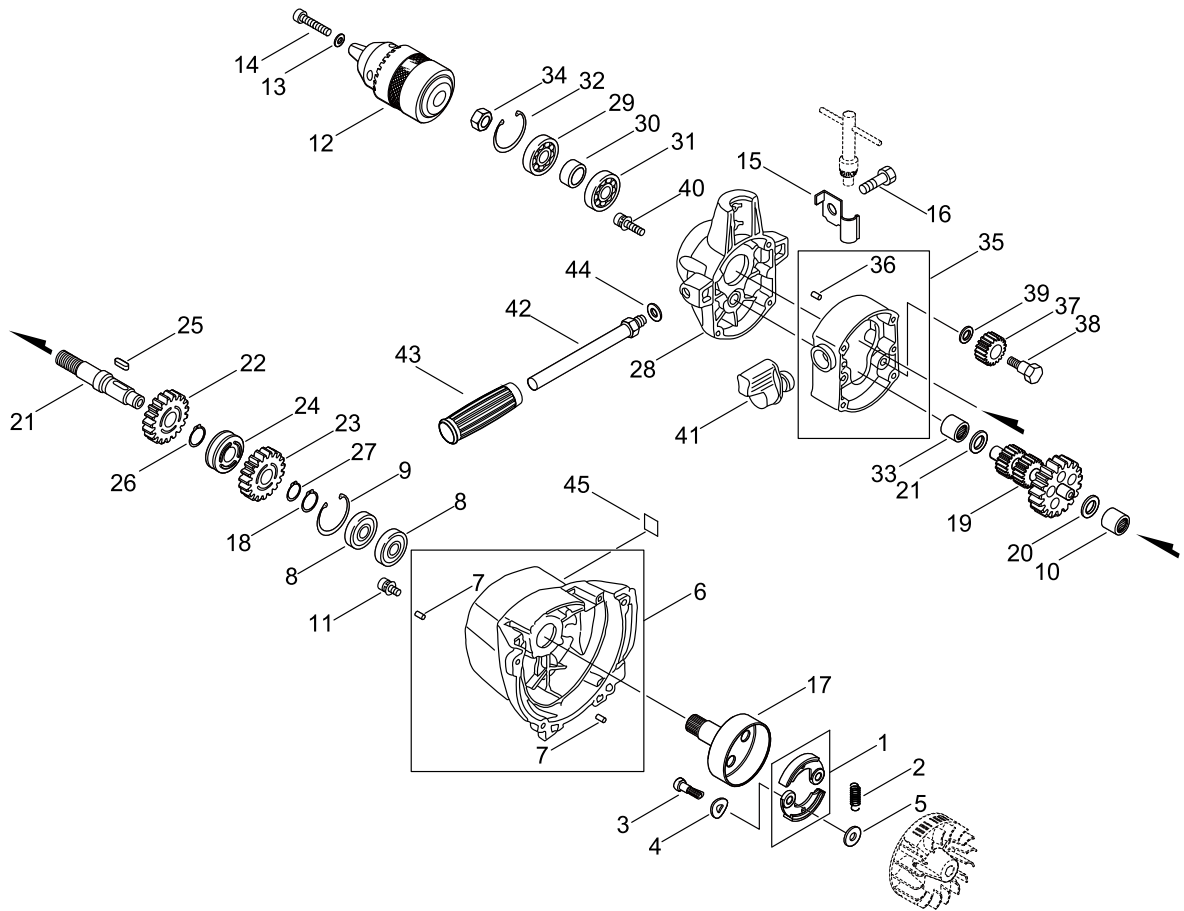

GEAR CASE

Key No.	LV (+)	Part No	Description	Qty	Standard
44		900600-00010	WASHER	1	10
45		X505-002310	LABEL,CAUTION	1	HOT CAUTION


AIR CLEANER, CARBURETOR

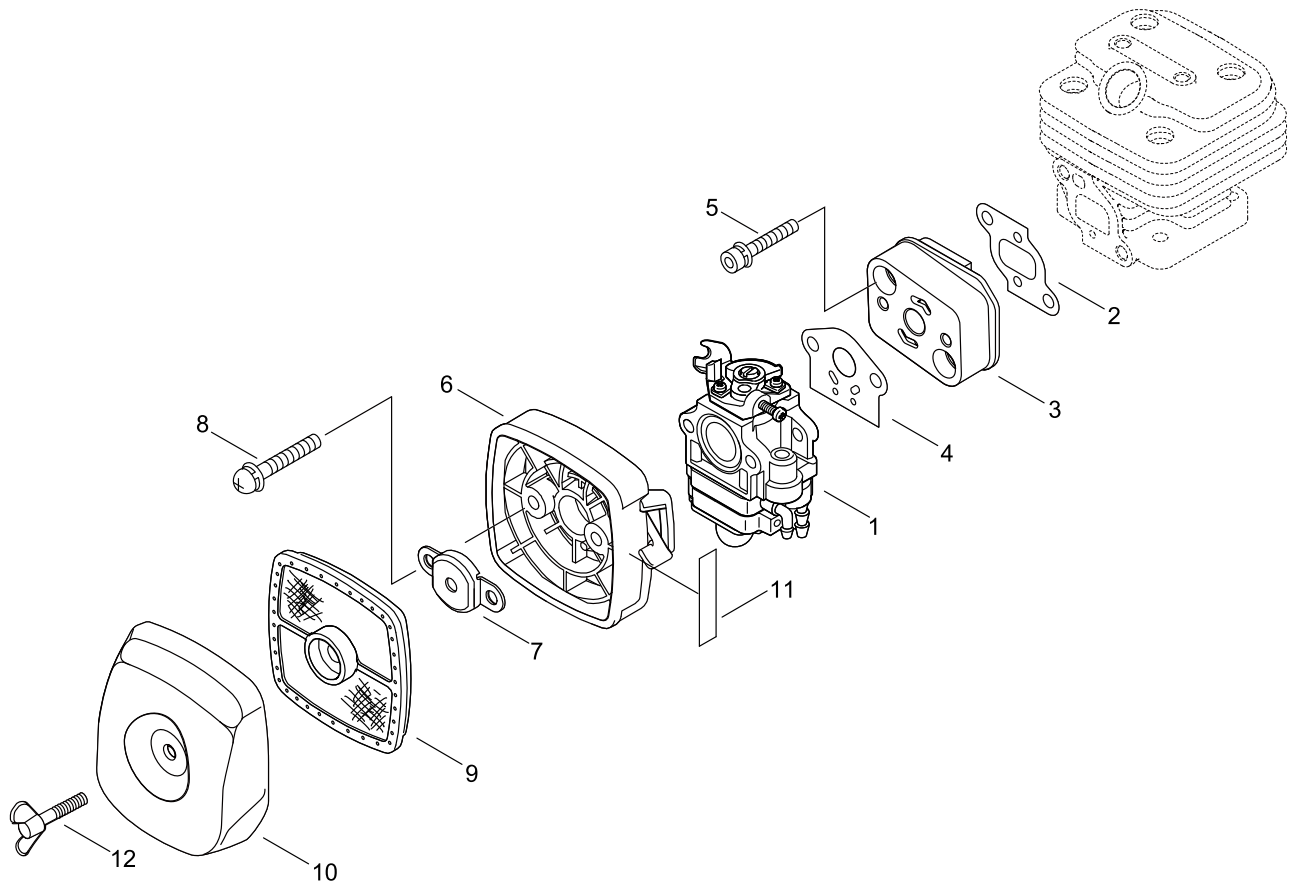

AIR CLEANER, CARBURETOR

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A021-005240	CARBURETOR, DIAPHRAGM	1	WYJ-542
2		130010-55930	GASKET, INTAKE	1	
3		130017-56431	INSULATOR	1	
4		130010-13410	GASKET, INTAKE	1	
5		900162-05025	BOLT HSH	2	5*25
6		P021-049010	CASE,CLEANER	1	
7		129011-52730	PLATE, PREVENT	1	
8		900242-05060	SCREW	2	5*60
9		A226-001410	ELEMENT,AIR FILTER	1	
10		130313-05863	LID, AIR CLEANER	1	
11		890121-52730	LABEL, CHOKE	1	
12		210417-52730	BOLT, WING	1	5*20


CARBURETOR

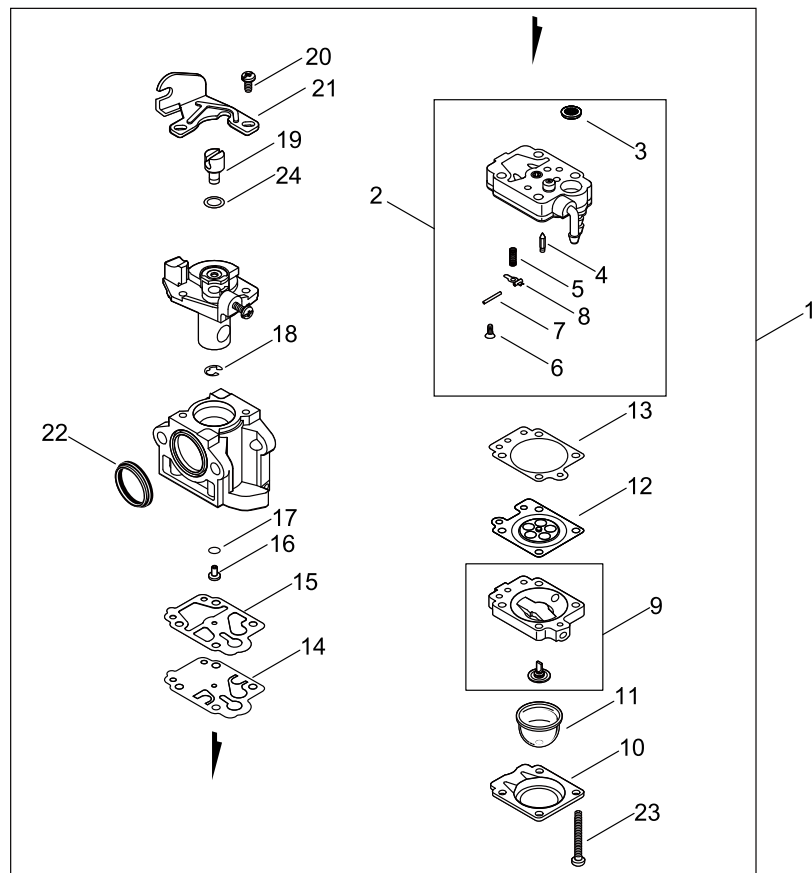

CARBURETOR

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A021-005240	CARBURETOR, DIAPHRAGM	1	WYJ-542
2	+	P003-000870	BODY ASSEMBLY, PUMP	1	
3	++	123126-10631	SCREEN, INLET	1	
4	++	123137-19830	VALVE, INLET NEEDLE	1	
5	++	123122-05560	SPRING, METER. LEVER	1	
6	++	123139-05560	SCREW, M. LEVER PIN	1	
7	++	123138-03930	PIN, METERING LEVER	1	
8	++	123123-03930	LEVER, METERING	1	
9	+	123180-05560	BODY, AIR PURGE	1	
10	+	123142-05560	COVER, PRIMER PUMP	1	
11	+	123181-40630	PUMP, PRIMER	1	
12	+	P003-001850	DIAPHRAGM, METERING	1	
13	+	123140-05560	GASKET, M. DIAPHRAGM	1	
14	+	123112-40630	DIAPHRAGM, PUMP	1	
15	+	P003-000100	GASKET, PUMP	1	
16	+	P003-000970	JET	1	
17	+	123183-40630	O-RING	1	
18	+	123173-07930	CLIP	1	
19	+	123172-45130	SWIVEL	1	
20	+	123114-40630	SCREW	2	
21	+	P003-000180	BRACKET CABLE	1	
22	+	123143-12110	RING, PACKING	1	
23	+	123110-05560	SCREW, PUMP COVER	4	
24	+	123149-54230	WASHER	1	


FUEL TANK

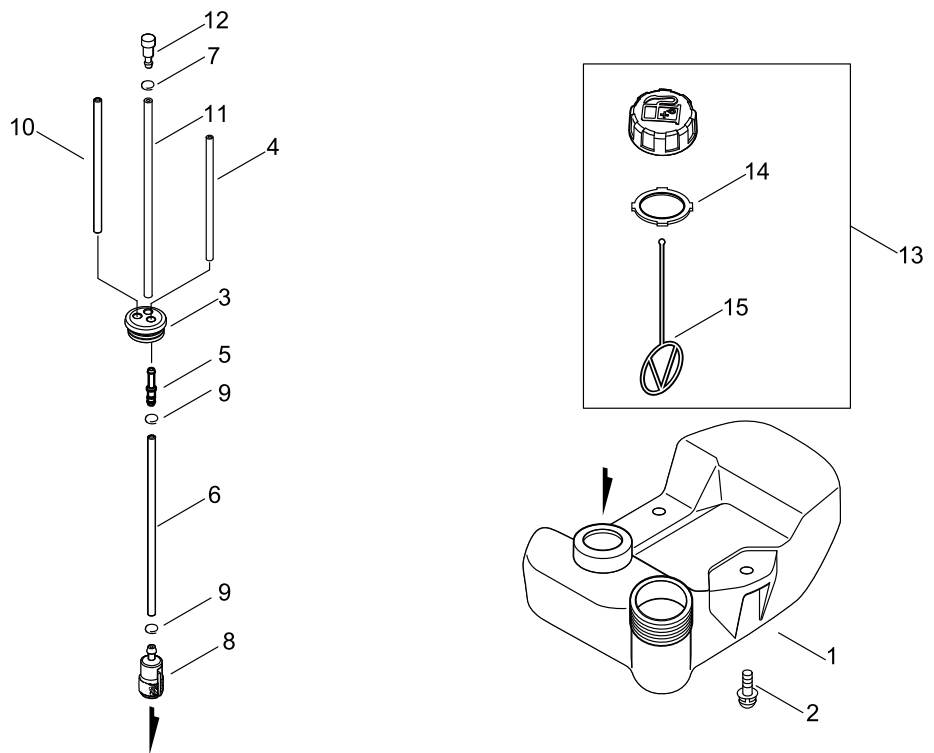

FUEL TANK

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A350-002320	TANK, FUEL	1	
2		900239-05018	SCREW	3	5*18
3		132115-55931	GROMMET, FUEL	1	3 ϕ 5
4		V471-005600	PIPE	1	3*5.5*67
5		V186-000520	JOINT,PIPE	1	
6		132010-56031	PIPE	1	3*6*110
7		V490-001230	CLIP	1	
8		131205-19832	STRAINER, FUEL	1	
9		V490-001230	CLIP	2	
10		132012-56030	PIPE	1	3*6*80 YL
11		V471-000111	PIPE	1	3*6*115
12		A356-000031	VALVE,CHECK	1	
13		P021-040030	CAP ASY,FUEL TANK	1	
14		V107-000150	GASKET,FUEL CAP	1	
15		131051-56030	CLIP, FUEL CAP	1	100L


MUFFLER

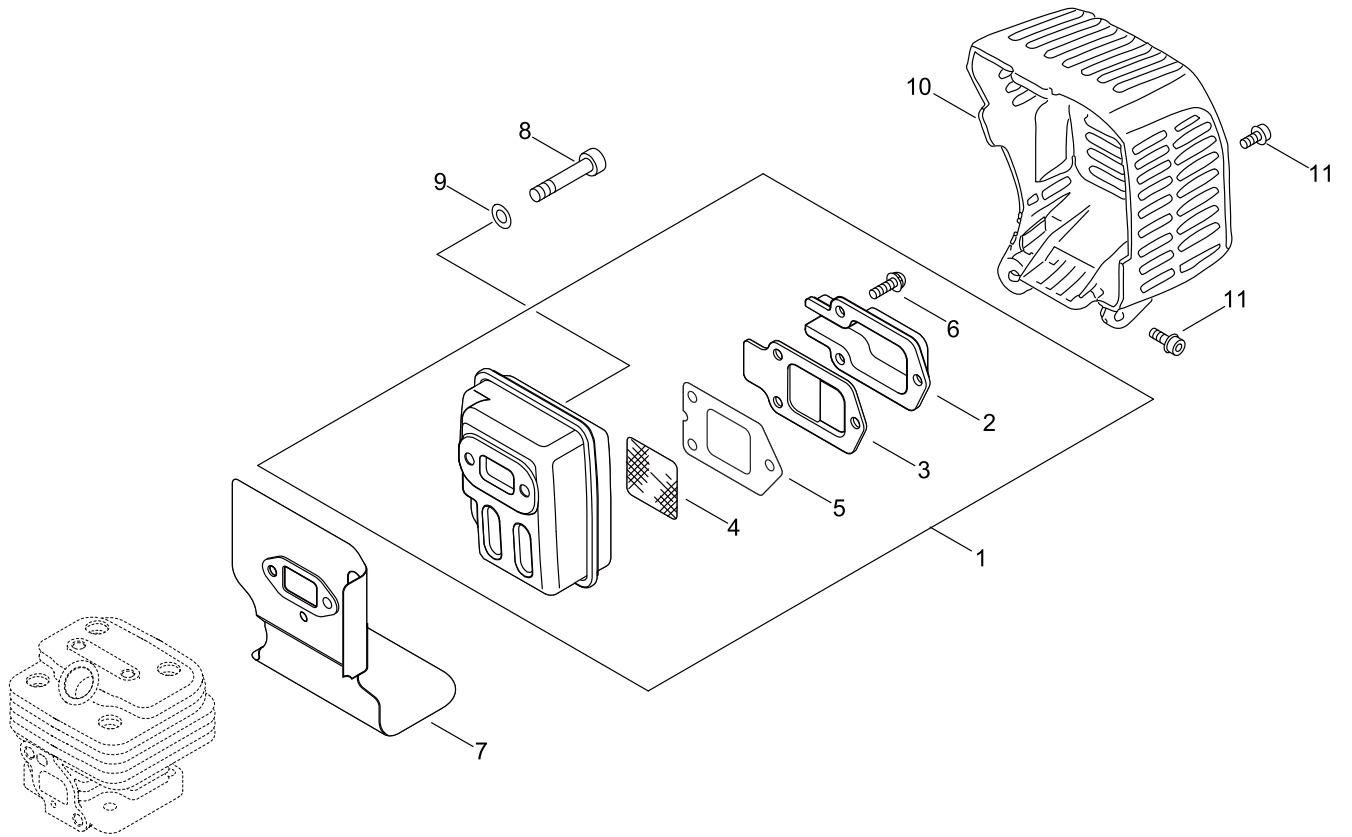

MUFFLER

Key No.	LV (+)	Part No	Description	Qty	Standard
1		P021-005770	MUFFLER ASY	1	
2	+	A313-000041	GUIDE,EXH	1	
3	+	145876-42030	LID, MUFFLER (B)	1	
4	+	145862-40630	SCREEN, MUFFLER	1	
5	+	V104-000003	GASKET,EXHAUST	1	
6	+	900242-04010	SCREW	3	4*10
7		V104-000061	GASKET,EXHAUST	1	
8		900105-05055	BOLT HSH	2	5*55
9		900602-00005	WASHER	2	5
10		A320-000220	COVER,MUFFLER	1	
11		900106-05012	BOLT HSH, FLANGE	2	5*12


RECOIL STARTER, PULLY

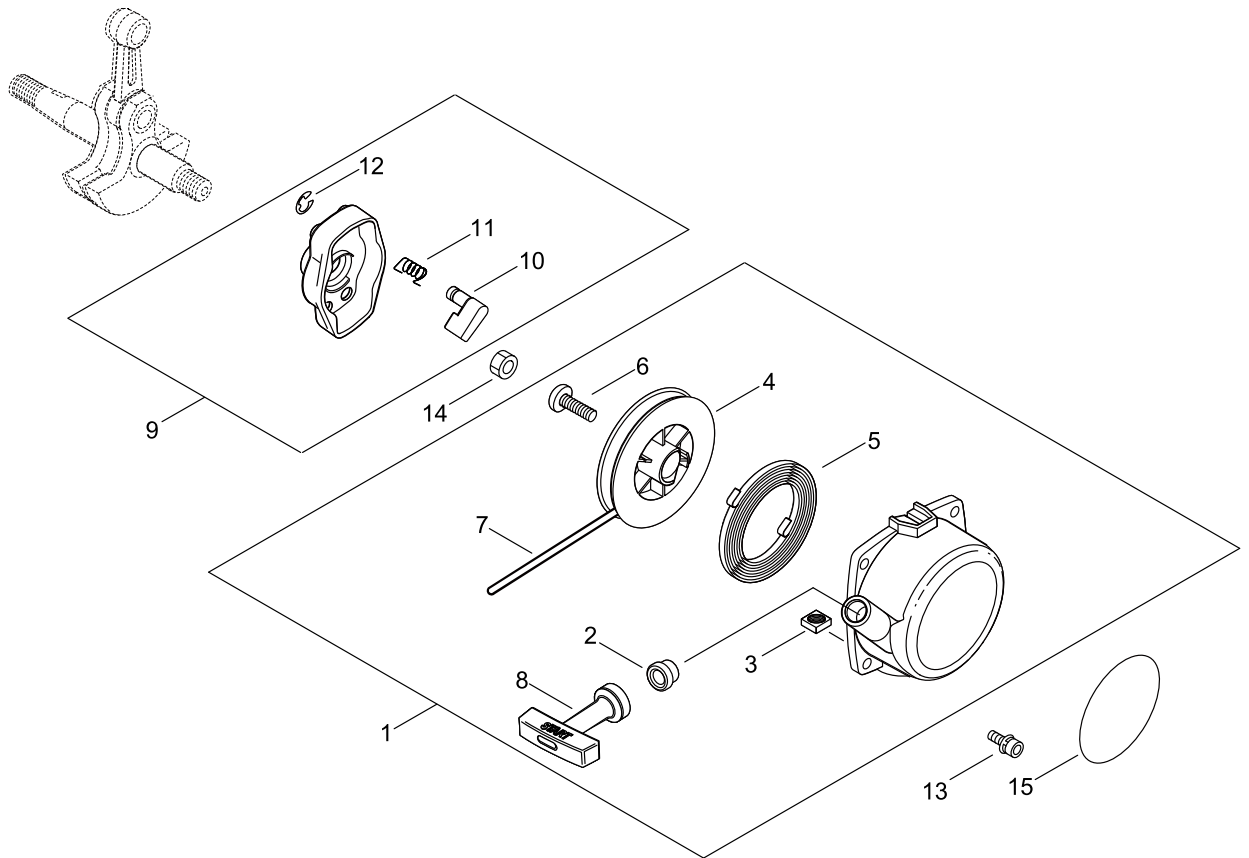

RECOIL STARTER, PULLY

Key No.	LV (+)	Part No	Description	Qty	Standard
1		177200-55931	STARTER ASY	1	
2	+	P022-045770	GUIDE, ROPE	1	
3	+	P022-022010	NUT	1	
4	+	177215-40630	DRUM, STARTER	1	
5	+	177220-40630	SPRING, REWIND	1	
6	+	177236-44330	SCREW	1	
7	+	177226-61830	ROPE, STARTER	1	3.5*850
8	+	177228-27030	GRIP, STARTER	1	
9		177202-40630	PAWL ASSY, STARTER	1	
10	+	177218-40630	PAWL, STARTER	1	WHITE
11	+	177234-40630	SPRING, RETURN	1	
12	+	P022-002100	E-RING	1	4
13		900162-04014	BOLT HSH	4	4*14
14		900502-00008	NUT	1	8
15		X502-000330	LABEL,ECHO	1	ECHO





HANDLE

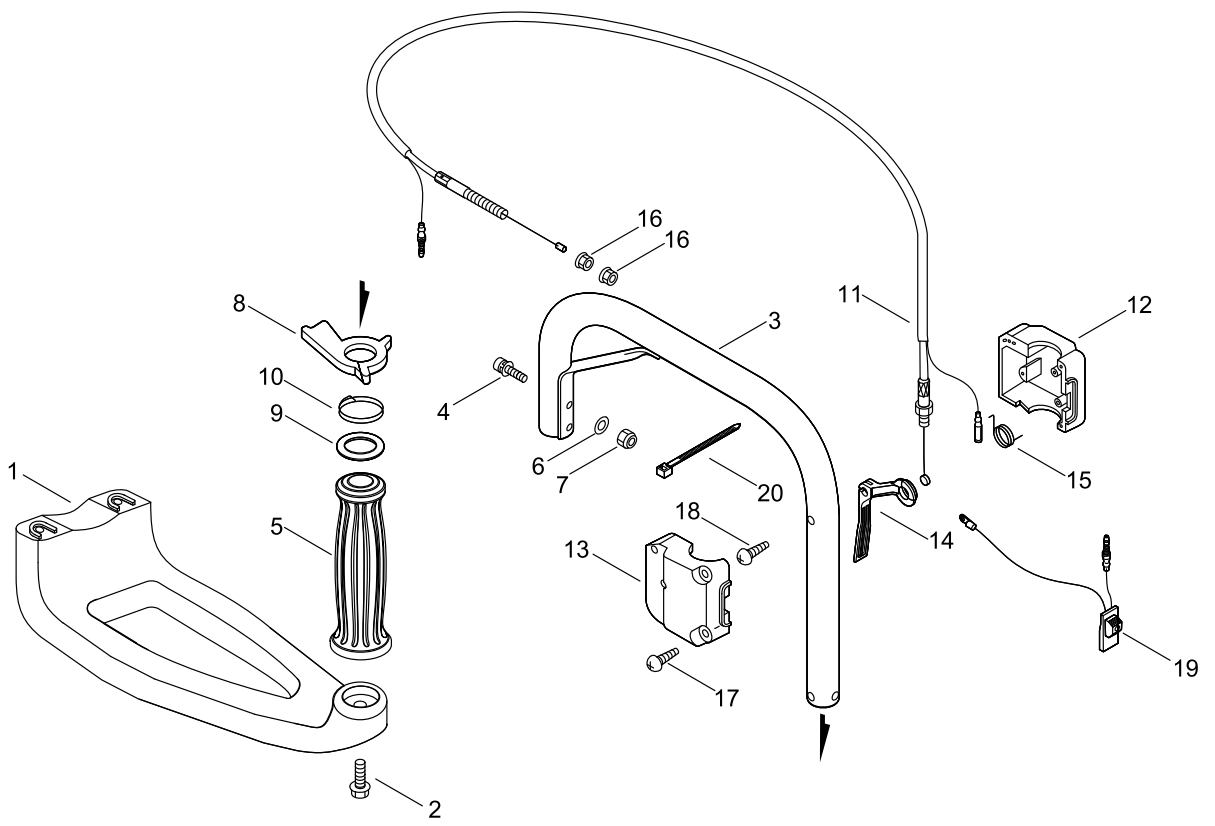

HANDLE

Key No.	LV (+)	Part No	Description	Qty	Standard
1		A175-000021	STAND	1	
2		900106-05016	BOLT HSH, FLANGE	3	5*16
3		C410-000160	HANDLE,REAR	1	
4		900162-05035	BOLT HSH	2	5*35
5		351315-27931	GRIP, HANDLE	1	
6		900602-00005	WASHER	2	5
7		900560-00005	NUT, LOCK	2	5
8		178012-02061	LOCKOUT, THROTTLE	1	
9		178070-02061	SPACER	1	19.5*34*0.5
10		178013-02060	SPRING, THR. LOCK	1	
11		V043-000010	CABLE,ASM CONTROL	1	EDR-260
12		178024-01261	BRACKET, THROTTLE	1	
13		178052-01261	BRACKET, THROTTLE	1	
14		C450-000150	TRIGGER,THROTTLE	1	
15		178043-01260	SPRING, THR. RETURN	1	
16		900502-00006	NUT	2	6
17		900245-04025	SCREW, TAPPING	4	4*25
18		900245-04030	SCREW, TAPPING	1	4*30
19		163400-04460	SWITCH, IGNITION(JR)	1	
20		178121-56030	BAND	1	CV-125B BL

ACCESSORIES

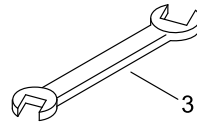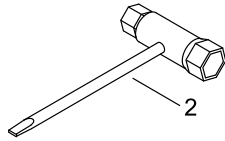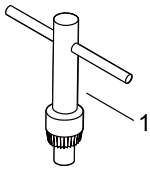

ACCESSORIES

Key No.	LV (+)	Part No	Description	Qty	Standard
1		897570-05560	CHUCK, KEY	1	
2		895410-03930	WRENCH, W/S. DRIVER	1	
3		895122-20960	SPANNER 17*19	1	
4		895412-20961	TOOL, BAR	1	HEXBAR B=10, L=50

NUMERICAL PARTS INDEX

Part No	Part description	Page	Part No	Part description	Page	Part No	Part description	Page
100014-55930	SPACER, PISTON PIN	2	177215-40630	DRUM, STARTER	20	900242-04010	SCREW	18
100015-04630	CIRCLIP, PISTON PIN	2	177218-40630	PAWL, STARTER	20	900242-05060	SCREW	12
100212-28230	OILSEAL ISCD 12*28*7	4	177220-40630	SPRING, REWIND	20	900245-04025	SCREW, TAPPING	22
100213-05530	OILSEAL	4	177226-61830	ROPE, STARTER	20	900245-04030	SCREW, TAPPING	22
100242-55930	GASKET, CRANKCASE	4	177228-27030	GRIP, STARTER	20	900325-04016	KEY, FEATHER	8
123110-05560	SCREW, PUMP COVER	14	177234-40630	SPRING, RETURN	20	900330-40080	ROLLER	8
123112-40630	DIAPHRAGM, PUMP	14	177236-44330	SCREW	20	900502-00006	NUT	22
123114-40630	SCREW	14	178012-02061	LOCKOUT, THROTTLE	22	900502-00008	NUT	20
123122-05560	SPRING, METER. LEVER	14	178013-02060	SPRING, THR. LOCK	22	900515-00008	NUT, FLANGE	6
123123-03930	LEVER, METERING	14	178024-01261	BRACKET, THROTTLE	22	900560-00005	NUT, LOCK	22
123126-10631	SCREEN, INLET	14	178043-01260	SPRING, THR. RETURN	22	900600-00010	WASHER	10
123137-19830	VALVE, INLET NEEDLE	14	178052-01261	BRACKET, THROTTLE	22	900602-00005	WASHER	18
123138-03930	PIN, METERING LEVER	14	178070-02061	SPACER	22	900602-00005	WASHER	22
123139-05560	SCREW, M. LEVER PIN	14	178121-56030	BAND	22	900701-00012	RETAINING RING, EXTERNAL	8
123140-05560	GASKET, M. DIAPHRAGM	14	210417-52730	BOLT, WING	12	900701-00015	RETAINING RING, EXTERNAL	8
123142-05560	COVER, PRIMER PUMP	14	224319-20960	NUT, 12	8	900702-00028	RETAINING RING, INTERNAL	4
123143-12110	RING, PACKING	14	351315-27931	GRIP, HANDLE	22	900702-00032	RETAINING RING, INTERNAL	8
123149-54230	WASHER	14	351515-22330	GRIP	8	900800-36001	BEARING, BALL	4
123172-45130	SWIVEL	14	604044-05560	COLLAR	8	900800-36002	BEARING, BALL	8
123173-07930	CLIP	14	604051-05560	CHUCK	8	900801-06002	BEARING, BALL	8
123180-05560	BODY, AIR PURGE	14	604221-05560	BEARING,NEEDLE	8	900802-06002	BEARING, BALL	8
123181-40630	PUMP, PRIMER	14	604223-05560	WASHER	8	A011-001110	CRANKSHAFT,ASY	2
123183-40630	O-RING	14	606021-20960	SHAFT, AXLE	8	A021-005240	CARBURETOR, DIAPHRAGM	12
129011-52730	PLATE, PREVENT	12	703005-20960	LEVER, CLUTCH	8	A021-005240	CARBURETOR, DIAPHRAGM	14
130010-13410	GASKET, INTAKE	12	890121-52730	LABEL, CHOKE	12	A101-000010	RING,PISTON	2
130010-55930	GASKET, INTAKE	12	895122-20960	SPANNER 17*19	24	A130-000371	CYLINDER	2
130017-56431	INSULATOR	12	895410-03930	WRENCH, W/S. DRIVER	24	A160-001130	COVER,CYLINDER	2
130313-05863	LID, AIR CLEANER	12	895412-20961	TOOL, BAR	24	A161-000090	DUCT,AIR	2
131051-56030	CLIP, FUEL CAP	16	897570-05560	CHUCK, KEY	24	A175-000021	STAND	22
131205-19832	STRAINER, FUEL	16	897575-05560	SPRING, FLAT	8	A226-001410	ELEMENT,AIR FILTER	12
132010-56031	PIPE	16	900100-10015	BOLT	8	A313-000041	GUIDE,EXH	18
132012-56030	PIPE	16	900105-05055	BOLT HSH	18	A320-000220	COVER,MUFFLER	18
132115-55931	GROMMET, FUEL	16	900105-06020	BOLT HSH	8	A350-002320	TANK, FUEL	16
145862-40630	SCREEN, MUFFLER	18	900106-05012	BOLT HSH, FLANGE	18	A356-000031	VALVE,CHECK	16
145876-42030	LID, MUFFLER (B)	18	900106-05016	BOLT HSH, FLANGE	2	A409-001191	ROTOR, MAGNETO	6
150112-42030	BUSHING	6	900106-05016	BOLT HSH, FLANGE	22	A411-000110	COIL,IGNITION	6
159010-19830	PLUG, SPARK (BPM-8Y)	6	900162-04014	BOLT HSH	20	A426-000010	TERMINAL,SPARKPLUG	6
162010-56430	LEAD, GROUND	6	900162-05016	BOLT HSH	6	A427-000013	CAP,SPARK PLUG	6
163400-04460	SWITCH, IGNITION(JR)	22	900162-05018	BOLT HSH	8	A429-000000	COVER,CAP	6
175014-04630	WASHER, CLUTCH	8	900162-05022	BOLT HSH	2	A553-000010	ARM,CLUTCH	8
175046-56030	SHAFT, CLUTCH	8	900162-05025	BOLT HSH	4	A556-000250	DRUM,CLUTCH	8
175048-05530	WASHER (I)	8	900162-05025	BOLT HSH	12	C400-000090	HANDLE,FRONT	8
175049-56030	WASHER	8	900162-05035	BOLT HSH	22			
177200-55931	STARTER ASY	20	900162-05050	BOLT HSH	8			
177202-40630	PAWL ASSY, STARTER	20	900239-05018	SCREW	16			

NUMERICAL PARTS INDEX

Part No	Part description	Page
C410-000160	HANDLE,REAR	22
C450-000150	TRIGGER,THROTTLE	22
C531-000182	CASE,GEAR	8
P003-000100	GASKET, PUMP	14
P003-000180	BRACKET CABLE	14
P003-000870	BODY ASSEMBLY, PUMP	14
P003-000970	JET	14
P003-001850	DIAPHRAGM, METERING	14
P021-000941	CRANKCASE KIT	4
P021-004740	PISTON KIT	2
P021-005770	MUFFLER ASY	18
P021-005801	CASE, GEAR	8
P021-005820	GEAR W/SHAFT	8
P021-005831	COVER,FAN	8
P021-005840	NAIL, CLUTCH	8
P021-040030	CAP ASY,FUEL TANK	16
P021-049010	CASE,CLEANER	12
P022-002100	E-RING	20
P022-022010	NUT	20
P022-045770	GUIDE, ROPE	20
V043-000010	CABLE,ASM CONTROL	22
V100-000070	GASKET,CYL	2
V104-000003	GASKET,EXHAUST	18
V104-000061	GASKET,EXHAUST	18
V107-000150	GASKET,FUEL CAP	16
V186-000520	JOINT,PIPE	16
V204-000070	BOLT,6	8
V305-000020	WASHER,CIRCULAR 7	8
V353-000020	COLLAR,5	2
V451-000090	SPRING,TENSION	8
V471-000111	PIPE	16
V471-005600	PIPE	16
V490-001230	CLIP	16
V553-000020	BEARING,NEEDLE 8	2
V606-000000	PIN,ENG 8	2
V622-000090	PIN,STRAIGHT 4	4
V650-000130	GEAR,SPUR	8
V650-000140	GEAR,SPUR	8
V650-000150	GEAR,SPUR	8
X502-000330	LABEL,ECHO	20
X503-009440	LABEL,MODEL	2
X505-002310	LABEL,CAUTION	10
X505-002570	LABEL,CAUTION	2