





eurosystems

Catalogo parti di ricambio
Spare parts list
Catalogue pieces détachées
Ersatzteilliste

RTT3 V20

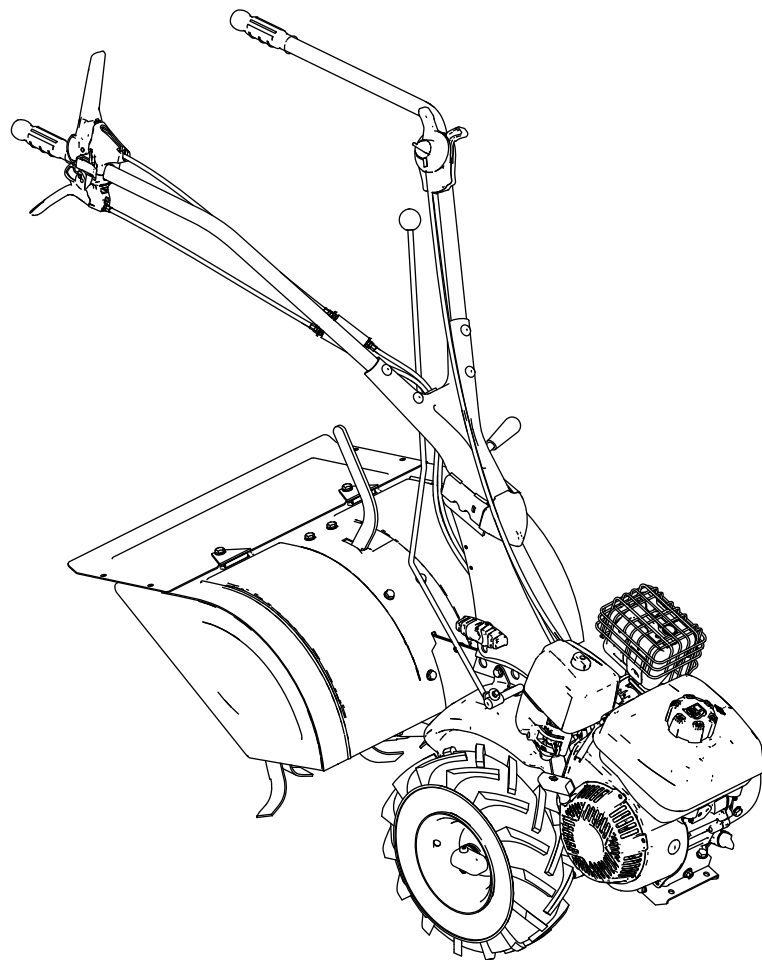

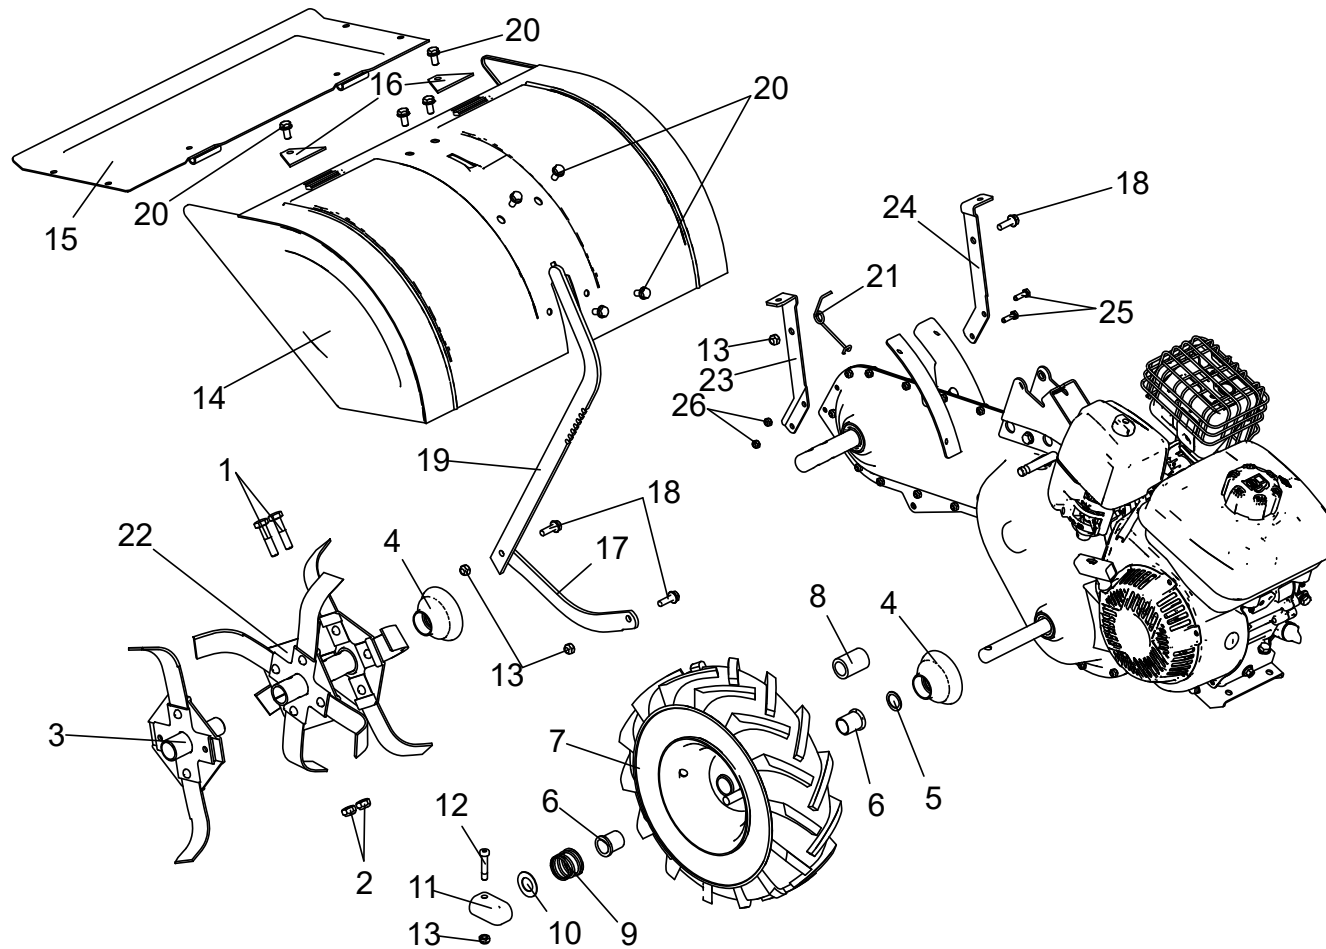

○ DESTRO - RIGHT
RECHT - DROITE


● SINISTRO - LEFT
LINKS - GAUCHE

△ ROSSO - RED
ROT - ROUGE

▲ GIALLO - YELLOW
GELB - JAUNE

- | | | |
|-------------|------------------|--|
| 1 | 863427000 | Vite Screw |
| 2 | 814645000 | Dado Nut |
| ○ 3 | 330015310 | Stella dx Star R |
| ● 3 | 330015312 | Stella sx Star L |
| 4 | 360015900 | Parapolvere Dust cover |
| 5 | 270011943 | Distanziale Spacer |
| 6 | 341012128 | Boccola Bushing |
| ○ 7 | 330015004 | Ruota dx Wheel R |
| ● 7 | 330015025 | Ruota sx Wheel L |
| ● 8 | 330015020 | Distanziale Spacer |
| 9 | 330015017 | Molla Spring |
| 10 | 330015015 | Distanziale Spacer |
| 11 | 330015012 | Cavallotto Pin |
| 12 | 862860005 | Vite Screw |
| 13 | 814588000 | Dado Nut |
| △ 14 | 330015250 | Carter frese Carter cutters |
| ▲ 14 | 330015248 | Carter frese Carter cutters |
| △ 15 | 330015279 | Bandella frese Flap cutters |
| ▲ 15 | 330015283 | Bandella frese Flap cutters |
| △ 16 | 330015290 | Piastra impedimento Impediment plate |
| ▲ 16 | 330015291 | Piastra impedimento Impediment plate |
| 17 | 330015222 | Lama Blade |
| 18 | 862685000 | Vite Screw |
| 19 | 330015210 | Sperone Spur |
| 20 | 862483000 | Vite Screw |
| 21 | 330015215 | Molla Spring |
| ○ 22 | 330015304 | Fresa dx Cutter R |
| ● 22 | 330015306 | Fresa sx Cutter L |
| ○ 23 | 330005180 | Staffa dx Bracket R |
| ● 24 | 330005182 | Staffa sx Bracket L |
| 25 | 862160000 | Vite Screw |
| 26 | 814548000 | Dado Nut |


STEGOLA NON REGISTRABILE

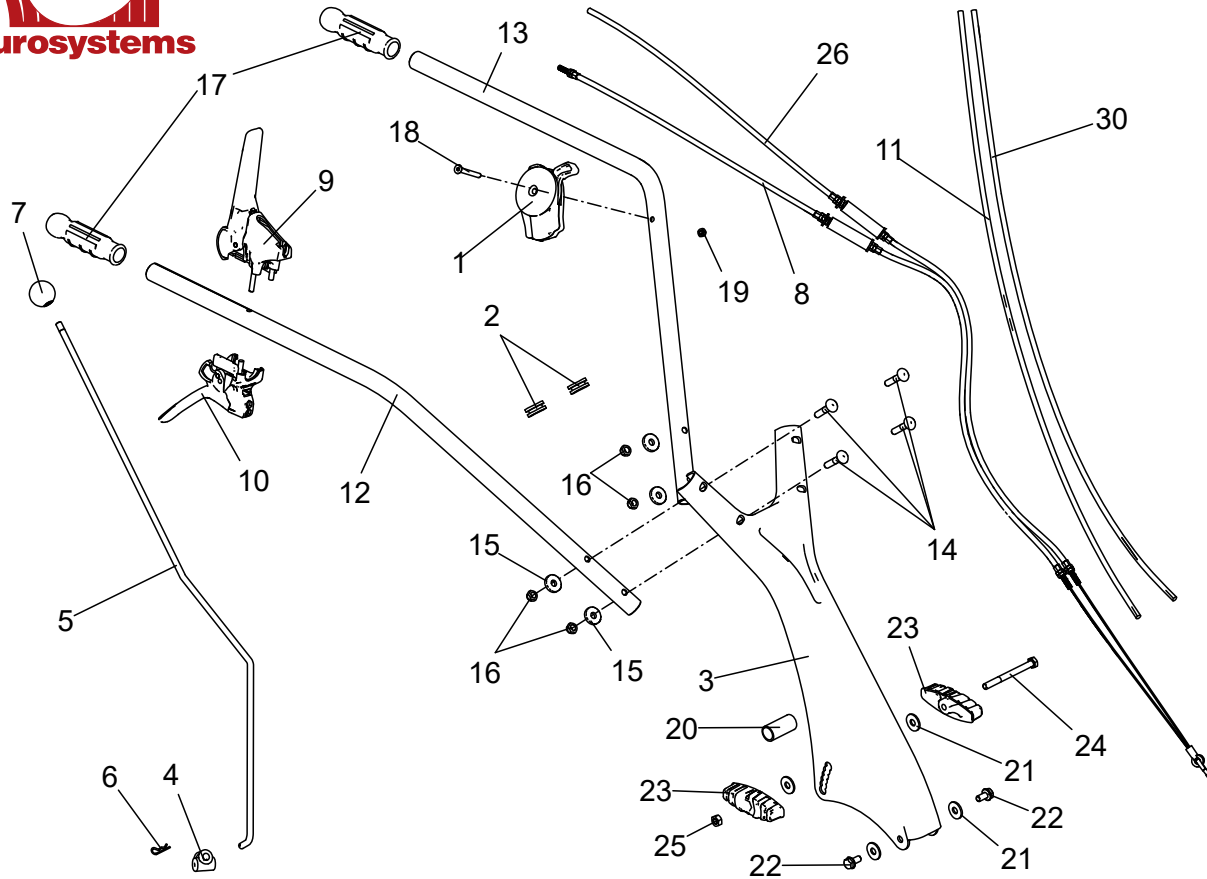

- ■ 1 321010930 Acceleratore | Accelerator
- 2 220010910 Passafilo | Thread holder
- △ 3 330010050 Supporto stegola | Handlebar support
- ▲ 3 330010058 Supporto stegola | Handlebar support
- 4 837561000 Snodo asta | Rod joint
- 5 330010064 Leva cambio | Gear shift
- 6 851350000 Spilla | Brooch
- 7 837528000 Pomolo | Knob
- 8 330010944 Trasmissione RM | Transmission wire RG
- 9 363010150 Leva Av. | Forward lever
- 10 330010949 Leva Rm | Reverse lever
- 11 330010182 Filo + guaina | wire + sheath
- 12 330010109 Stegola dx | Handlebar R
- 13 330010106 Stegola sx | Handlebar L
- 14 862786200 Vite | Screw
- 15 843711000 Rosetta | Washer
- 16 814588000 Dado | Nut
- 17 330010910 Manopola | Knob
- 18 862356200 Vite | Screw
- 19 814548000 Dado | Nut
- 20 330010300 Distanziale | Spacer
- 21 843708000 Rosetta | Washer
- 22 862483000 Vite | Screw
- 23 370010164 Pomolo | Knob
- 24 863051010 Vite | Screw
- 25 814574000 Dado | Nut
- 26 330010941 Trasmissione MA | Forward trasmission wire
- 27 828472100 Acceleratore | Accelerator
- 28 814535050 Dado | Nut
- 29 843570000 Rondella | Washer
- 30 260050238 Filo + guaina | wire + sheath
- 31 260050211 Guaina | Sheath
- 32 260050212 Filo | Wire
- 33 270023478 Filo | Wire

- DESTRO - RIGHT
RECHT - DROITE
- SINISTRO - LEFT
LINKS - GAUCHE
- △ ROSSO - RED
ROT - ROUGE
- ▲ GIALLO - YELLOW
GELB - JAUNE
- B&S
- Loncin

Solo/Only Subaru

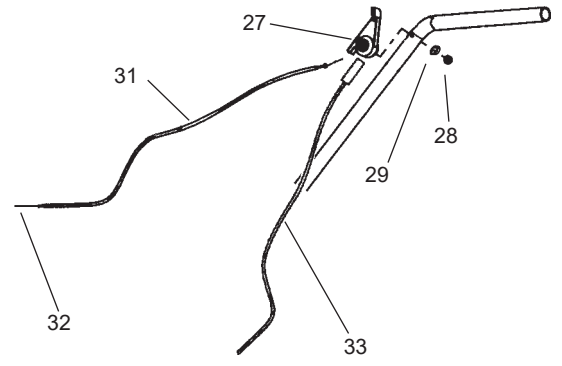


STEGOLA REGISTRABILE

RTT3 V20

4/6

08/2021

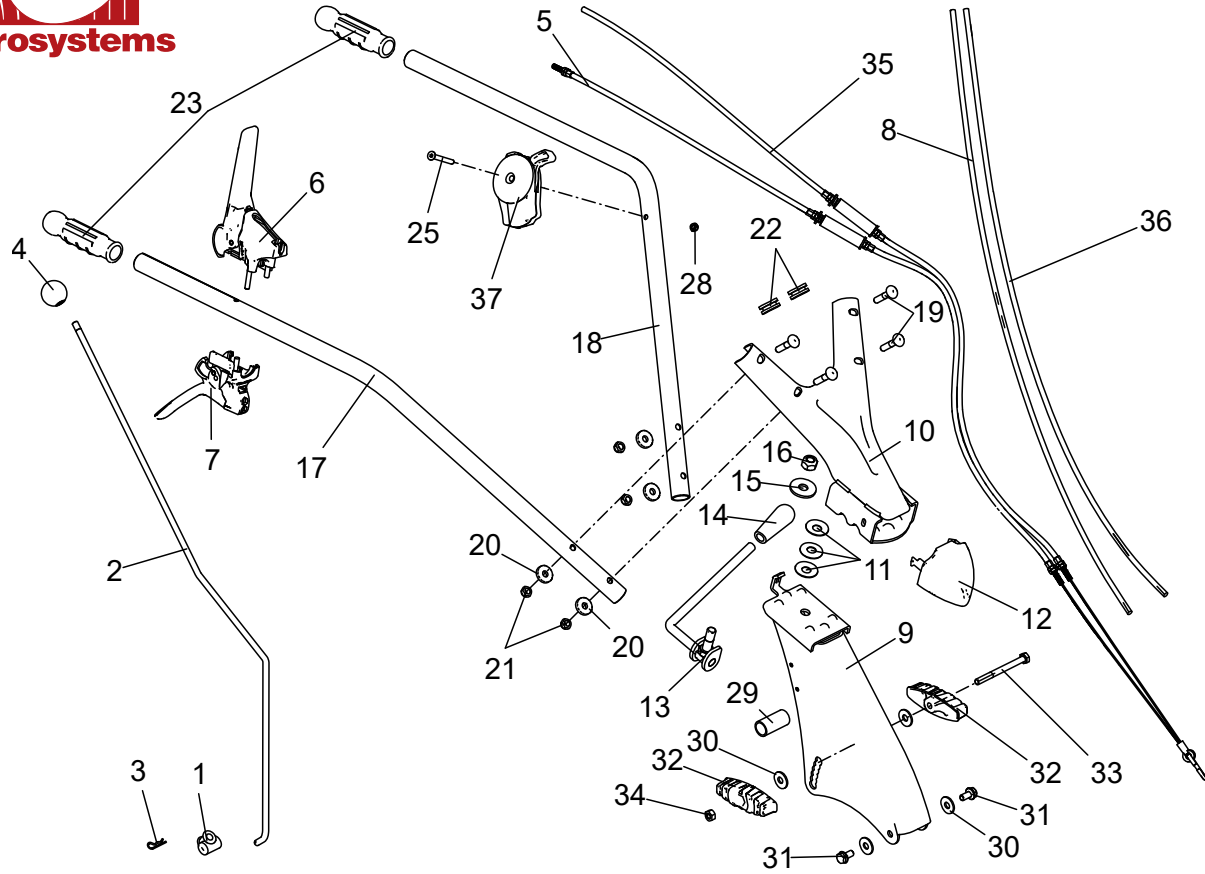

- 1 837561000 Snodo asta | Rod joint
- 2 330010064 Leva cambio | Gear shift
- 3 851350000 Spilla | Brooch
- 4 837528000 Pomolo | Knob
- 5 330010944 Trasmissione RM | Transmission wire RG
- 6 363010150 Leva Av. | Forward lever
- 7 330010949 Leva Rm | Reverse lever
- 8 330010182 Filo + guaina | wire + sheath
- △ 9 330010076 Supporto stegola inf. | Lower handlebar support
- ▲ 9 330010078 Supporto stegola inf. | Lower handlebar support
- △ 10 330010077 Supporto stegola sup. | Upper handlebar support
- ▲ 10 330010079 Supporto stegola sup. | Upper handlebar support
- 11 843843080 Molla a tazza | Spring washer
- 12 330010067 Coperchio | Cover
- 13 370010155 Leva | Lever
- 14 837555000 Pomolo | Knob
- 15 843884000 Rosetta | Washer
- 16 814701000 Dado | Nut
- 17 330010109 Stegola dx | Handlebar R
- 18 330010106 Stegola sx | Handlebar L
- 19 862786200 Vite | Screw
- 20 843711000 Rosetta | Washer
- 21 814588000 Dado | Nut
- 22 220010910 Passafilo | Thread holder
- 23 330010910 Manopola | Knob
- 24 828472100 Acceleratore | Accelerator
- 25 862356200 Vite | Screw
- 26 843570000 Rondella | Washer
- 27 814535050 Dado | Nut
- 28 814548000 Dado | Nut
- 29 330010300 Distanziale | Spacer
- 30 843708000 Rosetta | Washer
- 31 862483000 Vite | Screw
- 32 370010164 Pomolo | Knob
- 33 863051010 Vite | Screw
- 34 814574000 Dado | Nut
- 35 330010941 Trasmissione MA | Forward transmission wire
- 36 260050238 Filo + guaina | wire + sheath
- 37 321010930 Acceleratore | Accelerator
- 38 260050211 Guaina | Sheath
- 39 260050212 Filo | Wire
- 40 270023478 Filo | Wire

○ DESTRO - RIGHT
RECHT - DROITE

● SINISTRO - LEFT
LINKS - GAUCHE


△ ROSSO - RED
ROT - ROUGE


▲ GIALLO - YELLOW
GELB - JAUNE

□ B&S

■ Loncin

Solo/Only Subaru

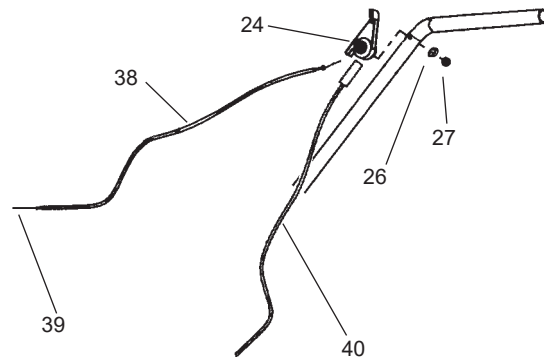

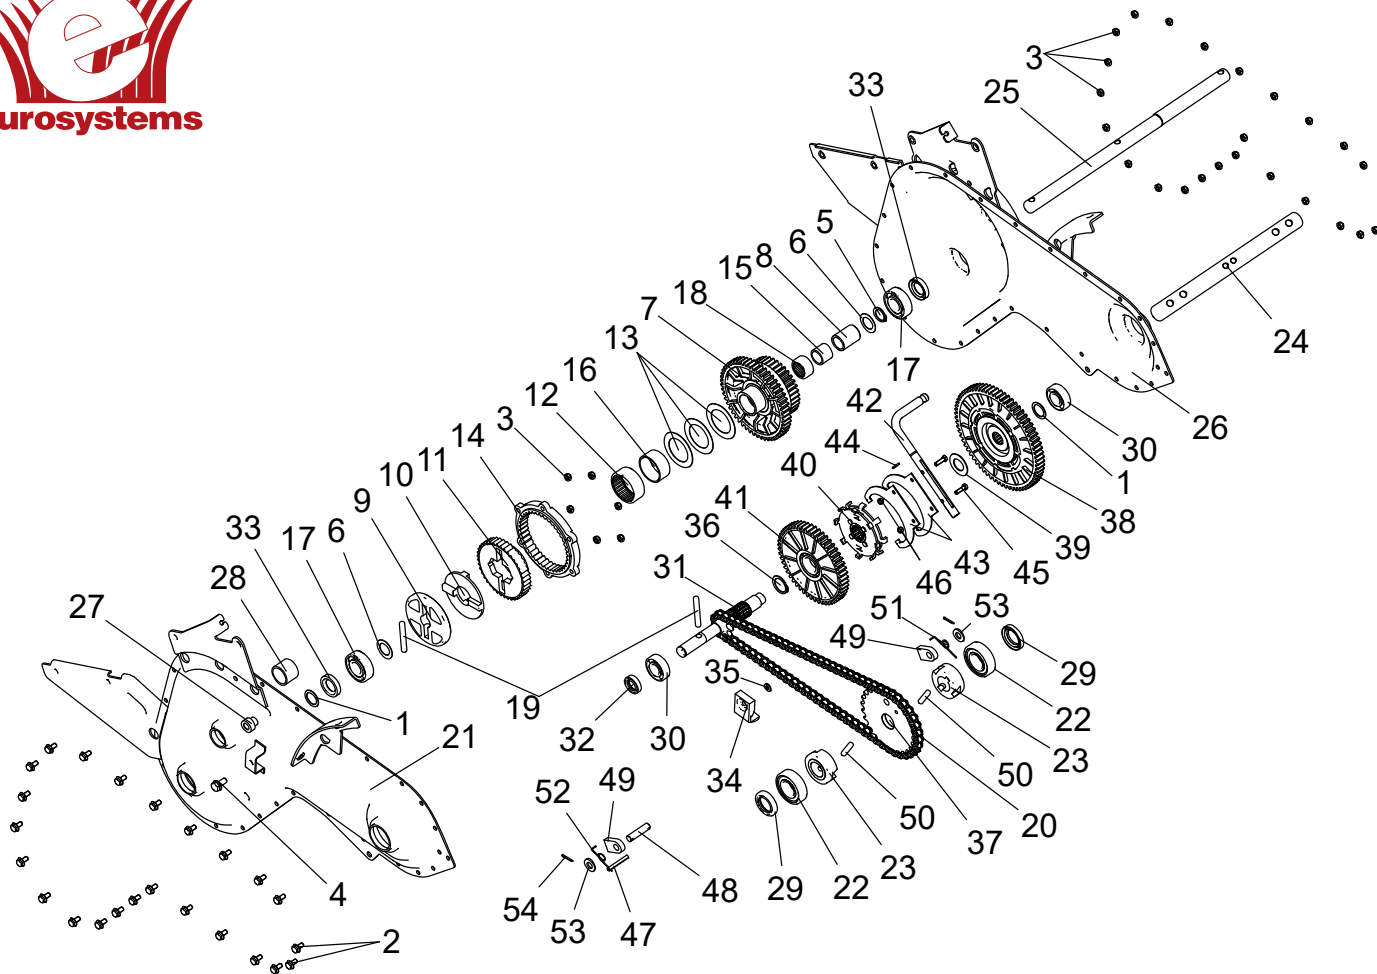

○ DESTRO - RIGHT
RECHT - DROITE

● SINISTRO - LEFT
LINKS - GAUCHE

△ ROSSO - RED
ROT - ROUGE

▲ GIALLO - YELLOW
GELB - JAUNE


□ B&S

■ Loncin

1 270011943 Distanziale | Spacer
2 861998500 Vite | Screw
3 814548000 Dado | Nut
4 862483000 Vite | Screw
5 801149000 Seeger | Seeger
6 330015016 Distanziale | Spacer
7 330005440 Corona | Crown
8 330005452 Distanziale | Spacer
9 330005445 Giunto | Joint

10 330005448 Giunto | Joint
11 330005442 Corona | Crown
12 812688600 Astuccio a rullini | Roller case
13 330005456 Distanziale | Spacer
14 330005443 Corona | Crown
15 802120010 Anello interno | Interior ring
16 802120050 Anello interno | Interior ring
17 812639000 Cuscinetto | Bearing
18 812687000 Astuccio a rullini | Roller case

19 851140020 Spina | Plug
20 330005230 Catena | Chain
△ **21 330005022** Carter sx | Carter L
▲ **21 330005027** Carter sx | Carter L
22 812711000 Cuscinetto | Bearing
23 330005220 Camma di comando | Control cam
24 330005215 Albero frese | Shaft cutters
25 330005450 Albero ruote | Shaft wheels
△ **26 330005025** Carter dx | Carter R
▲ **26 330005028** Carter dx | Carter R
27 330005950 Tappo olio | Oil cap
28 330005972 Tubo | Tube
29 802095010 Anello di tenuta | Sealing ring
30 812586000 Cuscinetto | Bearing
31 330005410 Albero conduttore | Driving shaft
32 802052000 Anello di tenuta | Sealing ring
33 802060000 Anello di tenuta | Sealing ring
34 330005946 Guidacinghia | Belt guide
35 843605010 Rosetta | Washer
36 801185000 Seeger | Seeger
37 330005218 Ruota dentata | Gear wheel
38 330005430 Corona | Crown
39 330015015 Distanziale | Spacer
40 330005420 Corpo selettore | Selector body
41 330005434 Corona | Crown
42 330005425 Leva marce | Gear lever
43 330005426 Leva marce | Gear lever
44 803056000 O-ring | O-ring
45 861931010 Vite | Screw
46 814530090 Dado | Nut
47 851182010 Spina | Plug
48 330005223 Perno | Pin
49 330005227 Cricchetto | Ratchet
50 851140000 Spina | Plug
51 330005224 Molla dx | Spring R
52 330005225 Molla sx | Spring L
53 843812000 Rosetta | Washer
54 260050237 Copiglia | Split pin

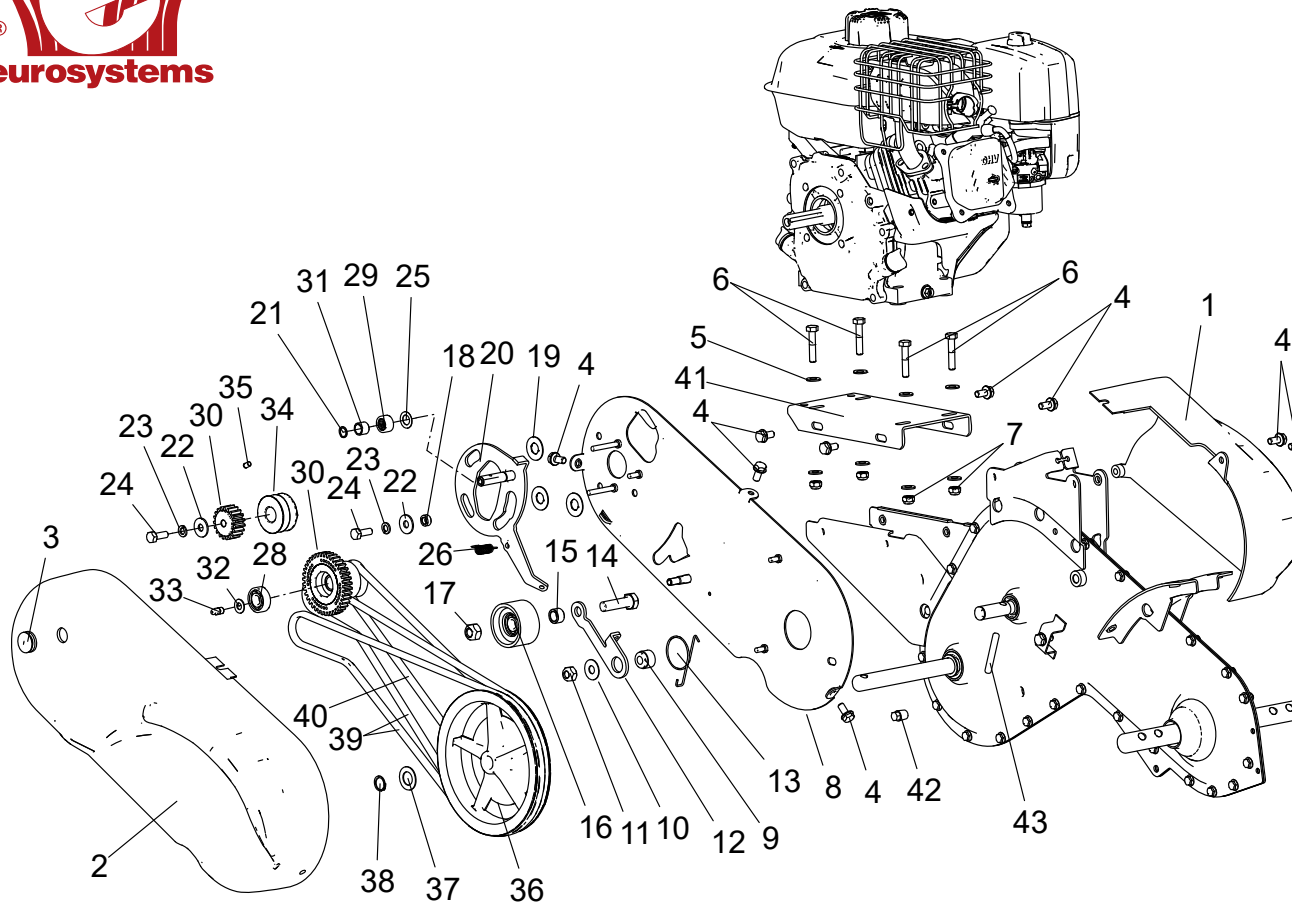

○ DESTRO - RIGHT
RECHT - DROITE

● SINISTRO - LEFT
LINKS - GAUCHE

△ ROSSO - RED
ROT - ROUGE

▲ GIALLO - YELLOW
GELB - JAUNE

□ B&S

■ Loncin

- 1 **330005902** Cofano dx | Hood R
- 2 **330005912** Cofano sx | Hood L
- 3 **330005980** Tappo | Plug
- 4 **862483000** Vite | Screw
- 5 **843685000** Rosetta | Washer
- 6 **862785000** Vite | Screw
- 6 **862741000** Vite | Screw
- 7 **814588000** Dado | Nut
- △ 8 **330020200** Parete cofano | Hood wall
- ▲ 8 **330020207** Parete cofano | Hood wall
- 9 **360005217** Boccola | Bushing
- 10 **360005220** Distanziale | Spacer

- 11 **814645000** Dado | Nut
- 12 **330020150** leva tendicinghia | belt tensioner lever
- 13 **360005950** Molla | Spring
- 14 **863951000** Vite | Screw
- 15 **330020124** Distanziale | Spacer
- 16 **330005940** ruotino tendicinghia | Belt tensioner wheel
- 17 **814703000** Dado | Nut
- 18 **330020225** Distanziale | Spacer
- 19 **330020226** Distanziale | Spacer
- 20 **330020151** Supporto completo | Full support
- 21 **801174060** Anello | Ring
- 22 **843708000** Rosetta | Washer
- 23 **843667000** Rondella | Washer
- 24 **862439050** Vite | Screw
- 25 **330020400** Distanziale | Spacer
- 26 **261005905** Molla | Spring
- 28 **812523050** Cuscinetto | Bearing
- 29 **812558080** Astuccio rullini | Roller case
- 30 **330020160** Kit ruote dentate RM | Gear wheels kit
- 31 **802120060** Anello interno | Interior ring
- 32 **330020250** Distanziale | Spacer
- 33 **826016001** Ingrassatore | Greaser
- 34 **330020120** Puleggia | Pulley
- 35 **862014000** Vite | Screw
- 36 **330020130** Puleggia | Pulley
- 37 **270013596** Distanziale | Spacer
- 38 **801120000** Seeger | Seeger
- 39 **360005190** Cinghia | Belt
- 40 **330020140** Cinghia | Belt
- △ 41 **330005140** Supporto motore | Engine support
- ▲ 41 **330005141** Supporto motore | Engine support
- 42 **852520000** Tappo | Cap
- 43 **851140020** Spina | Plug