


CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 371281

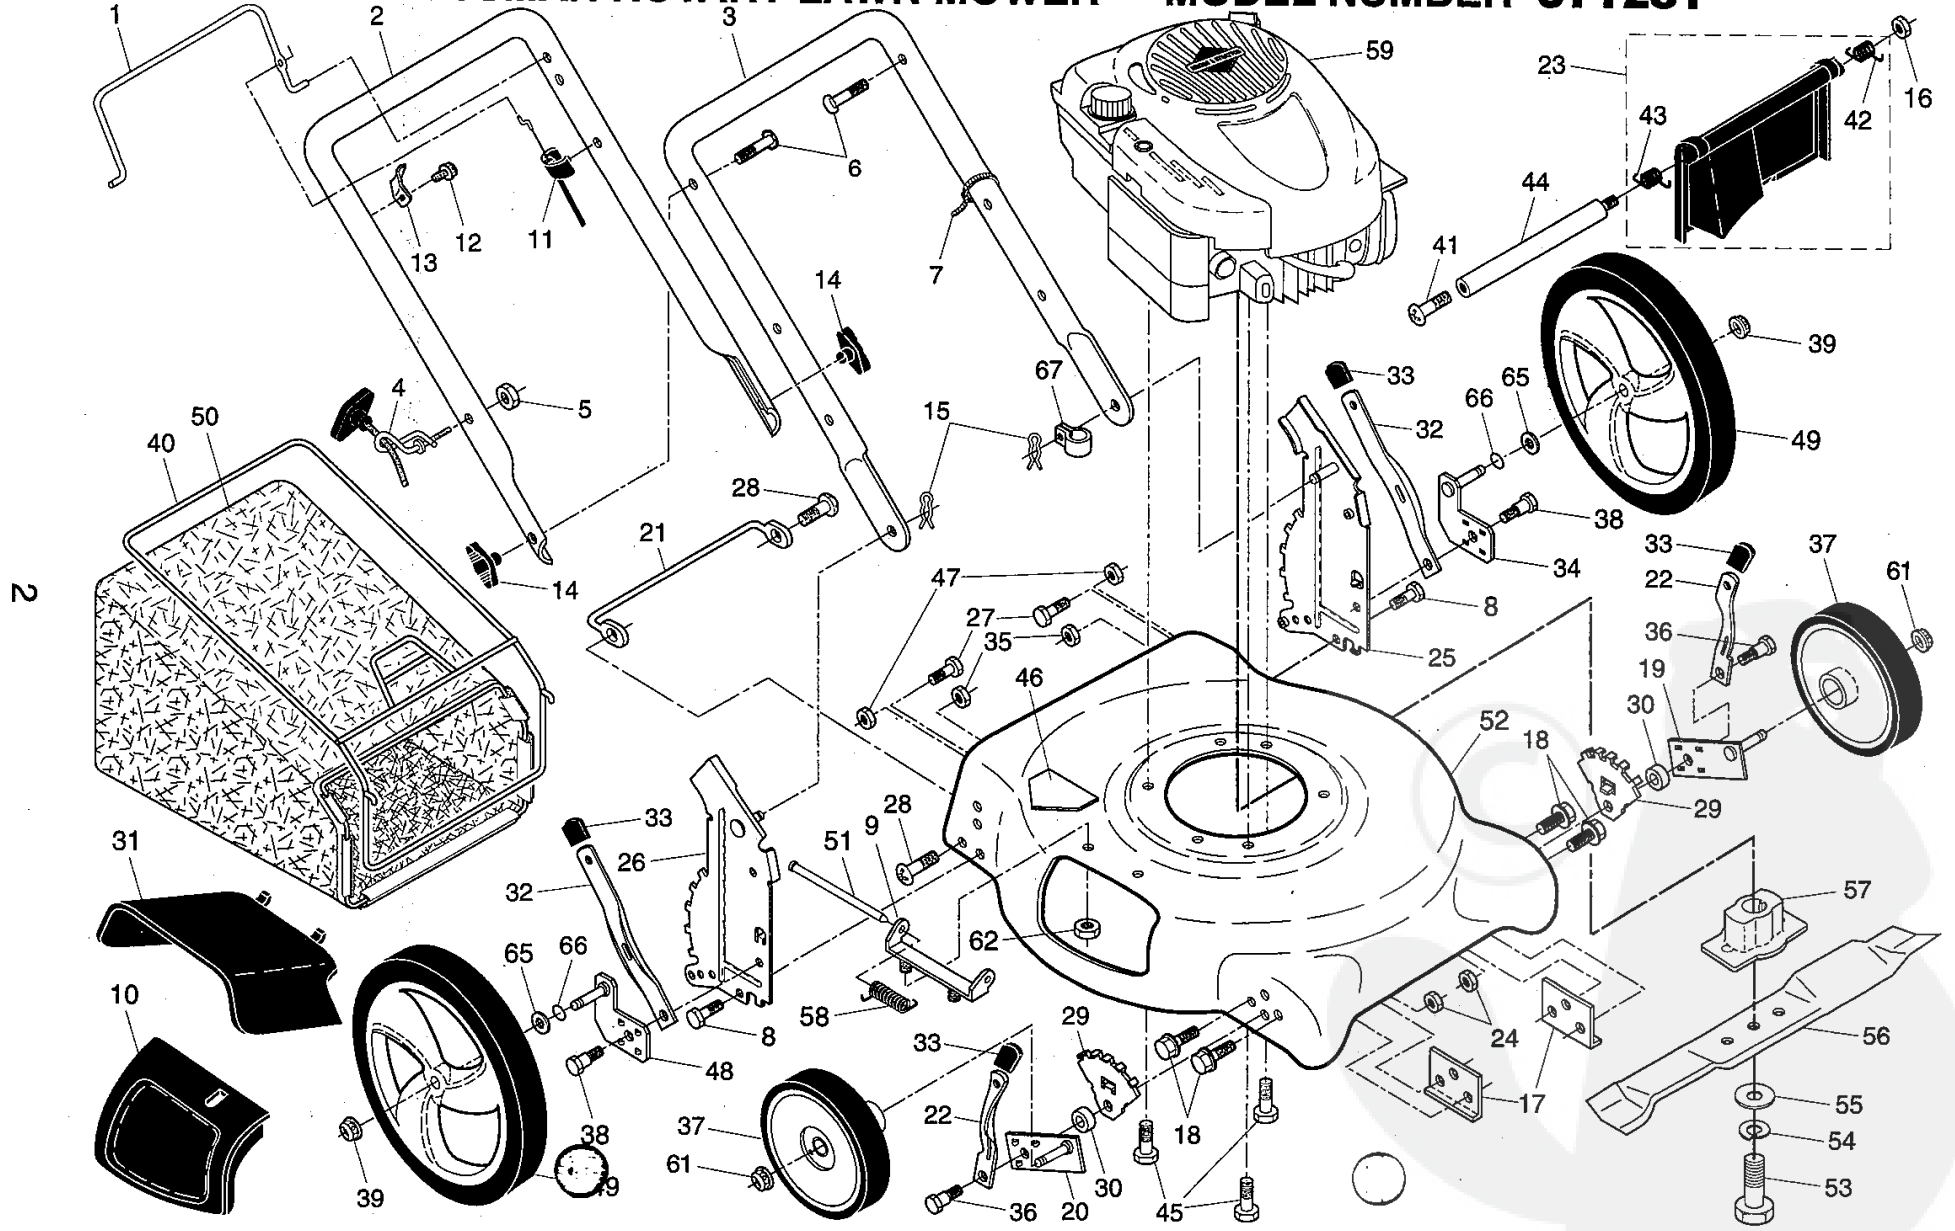

CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 371281

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	194177X428	Control Bar	24	73930500	Locknut, Hex 5/16-18	47	751153	Nut, Hex
2	194179X479	Upper Handle	25	194310X479	Handle Bracket Assembly, LH	48	180410X004	Axle Arm Assembly, Rear, RH
3	169708X479	Lower Handle	26	194312X479	Handle Bracket Assembly, RH	49	193929X427	Wheel & Tire Assembly, Rear 12 x 1-3/4
4	194788	Rope Guide	27	17600406	Screw 1/4-20 x 3/8	50	401705	Grassbag
5	132004	Nut, Hex	28	54583	Screw	51	147286	Rod, Hinge
6	191574	Handle Bolt	29	160835X007	Wheel Adjusting Bracket, Front	52	404417	Housing Assembly (Includes Key #17, 18 and 46).
7	66426	Wire Tie	30	183901	Washer	53	851084	Screw, Hex Head, Grade 8 3/8-24 x 1-3/8
8	74780512	Bolt, Hex Head 5/16-18 x 3/4	31	165760	Discharge Deflector	54	850263	Helical Lockwasher
9	154132	Mounting Bracket, Mulcher Door	32	180080X004	Selector Spring, Rear	55	851074	Hardened Washer
10	165754	Mulcher Door	33	87877	Selector Knob	56	199377	21" Blade
11	183281	Engine Zone Control Cable	34	180409X004	Axle Arm Assembly, Rear, LH	57	193707	Blade Adapter
12	750634	Screw, Hex Washer Head #10-24 x 1/2	35	166785	Locknut, Hex 5/16-18	58	152124	Spring, Hinge
13	86899X004	Up-Stop Bracket	36	160828	Shoulder Bolt 5/16-18	59	---	Engine, Briggs & Stratton, Model Number 124K02-0511-E1 (See Breakdown)
14	189713X428	Handle Knob	37	405763X427	Wheel & Tire Assembly, Front 7 x 1-3/4	61	83923	Flanged Locknut
15	51793	Hairpin Cotter	38	164362	Bolt, Shoulder	62	73800400	Nut, Hex
16	191730	Nut, Hex, Flangelock	39	145212	Nut, Hex	65	88348	Washer, Flat
17	165946X479	Support Bracket	40	194642	Frame, Grassbag	66	197480	O-Ring
18	17600406	Screw	41	88652	Hinge Screw	67	197991	Clip, Cable
19	186577X004	Axle Arm Assembly, Front, LH	42	165766	Spring, LH	--	405705	Operator's Manual, Euro
20	186578X004	Axle Arm Assembly, Front, RH	43	165767	Spring, RH	--	405706	Operator's Manual, Scandi
21	169423	Footguard	44	185819	Door Bolt	--	406077	Repair Parts Manual
22	168360X004	Selector Spring, Front	45	150406	Screw, Hex Head, Threaded, Rolled 3/8-16 x 1			
23	186612	Rear Door Assembly (Includes Springs)	46	182166	Danger Decal			

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.