


91

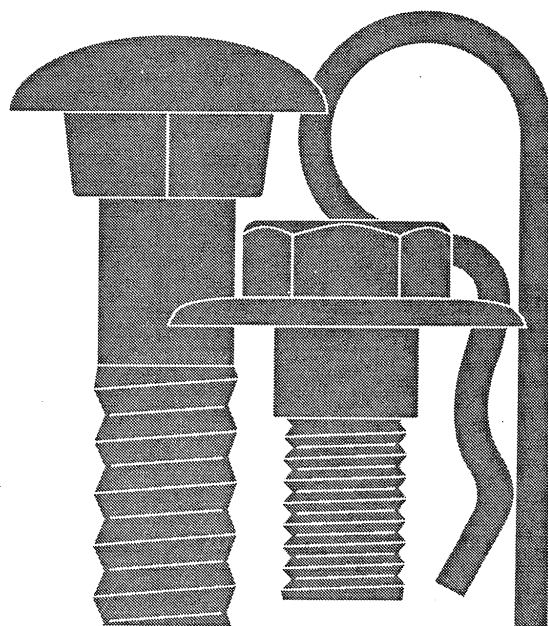

ASSEMBLY/REPAIR PARTS

Lawn Tractor


Model No. RR1238B

Rally

127585 12:01:90
Printed in U.S.A.

LAWN TRACTOR - MODEL NUMBER RR1238B


SCHEMATIC

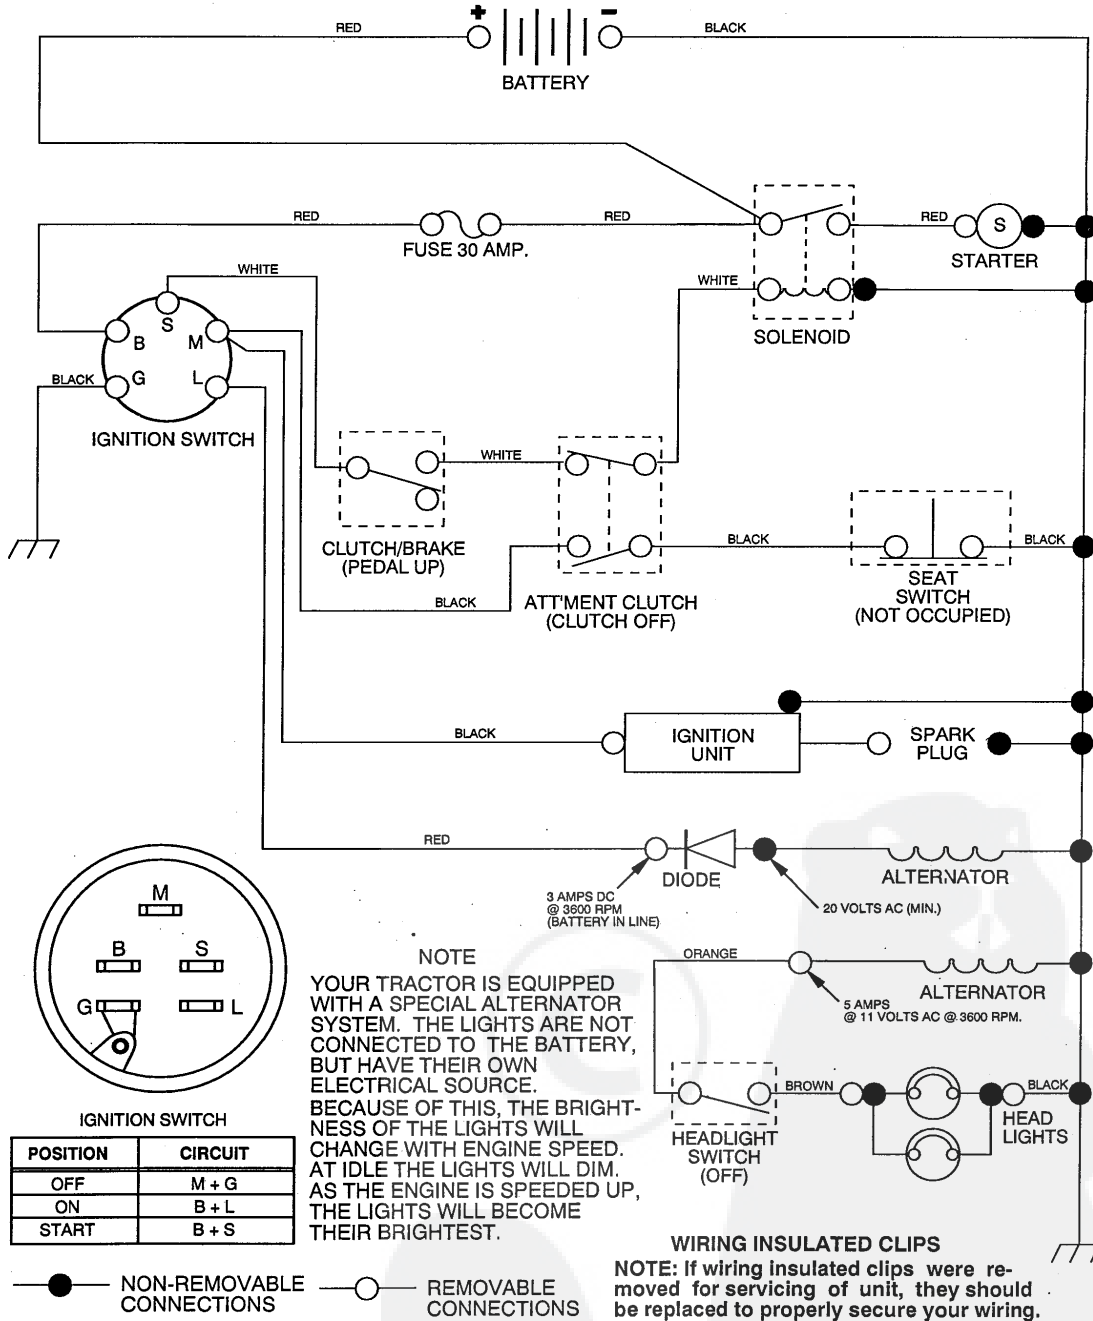

REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

ELECTRICAL

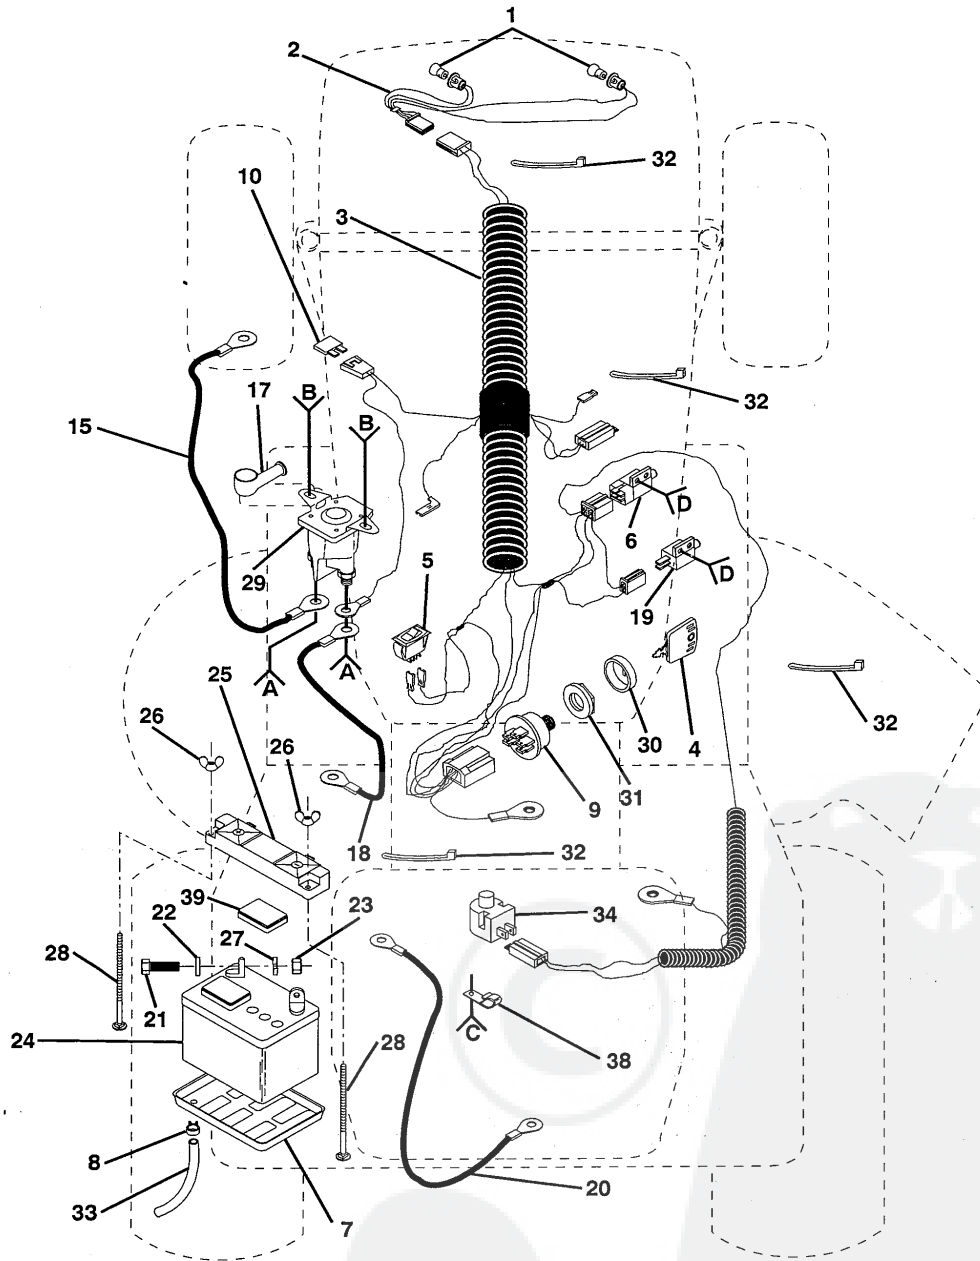


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

ELECTRICAL

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION		
1	7662J	Bulb, Light	26	123198X	Nut, Wing 1/4 - 20
2	110859X	Harness, Light Socket	27	10040400	Washer, Lock, Heavy Helical Spring
3	124904X	Harness, Ignition	28	72240460	Bolt, Carriage 1/4 - 20 x 7-1/2
4	7552H	Key, Molded	29	109081X	Solenoid
5	110712X	Switch, Light	30	109787X	Bezel, Ignition
6	104445X	Switch, Interlock	31	109788X	Nut, Ignition
7	7603J	Tray, Battery	32	7192J	Cable Tie
8	109596X	Clamp, Hose	33	105687X	Tube, Battery Tray
9	4406R	Switch, Ignition	34	121305X	Switch, Seat
10	108824X	Fuse	35	17021008	Screw, Hex Tapping #10 - 24 UNC x 1/2
11	10090400	Washer, Lock 1/4	36	74641008	Screw, Slotted Pan Head #10 - 32 x 1/2
12	73350400	Nut, Hex Jam 1/4 - 20	37	73951000	Nut, Keps #10 - 32 x 1/2
13	74780408	Bolt, Hex 1/4 - 20 x 1/2 Grade 5	38	4171R	Clip, Insulated
14	73510400	Nut, Keps 1/4 - 20	39	121264X	Caps, Battery
15	2033J	Cable Assembly	--	101539X	Sheet, Instruction, Tractor, 15° Slope(English)
16	11050400	Washer, Lock, Ext. Tooth 1/4	--	127585	Manual, Repair Parts
17	719J	Cover, Terminal	--	127903	Manual, Operator's
18	5114J	Cable, Battery	--	121549X	Decal, Battery
19	109553X	Switch, Interlock	--	101572X	Sheet, Instruction Tractor, 15° Slope (French)
20	5907J	Cable, Battery			
21	74760412	Bolt, Hex 1/4 - 20 x 3/4			
22	19091016	Washer 9/32 - 5/8 x 16 Gauge			
23	73220400	Nut, Hex 1/4 - 20			
24	121265X	Battery			
25	102476X	Guard, Terminal			


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

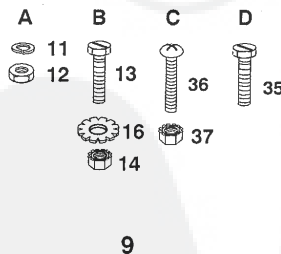

REPAIR PARTS

ENCLOSURE

LAWN TRACTOR - MODEL NUMBER RR1238B

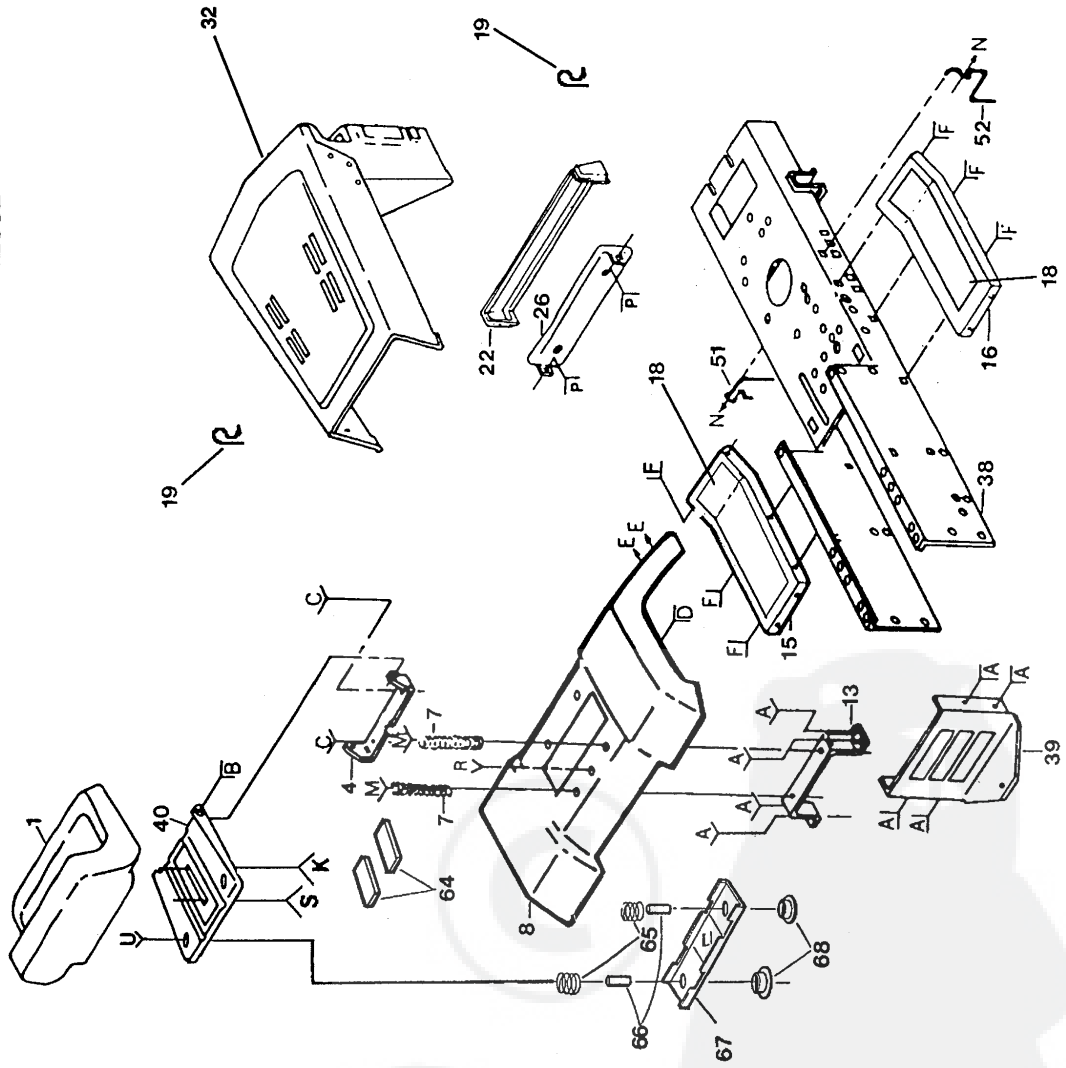


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

ENCLOSURE

KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	Seat	40	124294X Pan, Seat
2	127422X Screw, Hex, Washer Thread Rolling 3/8-16 x 3/4 Type TT	47	19132012 Washer, Lock 1/2
3	17490612 Screw, Hex, Washer Thread Rolling 3/8-16 x 1	48	10040800 Washer 17/32 x 1-3/16 x 12 Ga.
4	126566X Bracket, Pivot, Seat	49	19171912 Bolt, Hex. 3/8 - 16 x 1
5	105529X Bolt, Shoulder 5/16-18	50	74760616 Guide, Belt, Lower, Engine Pulley, L. H.
6	73680500 Nut, Crownlock 5/16-18	51	121440X Guide, Belt, Lower, Engine Pulley, R. H.
7	124181X Spring, Seat	52	121441X Washer 13/32 x 1 x 14 Ga.
8	109872X423 Fender	59	19131614 Washer 9/32 x 3/4 x 16 Ga.
9	19131312 Washer 13/32 x 13/16 x 12 Ga.	60	19091216 Bolt, Carriage 1/4 - 20 x 1-1/4
10	74760612 Bolt, Hex, Washer Thread Rolling 3/8	62	72170410 Nut, Hex. Flange 1/4-20
11	73680600 Nut, Crownlock 3/8-16	63	123976X Strip, Foam
12	17490608 Screw, Hex, Washer Thread Rolling 3/8-16 x 12	64	121251X Spring, Compression
13	109873X Bracket, Fender	65	121249X Spacer, Split
14	127018X Bolt, Shoulder	66	121246X Bracket, Switch Mount
15	105465X423 Footrest, L. H.	67	121248X Bushing, Snap
16	105464X423 Footrest, R. H.	68	127036 Decal, Grill, Logo
17	72110606 Bolt, Carriage 3/8-16 x 3/4	-	124326X Decal, Grill, Stripe
18	108256X Pad, Footrest	-	101892X Decal, Clutch/Brake
19	4921H Retainer, Spring	-	127035 Decal, Chassis, Speed/Deck Size
21	108067X Lens	-	109199X Decal, V-Belt Ground Drive
22	124400X Washer 13/32 x 3/4 x 10 Ga.	-	129776 Decal, Hood, HP
24	19131210 Bezel	-	120822X Decal, Caution
26	110897X Bolt, Hex 1/2-13 x 7/8 Gr. 5	-	127037 Decal, Logo (Fender)
27	74780814 Hood and Grill Assembly	-	125690X Decal, 100 DBA
32	126349X013 Chassis Assembly		
38	127168X Drawbar		
39	121306X		


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

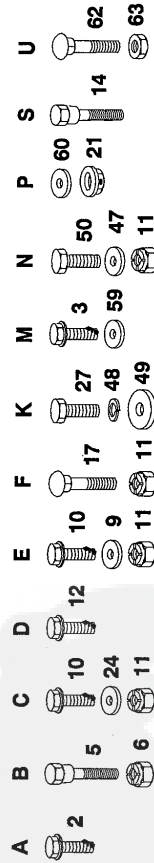

REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

DRIVE

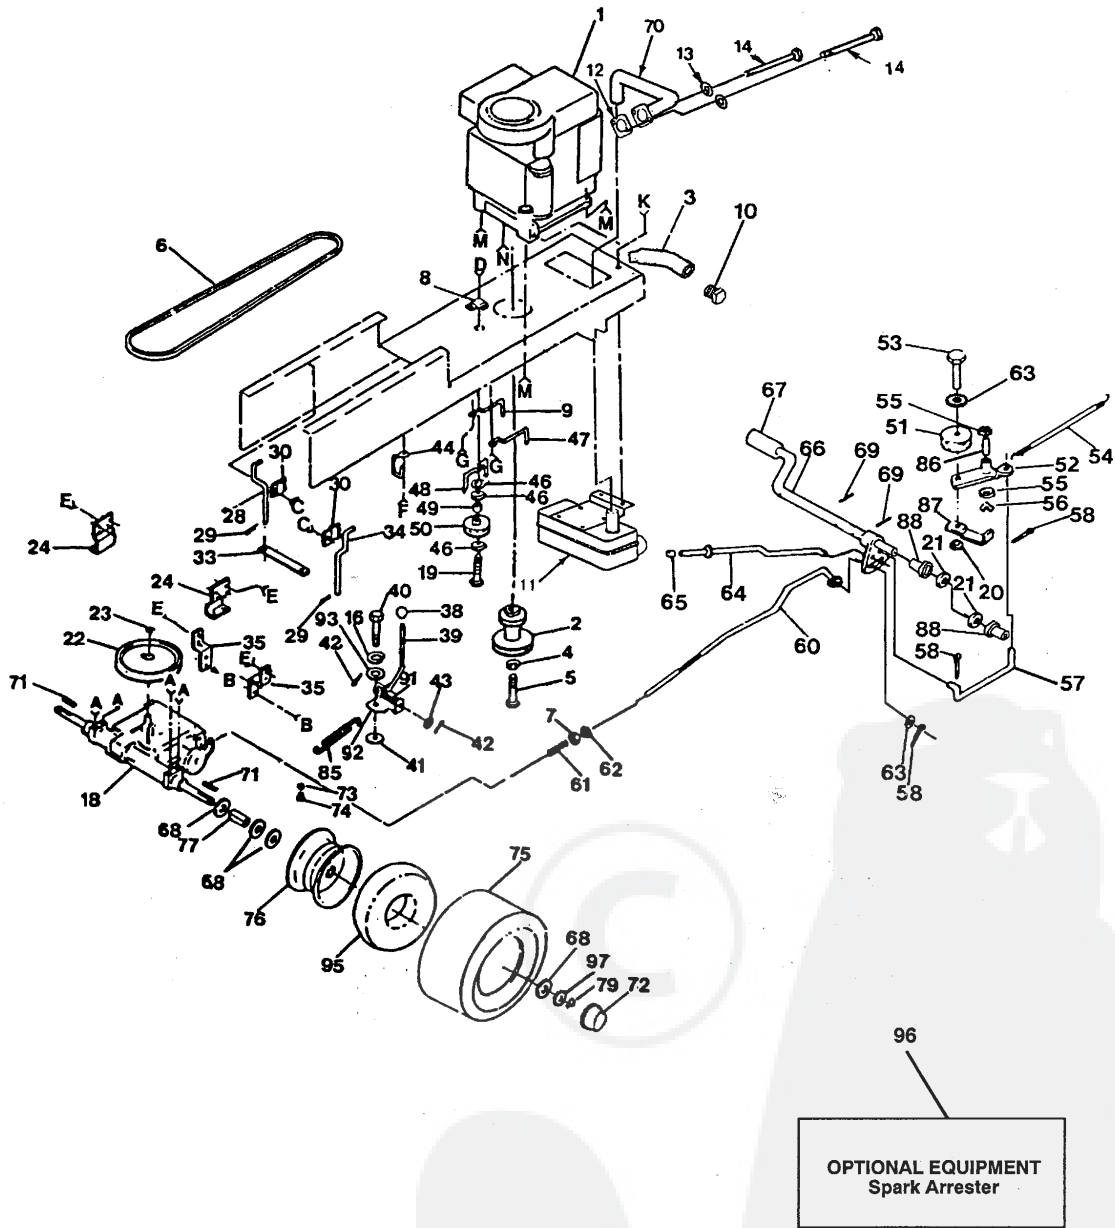


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

DRIVE

KEY PART NO.	PART NO.	DESCRIPTION	KEY PART NO.	PART NO.	DESCRIPTION
1	124136X	Engine 12 HP, Briggs & Stratton Model No. 281707, Type No. 0412-01	46	19131312	Washer 13/32 x 13/16 x 12 Ga.
2	105731X	Pulley, Engine	47	105730X	Keeper, Belt, Engine
3	127222X	Pipe, Drain, Oil	48	109070X	Retainer, Belt
4	10040700	Washer, Lock 7/16	49	4470J	Spacer
5	71130720	Bolt, Hex 7/16-20 x 1-1/4	50	123674X	Idler, Flat
6	125907X	V-Belt, Drive	51	123766X	Pulley, Idler
7	73800600	Locknut, Hex 3/8-16 UNC ZN	52	123789X	Arm, Idler
8	2751R	Clip, Fuel Line	53	74760624	Bolt, Hex. 3/8-16 x 1-1/2
9	121218X	Keeper, Belt, Engine	54	105709X	Spring, Return Clutch
10	-----	Plug, Drain Oil (Order From Engine Mfg.)	55	110812X	Washer, Hardened
11	123075X	Muffler	56	12000039	Ring, Klip
12	125593X	Gasket	57	105710X	Link, Clutch
13	10040500	Washer, Lock Heavy Helical Spring	58	76020412	Pin, Cotter 1/8 x 3/4
14	71070510	Screw, Hex Head Cap 5/16-18 x 5	60	110437X	Rod, Brake
15	17490620	Screw, Hex., Washer Thread Rolling 3/8-16 x 1-1/4	61	106888X	Spring, Rod, Brake
16	10040400	Washer, Lock 1/4	62	73350600	Nut, Jam 3/8-16
18	120898X	Transaxle Foote, 6 Speed, Model No. 4360-7	63	19131316	Washer 13/32 x 13/16 x 16 Ga.
19	74760644	Bolt, Hex 3/8-16 x 2-3/4	64	125638X	Rod, Brake, Parking
20	73680600	Nut, Crownlock 3/8-16	65	71673	Cap, Plunger
21	19211616	Washer 21/32 x 1 x 16 Ga	66	122424X	Shaft, Foot Pedal
22	123666X	Pulley, Transaxle	67	8883R	Cover, Pedal
23	12000028	Ring, Retainer	68	121749X	Washer 25/32 x 1-1/4 x 16
24	109167X	Bracket, Transaxle	69	1572H	Pin, Roll 3/16 x 1
25	74760616	Bolt, Hex 3/8-16 x 1	70	123074X	Pipe, Exhaust 180°
26	17490512	Screw, Hex Washer Thread Rolling 5/16-18 x 3/4	71	123583X	Key, Square 2.5 x .1845/.1865
28	123662X	Keeper, Belt, L.H.	72	104757X	Cap, Axle
29	4921H	Retainer, Spring	73	59192	Cap, Valve
30	106190X	Clamp	74	65139	Stem, Valve
31	74760512	Bolt, Hex 5/16-18 x 3/4	75	124635X	Tire, Rear
32	73680500	Nut, Crownlock 5/16-18 x 3/4	76	106108X311	Rim Assembly, Rear
33	123770X	Strap, Locator	77	109502X	Spacer
34	123663X	Keeper, Belt, R.H.	79	12000001	E-Ring
35	121520X	Strap, Torque, Transaxle	83	19112016	Washer 11/32 x 1-1/4 x 16 Ga.
36	74760612	Bolt, Hex 3/8-16 x 3/4	85	110422X	Spring, Brake
38	106893X	Knob, Shift	86	105706X	Bearing
39	124461X	Rod, Shift	87	123205X	Retainer, Belt
40	71040412	Bolt, Shift Plate	88	120183X	Bearing, Nylon
41	105701X	Washer, Shift Plate	91	105700X	Spring
42	76020416	Pin, Cotter 1/8 x 1	92	106919X	Plate, Shift
43	19151216	Washer 15/32 x 3/4 x 16 Ga.	93	19091210	Washer 9/32 x 3/4 x 10 Ga.
44	104777X	Belt, Retainer	94	11050600	Washer, Lock, External Tooth 3/8
45	17490612	Screw, Hex., Washer Thread Rolling 3/8-16 x 3/4	95	7152J	Tube, Tire
			96	123110X	Spark Arrester
			97	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
			--	121120X	Decal, Engine Maintenance
			--	120601X	Decal, HP, Engine


NOTE: All component dimensions given U.S. inches
1 inch = 25.4 mm

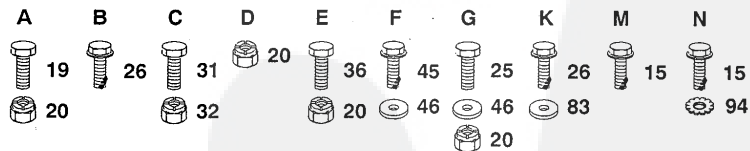

REPAIR PARTS

STEERING AND FRONT AXLE

LAWN TRACTOR - MODEL NUMBER RR1238B

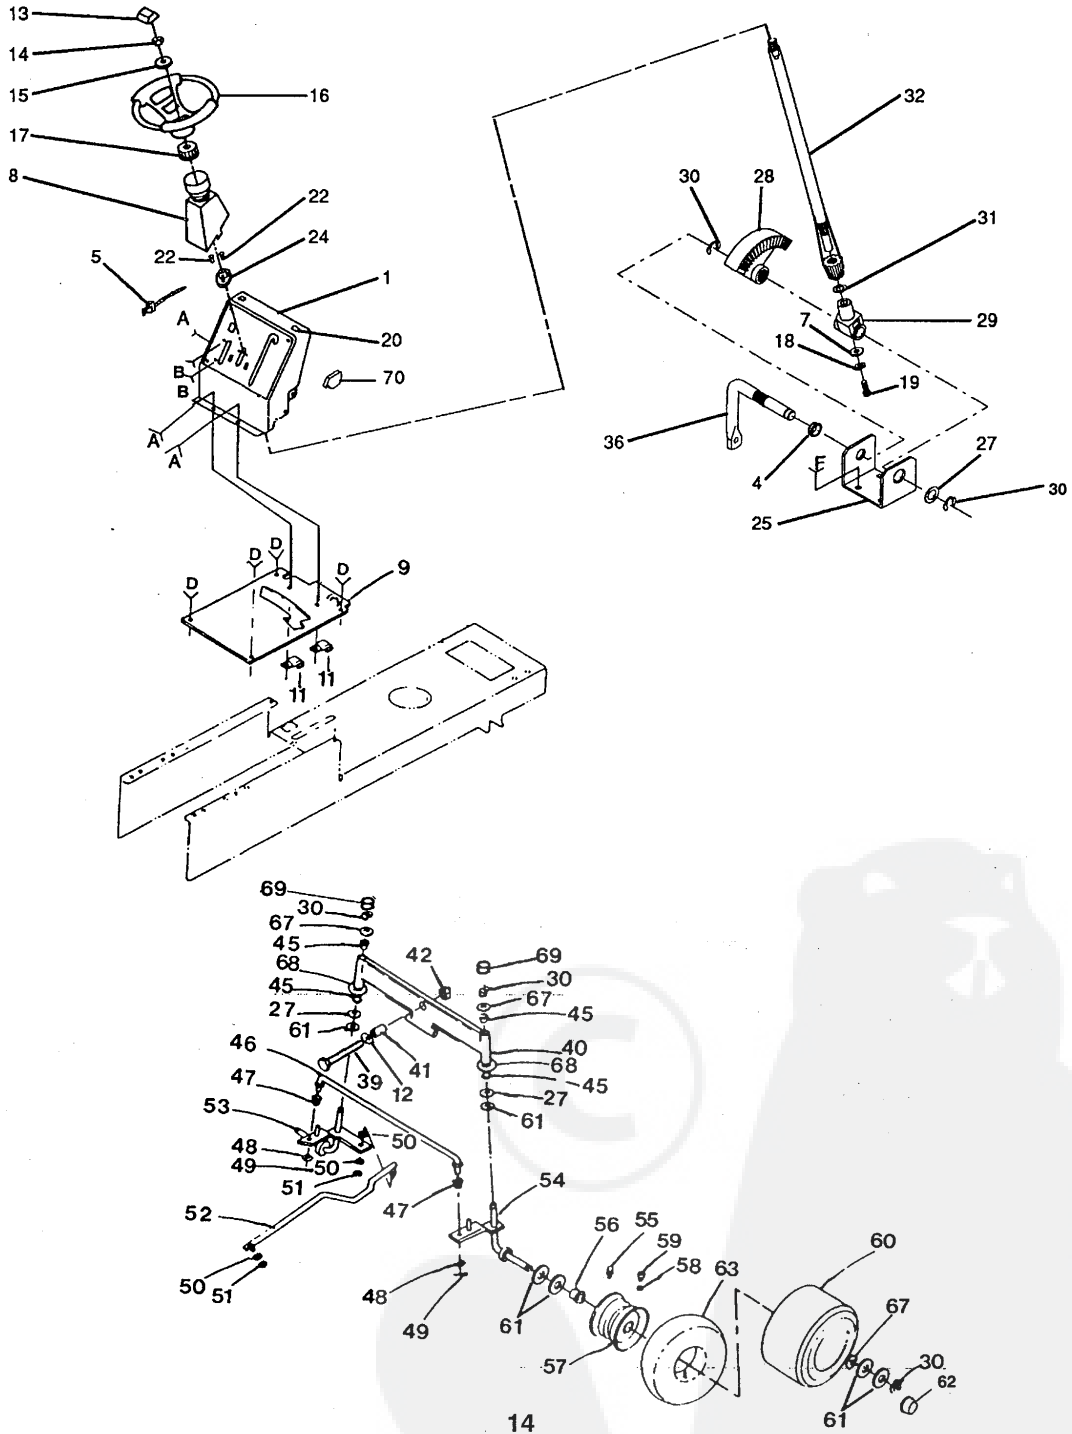


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

STEERING AND FRONT AXLE

KEY PART NO.	NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	123042X015	Dash	39	74761060 Bolt, Hex 5/8-11 x 3-3/4
2	74180512	Screw, Truss Head 5/16-18 x 3/4	40	105669X Axle, Front
3	73510500	Nut, Keps 5/16-18	41	110438X Spacer, Bearing, Front Axle
4	109816X	Nyliner, Snap-in	42	73601000 Locknut, Flange 5/8-16
5	123278X	Control, Throttle	45	3366R Bearing
6	17720410	Screw, Hex, Thread Cutting 1/4-20 x 5/8 TY23	46	105715X Rod, Tie
7	126684X	Washer 5/8 x 1/4 x 16 Ga.	47	120754X Bushing
8	124418X	Tube, Steering Shaft	48	19131416 Washer 13/32 x 7/8 x 16 Ga.
9	124464X011	Saddle	49	76020412 Pin, Cotter 1/8 x 3/4
10	17490608	Screw, Hex, Washer Head Thread Rolling 3/8-16 x 1/2	50	10040600 Washer, Lock 3/8
11	2751R	Clip, Insulated	51	73610600 Nut, Hex 3/8-24
12	19212010	Washer	52	124032X Link, Drag
13	100710L	Insert, Steering Wheel	53	105656X Spindle, L. H.
14	73940800	Locknut, Hex, Jam 1/2-20	54	105654X Spindle, R. H.
15	100712K	Washer	55	278H Fitting, Grease
16	100713N	Wheel, Steering	56	9040H Bearing, Flange
17	100711L	Adapter, Steering Wheel	57	106732X311 Rim, Front (Inc. 2 Each Key No. 56)
18	10040400	Washer Lock1/4	58	59192 Cap, Valve
19	71070410	Screw, Socket Hex 1/4 x 20 x 5/8	59	65139 Stem, Valve
20	126938X	Bumper, Hood	60	106222X Tire
22	17431008	Screw, Hex Tapping #10-16 x 1/2 Type ABTPS	61	121749X Washer 25/32 x 1-1/4 x 16 Ga.
24	124373X	Bushing, Steering	62	104757X Cap, Axle
25	124036X	Bracket, Steering	63	59904 Tube, Front
26	17490612	Screw, Hex Washer Head, Thread Rolling 3/8-16 x 3/4 Type TT	67	121748X Washer 25/32 x 1-5/8 x 16 Ga.
27	6266H	Bearing, Thrust	68	19272016 Washer 27/32 x 1-1/4 x 16 Ga.
28	124034X	Gear, Sector	69	121232X Cap, Spindle
29	124035X	Shaft, Support	70	125760X Stop, Choke 2900RPM
30	12000029	Ring, Klip	--	127075 Decal, Steering Wheel
31	57079	Washer	--	109821X Decal, Instruction, Operating
32	128752	Shaft, Weldment Steering		
36	124033X	Shaft, Pitman		


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

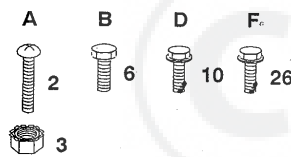

REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

LIFT ADJUSTMENT

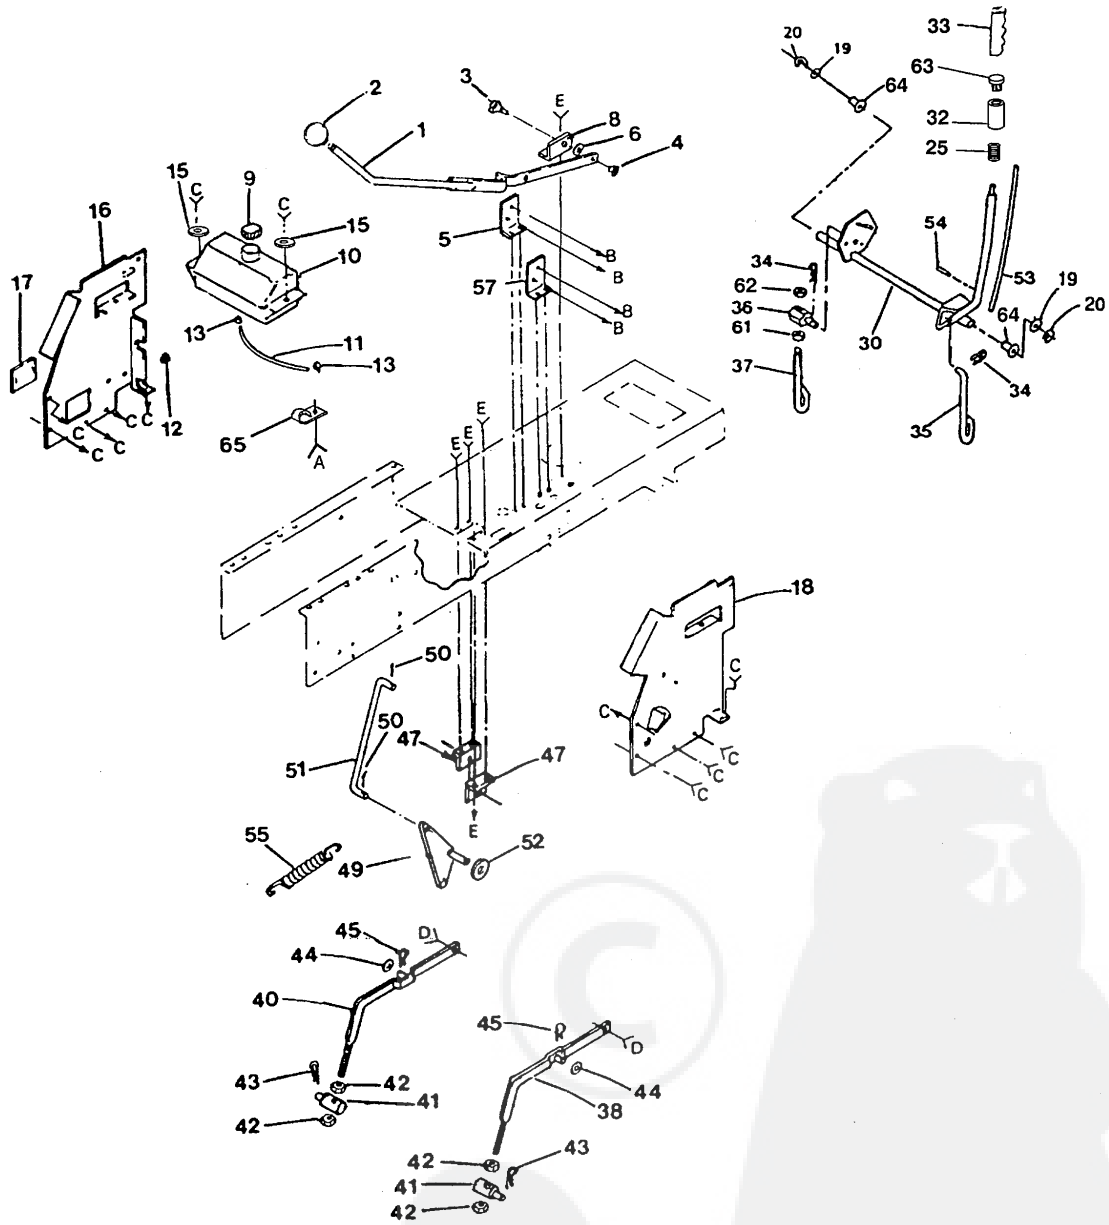


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

LIFT ADJUSTMENT

KEY PART NO.	DESCRIPTION	KEY PART NO.	DESCRIPTION
1	124429X Handle, Clutch, Mower	36	110447X Trunnion, Lift
2	106932X Knob	37	110448X Link, Lift, Adjustable
3	106451X Bolt, Shoulder	38	121598X Arm, Suspension, R. H.
4	73680600 Nut, Crownlock 3/8-16	39	105848X Bolt, Shoulder 3/8-16
5	106452X Bracket, Switch, Interlock	40	121599X Arm, Suspension, L. H.
6	19171516 Washer 17/32 x 15/16 x 16 Ga.	41	106308X Trunnion, Lift, Lower
7	17021008 Screw, Hex., Tapping, #10-24 x 1/2	42	73220800 Nut, Hex 1/2 - 13
8	106447X Support, Lever, Clutch	43	9135R Retainer, Spring
9	123549X Cap, Fuel	44	19171516 Washer 17/32 x 15/16 x 16 Ga.
10	109202X Tank, Fuel	45	4921H Retainer, Spring
11	8548R Line, Fuel	47	106444X Bracket, Bellcrank
12	9151R Grommet	48	74760612 Bolt, Hex 3/8-16 x 3/4
13	123487X Clamp, Hose	49	109728X Bellcrank Assembly
14	17490612 Screw, Hex., Washer Head, Thread Rolling 3/8-16 x 3/4	50	76020412 Pin, Cotter 1/8 x 3/4
15	19131612 Washer 13/32 x 1 x 12 Ga.	51	124444X Rod, Clutch, Primary
16	122795X Panel, Dash, L. H.	52	19131410 Washer 13/32 x 7/8 x 10 Ga.
17	121794X Cover, Access	53	122514X Rod, Lever, Lift
18	124031X012 Panel, Dash, R. H.	54	105767X Pin, Groove
19	19211416 Washer 21/32 x 7/8 x 16 Ga.	55	124446X Spring, Extension
20	12000002 E-Ring	57	108236X Bracket, Switch
21	17490608 Screw, Hex Washer Thdrol. 3/8-16 x 1/2	59	110739X Washer, Spring
25	122512X Spring	60	73980600 Locknut, Flange 3/8-16
30	122507X Shaft, Lift	61	73360700 Nut, Hex. Jam 7/16-20
32	122364X Plunger	62	73710700 Nut, Crownlock 7/16-20
33	109413X Grip, Handle	63	124526X Plunger, Button
34	4939M Retainer, Spring	64	120183X Bearing, Nylon
35	110029X Link, Lift	65	5320R Clip, Insulated


NOTE: All component dimensions given U.S. inches
1 inch = 25.4 mm

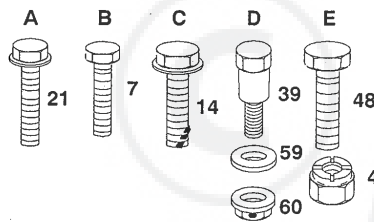

REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

38" MOWER

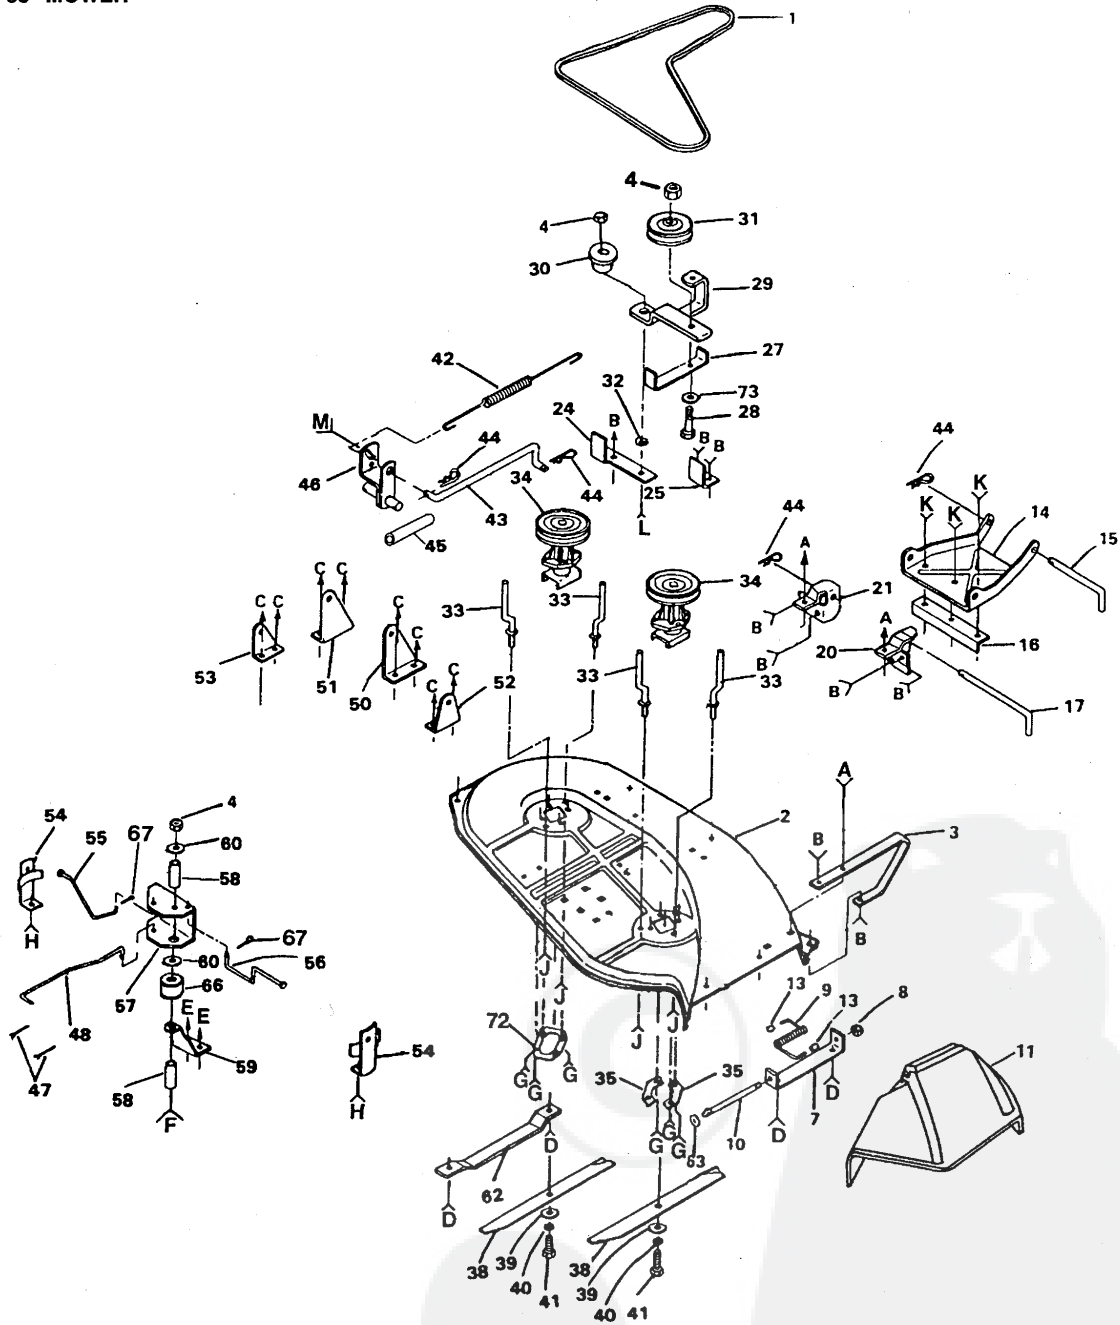


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B

38" MOWER

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1	106085X V-Belt	41	74610624 Bolt, Hex. 3/8 - 24 x 1-1/2 Gr. 5
2	121259X Housing	42	108250X Spring, Extension
3	8417J Runner, R. H.	43	108235X Rod, Clutch, Mower
4	73680600 Nut, Crownlock 3/8-16	44	4921H Spring, Retainer
5	19111216 Washer 11/32 x 3/4 x 16 Ga.	45	6404J Spacer 1/2 x 9/16
6	72140505 Bolt, Carriage 5/16-18 x 5/8	46	124066X Rock Shaft Assembly
7	105896X Bracket, Deflector	47	76020616 Pin, Cotter 3/16 x 1
8	110452X Nut Push	48	108247X Rod, Brake, Primary
9	106734X Spring, Deflector	49	72140606 Bolt, Carriage 3/8-16 x 3/4
10	106735X Rod, Hinge	50	108243X Bracket, Pivot, R. H.
11	106736X Shield, Deflector	51	108241X Bracket, Pivot, L. H.
13	105304X Cap	52	105857X Bracket, Suspension, Rear, R. H.
14	105662X Link, Parallel	53	108673X Bracket, Suspension, Rear, L. H.
15	105744X Pin, Hinge, Front	54	106578X Brake Assembly
16	105872X Stop, Link	55	106463X Rod, Brake, Secondary, L. H.
17	109835X Pin, Hinge, Rear	56	108249X Rod, Brake, Secondary, R. H.
18	74760612 Bolt 3/8-16 x 3/4	57	106456X Bracket, Brake, Pivot
19	73680500 Nut, Crownlock 5/16-18	58	100672K Spacer, Brake
20	109598X Bracket, Lift, R. H.	59	100673L Bracket, Support
21	109597X Bracket, Lift, L. H.	60	19131614 Washer 13/32 x 1 x 14 Ga.
22	72140506 Bolt, Carriage 5/16-18 x 3/4	61	74760688 Bolt 3/8-16 x 5-1/2
24	109503X Support, Arm	62	7631J Runner, L. H.
25	109504X Stop, Deck, Front	63	19111016 Washer 11/32 x 5/8 x 16 Ga.
27	126756X Guide, Belt	64	72140610 Bolt 3/8-16 x 1-1/4
28	74760632 Bolt 3/8-16 x 2	66	122314X Spacer
29	127163X Arm, Idler	67	76020308 Pin, Cotter 3/32 x 1/2
30	106902X Spacer, Retainer	68	72110506 Bolt, Carriage 5/16 - 18 x 3/4
31	123688X Pulley, Idler	69	74760412 Bolt, Hex. 1/4 - 20 x 3/4
32	106513X Washer, Wear 1/16	70	109893X Washer, Special
33	102669X Keeper, Belt	71	73680400 Nut, Crownlock 1/4-20
34	121676X Mandrel Assembly	72	110445X Support, Mandrel, L. H.
35	100668L Plate, Support, Mandrel	73	19131316 Washer 13/32 x 13/16 x 16 Ga.
36	17490614 Screw, Hex Washer Head. 3/8-16 x 7/8	---	123928X Mower Assembly, Complete
37	17490620 Screw, Hex Washer Head 3/8-16 x 1-1/4	---	105814X Decal, V-Belt Mower Drive
38	122264X Blade	---	109820X Decal, Instruction, Caution
39	19132012 Washer 13/32 x 1-1/4 x 12 Ga.	---	121349X Decal, Warning
40	10030600 Washer, Lock 3/8		

NOTE: All component dimensions given U.S. inches
1 inch = 25.4 mm

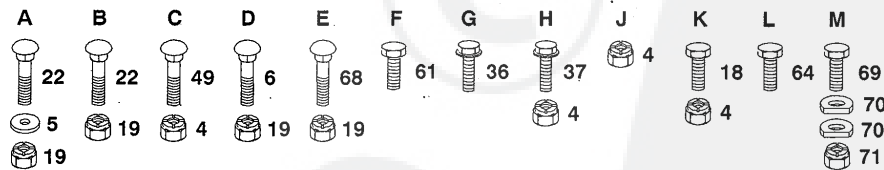


REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B TRANSAXLE FOOTE-MODEL NUMBER 4360-7

TRANSAXLE

ALL WARRANTY REPAIRS MUST BE
PERFORMED BY AN AUTHORIZED
FOOTE DEALER.

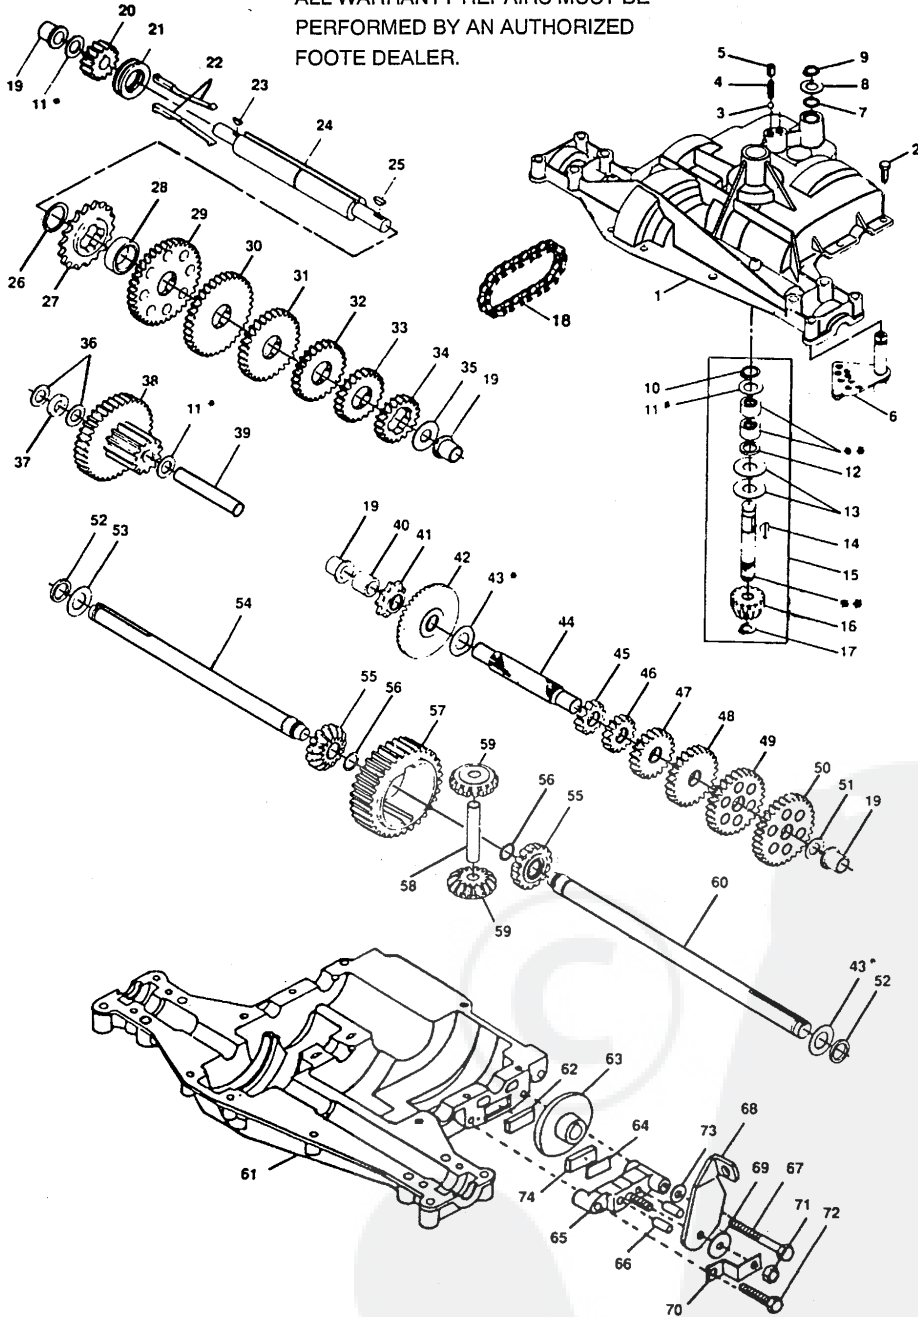

REPAIR PARTS

LAWN TRACTOR - MODEL NUMBER RR1238B TRANSAXLE FOOTE-MODEL NUMBER 4360-7

TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	3865	Housing, Upper	43	3693	*Washer, Plain, .758 x 1.12 x .020
2	1919	Screw, Tapping, 1/4-20 x .734 Lg.	43	3653	*Washer, Plain, .758 x 1.12 x .025
3	1151	Ball, Detent	43	3408	*Washer, Plain, .758 x 1.25 x .020
4	3626	Spring, Detent	43	3732	*Washer, Plain, .758 x 1.25 x .025
5	3623	Screw, Set	43	3184	*Washer, Plain, .758 x 1.25 x .031
6	4336	Ass'y., Shifter	43	3733	*Washer, Plain, .758 x 1.25 x .035
7	3884	O-Ring	43	3198	*Washer, Plain, .758 x 1.25 x .040
8	3885	*Washer, Plain, .505 x .942 x .006	43	3734	*Washer, Plain, .758 x 1.25 x .045
8	3886	*Washer, Plain, .505 x .942 x .010	43	3735	*Washer, Plain, .758 x 1.25 x .050
8	3887	*Washer, Plain, .505 x .942 x .015	43	3736	*Washer, Plain, .758 x 1.25 x .055
8	3888	*Washer, Plain, .505 x .942 x .020	43	3180	*Washer, Plain, .758 x 1.25 x .062
8	3889	*Washer, Plain, .505 x .942 x .026	44	3882	Shaft, Drive
8	3121	*Washer, Plain, .505 x .942 x .030	45	3646	Gear, Spur, 12T.
8	3890	*Washer, Plain, .505 x .942 x .040	46	3707	Gear, Spur, 15T.
9	1100	Ring, Retaining	47	3866	Gear, Spur, 20T.
10	1099	Ring, Retaining	48	3719	Gear, Spur, 25T.
11	1959	*Washer, Plain, .632 x 1.00 x .010	49	3868	Gear, Spur, 28T.
11	1441	*Washer, Plain, .632 x 1.00 x .020	50	3683	Gear, Spur, 31T.
11	1423	*Washer, Plain, .632 x 1.00 x .026	51	1145	Washer, Plain, .632 x 1.00 x .060
11	1082	*Washer, Plain, .632 x 1.00 x .031	52	3191	Seal, Felt
11	1424	*Washer, Plain, .632 x 1.00 x .036	53	3180	Washer, Plain, .758 x 1.25 x .062
11	1068	*Washer, Plain, .632 x 1.00 x .041	54	3880	Axle, L.H.
11	1425	*Washer, Plain, .632 x 1.00 x .046	55	3780	Gear, Miter, 15T.
11	1358	*Washer, Plain, .632 x 1.00 x .050	56	3656	Ring, Retaining
11	1145	*Washer, Plain, .632 x 1.00 x .060	57	3839	Gear, Spur, 32T.
11	1319	*Washer, Plain, .632 x 1.00 x .082	58	3919	Shaft, Cross
12	3312	O-Ring	59	3781	Gear, Miter, 15T.
13	3876	Washer, Plain, .632 x 1.38 x .046	60	3881	Axle, R.H.
14	1374	Key, Woodruff, #9	61	3864	Housing, Lower
15	4134	Ass'y., Kit, Input Shaft	62	3920	Puck, Friction
16	3590	Pinion, Bevel, 14T.	63	3276	Disc, Brake
17	3624	Ring, Retaining	64	3758	Spacer
18	3625	Chain, 24 Pitches	65	3916	Jaw, Brake
19	1542	Bearing, Flange	66	3843	Pin, Dowel
20	3773	Gear, Spur, 14T.	67	3915	Screw, Tapping, 5/16-18 x 2.25 Lg.
21	3631	Collar, Clutch	68	3768	Lever, Actuating
22	3828	Key, Clutch	69	3760	Washer, Plain, .321 x 1.00 x .055
23	1369	Key, Woodruff	70	3917	Bracket, Anti-Rotation
24	3883	Shaft, Intermediate	71	3847	Nut, Lock, 5/16-24
25	1375	Key, Woodruff, #61	72	3724	Screw, Tapping, 5/16-18 x 1.44 Lg.
26	3627	Ring, Retaining	73	3906	Washer, Plain, .343 x .81 x .059
27	3830	Sprocket, 18T.	74	3907	Puck, Friction
28	3841	Spacer	75	4300	Grease
29	3786	Gear, Spur, 37T.			
30	3785	Gear, Spur, 35T.			
31	3867	Gear, Spur, 30T.			
32	3783	Gear, Spur, 25T.			
33	3869	Gear, Spur, 22T.			
34	3741	Gear, Spur, 19T.			
35	3628	Washer, Plain, .640 x 1.37 x .061			
36	1423	Washer, Plain, .632 x 1.00 x .026			
37	3422	Spacer, .630 x 1.00 x .169			
38	4286	Ass'y., Gear, Comb., 12T. & 35T.			
39	3877	Shaft, Idler			
40	3901	Spacer, .635 x .875 x .755			
41	3645	Sprocket, 9T.			
42	3853	Gear, Bevel, 42T.			
43	3749	*Washer, Plain, .758 x 1.12 x .010			
43	3652	*Washer, Plain, .758 x 1.12 x .015			

*Use in various combinations to maintain proper clearances.

**Order Key No. 15.