LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of one (1) year from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine, other than FHP manufactured transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- 2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by Frigidaire Home Products.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

Frigidaire Home Products Outdoor Products Customer Service Dept. 250 Bobby Jones Expressway Augusta, GA 30909 USA	In Canada contact:
	Frigidaire Home Products
	7075 Ordan Drive
	Mississauga, Ontario
	L5T 1K6

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRAN-TIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.



ASSEMBLY/REPAIR PARTS MANUAL MODEL NO. AB13107B Lawn Tractor



167911 11.16.98 RH PRINTED IN U.S.A.

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product "Tractor"
- Model Number "AB13107B"
- Part Number
- Part Description


hp/kw	km/h	Cm Cm		₩ KG	dB (A)	Vibration Lärmpegel Vibration Vibratie Vibración Vibrazioni Vibrering Vibration Vibrasjon Tärinä m/s ²
13/9,7	0-6,5	107	38-102	275	100	4 to 8

TABLE OF CONTENTS

SCHEMATIC	
ELECTRICAL	4-5
CHASSIS AND ENCLOSURES	6-7
DRIVE	8-9
SEAT	10
DECALS	
STEERING WHEEL	12-13
ENGINE	14-15
MOWER LIFT	16-17
MOWER DECK	18-19
WARRANTY	23-24


TRACTOR - - MODEL NUMBER AB13107B

SCHEMATIC

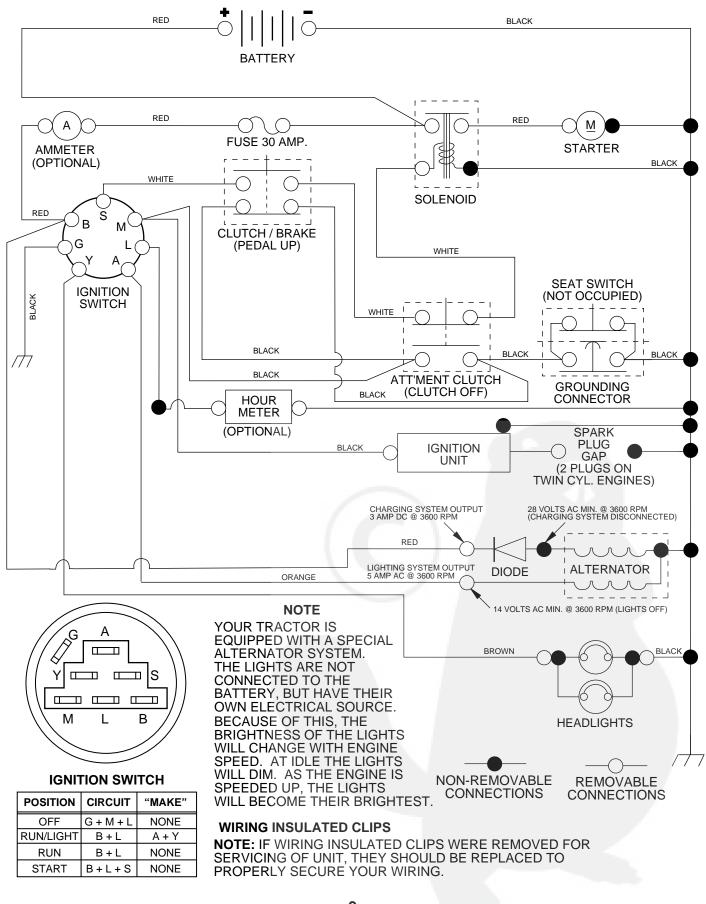

TRACTOR - - MODEL NUMBER AB13107B

ELECTRICAL

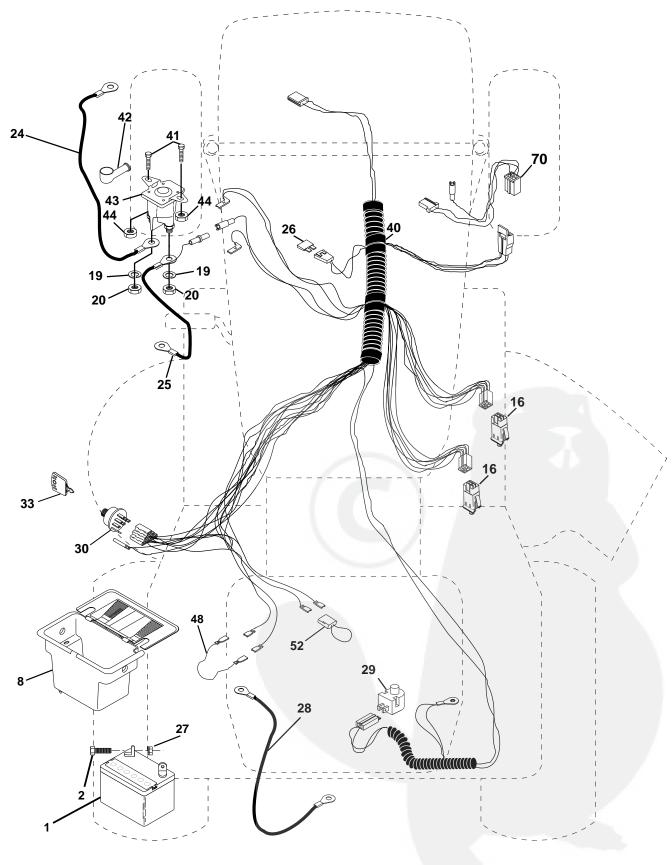

TRACTOR - - MODEL NUMBER AB13107B


ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
8 16 20 21 22 24 25 26 27 28 29 30 31 32 33	121305X 140301 124211X 141226 122147X	Battery 12 Volt 25 AMP Bolt Hex Hd 1/4-20unc X 3/4 Case Battery Switch Interlock Push-In Washer Lock 1/4 Nut Jam Hex 1/4-20 Unc Harness Asm Light W/4152j Bulb Light #1156 Cable Battery 6 Ga 11" red Cable Battery 6 Ga 44" red Fuse 15 AMP Auto Green Nut Keps Hex 1/4-20 Unc Cable Ground 6 Ga 12" black Switch Plunger Nc Gray Switch Ign 4 pos w/lights Nut Ignition Cover Sw Ignition Key Ign Modleded Generic
	166145	Harness Ignition Man. Cl.
	71110408 131563	Bolt Blk Fin Hex 1/4 - 20 x 1/2 Cover Terminal Red
43	145673	Solenoid
44	73640400	Nut Keps Hex 1/4-20 Unc
	140844	Adapter Ammeter
	141940	Protection Wire Loop
70	166658	Harness, Eng.

NOTE: All component dimensions give in U.S. inches 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER AB13107B

CHASSIS AND ENCLOSURES

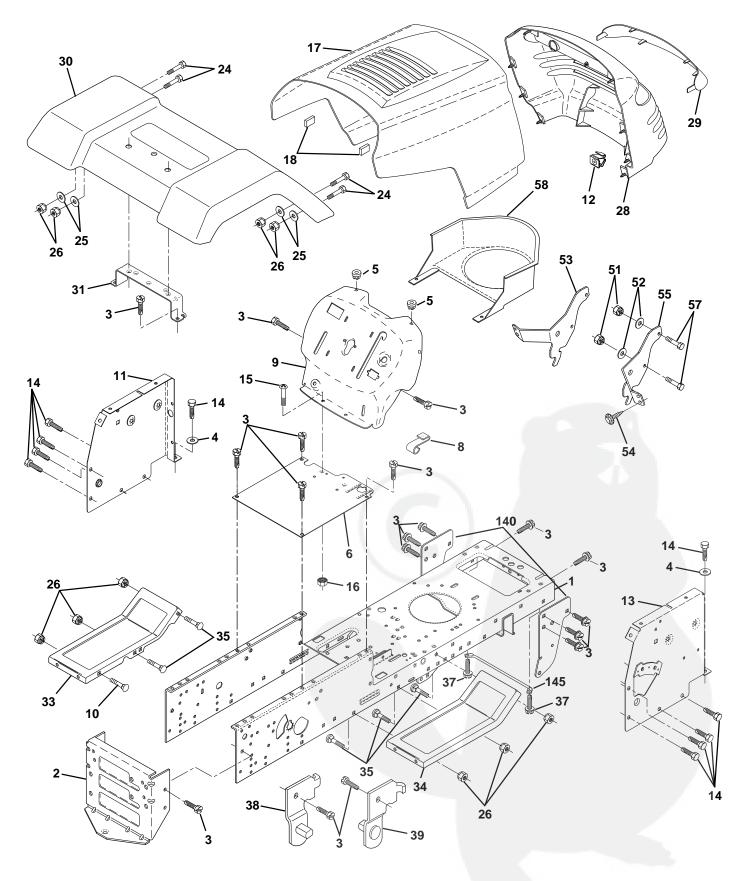

TRACTOR - - MODEL NUMBER AB13107B


CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1234568901123456712226890112345671222222222222222222222222222222222222	165480 140356 17490612 19131216 155272 155923 155138 161937X011 72140608 155927 145660 155934X010 17490608 74180512 73510500 159639X505 126938X 124028X 74780616 19131312 73800600 157539 150209X599	Chassis LT Stamping 99 Drawbar, Stretch 94 Screw, Thdrol. 3/8-16 x 3/4 Ty-TT Washer 13/32 x 3/4 x 16 Gauge Bumper Hood/Dash Saddle LT Fender Shift Clip Retainer Slide-On Dash P/L Bolt, Rdhd Sqnk 3/8-16 x 1 Panel Asm.Dash LH Clip Tinnerman Grille P/L Dash, Panel RH Screw Thdrol 3/8-16 x 1/2 Ty-tt Screw Mach.Trhd 5/16-18 UNC x 3/4 Nut Keps 5/16-18 UNC Hood Pnt Stl PL Bumper Hood Bushing Snap Nyl Blk Fuel Line Bolt, Hex , Fin. 3/8-16UNC x 1 Gr. 5 Washer 13/32 x 13/16 x12 Gauge Nut Lock Hex w/Ins. 3/8-16 Unc Grille Lens Grille
30 31 33 34 35 37 38 39 51 52 53 54 55 57 58	157583X505 136619 145244X505 145243X505 72110606 17490508 139886 139887 73800400 19091416 144697 161464 144696 74780412 150127 158418 156524 5479J	Fender Pnt Bracket Fender Footrest Pnt., LH Footrest Pnt., RH Bolt Rdhd Sht. Sqnk 3/8-16 X 3/4 Screw Thdrol 5/16-18 x 1/2 Tyt Bracket Asm. Pvt. LH Mower Rear Bracket Asm. Pvt. RH Mower Rear Nut Lock Hex W/Ins 1/4-20 Washer 9/32 x 7/8 x 16 Ga. Bracket, Grille LH Screw Hex WSHD 8-18 x 7/8 Bracket Grille RH Bolt Fin Hex 1/4-20 x 3/4 Air Duct Engine P/L Bracket Suspension Front Rod Pivot Chassis/Hood Plug Btn Blk .359 Dia Ch/Inf

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB13107B

DRIVE

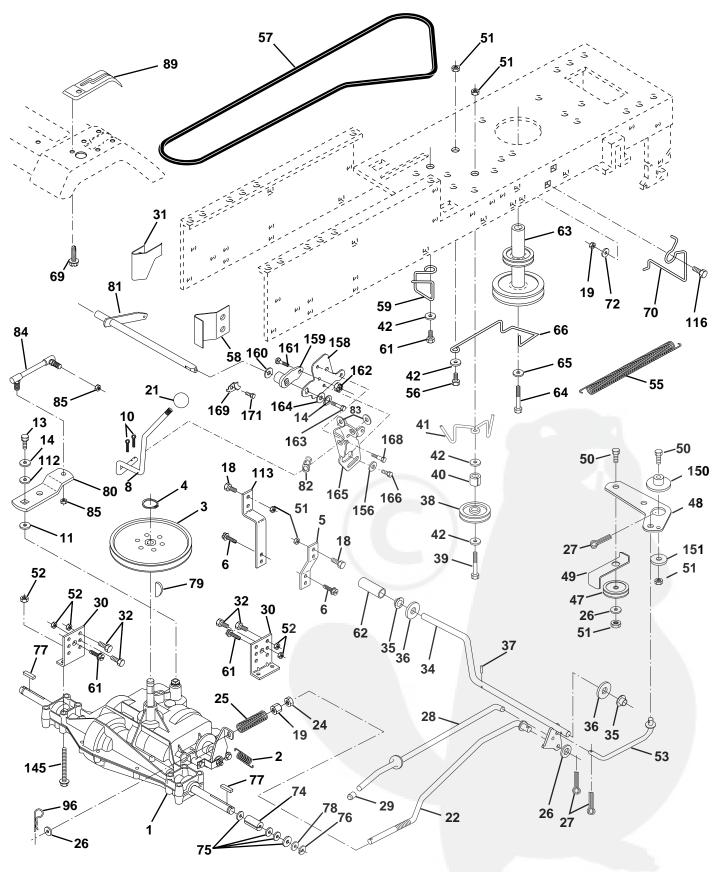

TRACTOR - - MODEL NUMBER AB13107B

DRIVE

KEY NO.	PART NO.	DESCRIPTION
1		Transaxle Peerless Model 206-545C Order parts from transaxle
2 3	146682 123666X	manufacturer Spring, Brake Return Pulley, Transaxle Ring, Retainer Strap, Torque Screw, Hex, Washer, Thread Rolling
4 5	12000028 121520X	Ring, Retainer Strap, Torque
6	17490512	Screw, Hex, Washer, Thread Rolling 5/16-18 x 3/4
8	165619	Rod Shift
10 11	76020416 105701X	Pin, Cotter 1/8 x 1 Washer, Shift Plate
13	74550412	Bolt 1/4-28 UNF Gr. 8 w/Patch
14 18	10040400 74780616	Washer Lock Bolt, Fin Hex 3/8-16 Unc x 1 Gr. 5
19	73800600	Locknut 3/8-16
21	106933X	Knob
22 24	130804 73350600	Rod, Brake Nut, Hex Jam 3/8-16
25	106888X	Spring, Rod, Brake
26 27	19131316 76020412	Washer 13/32 x 13/16 x 16 Gauge Pin, Cotter 1/8 x 3/4
28	145204	Rod, Brake, Park
29 30	124236X	Cap, Plunger
	130807 74760512	Bracket, Transaxle, L.H. Bolt Hex Hd 5/16-18 UNC x 3/4
34	155071	Shaft, Foot Pedal
35 36	120183X 19211616	Bearing Nylon Washer 21/32 x 1 x 16 Gauge
37	1572H	Pin,Roll 3/16 x 1
38 39	131494 74760644	Idler, Flat Bolt, Hex 3/8-16 x 2-3/4
40	4470J	Spacer
41	165838	Keeper, Belt
42 47	19131312 127783	Washer 13/32 x 13/16 x 12 Gauge Pulley, Idler
48	154407	Bellcrank Asm Clutch
49 50	123205X 74760624	Retainer, Belt Bolt, Hex 3/8-16 x 1-1/2
51	73680600	Nut, Crownlock 3/8-16
52 53	73680500 105710X	Nut, Crownlock 5/16-18 Link, Clutch
55	105709X	Spring, Return, Clutch
56	74760620 130801	Bolt, Fin, Hex 3/8-16unc x 1-1/2
57 59	130801 140312	V-Belt, Drive Retainer, Belt

KEY NO.	PART NO.	DESCRIPTION
61	17490612	Screw, Hex Washer Head, Thd.,
$\begin{array}{c} 62\\ 63\\ 65\\ 66\\ 9\\ 72\\ 74\\ 75\\ 77\\ 78\\ 9\\ 81\\ 2\\ 8\\ 8\\ 8\\ 8\\ 96\\ 2\\ 113\\ 145\\ 156\\ 156\\ 168\\ 162\\ 34\\ 165\\ 166\\ 16\\ 168\\ 166\\ 168\\ 168\\ 168\\ 168\\$	8883R 140186 71170764 10040700 154778 124346X 134683 19132012 137057 121749X 12000001 123583X 121748X 2228M 131486 165594 123782X 19171216 16528 150360 139964 4497H 19091210 127285X 72110610 74490540 165589 165494 19292016 72140406 73680400 74780416 19091010 165623 166880 165492 165581	Screw, Hex Wasner Head, Ind., Roll. 3/8-16 x 3/4 Cover, Foot Pedal Pulley, Engine Bolt, Hex 7/16-20 x 4 Gr. 5 Washer, Lock Hvy HIcl Spr 7/16 Keeper, Belt Engine F-Proof Nut Self Thd. Wsh Hd 1/4 Guide Belt Mower Drive RH Washer 13/32 x 1-1/4 x 12 Ga. Spacer, Split Washer 25/32 x 1-1/4 x 16 Ga. E-Ring Key Square Washer 25/32 x 1-5/8 x 16 Ga. Key Woodruff #9 3/16 x 3/4 Shift Arm Shaft Asm Cross Tapered Da/Pr 18 Spring, Torsion Washer 17/32 x 3/4 x 16 Gauge Link Transaxle Pmst/18" Zinc Nut 1/4-28 Console, 6 Speed Retainer Spring 1" Ziinc/Cad Washer 9/32 x 3/4 x 10 Ga. Strap Torque L.H. Lt Bolt, RdHd Sq Neck 3/8-16 x 1.25 Bolt, Hex Flghd 5/16-18 Gr. 5 Bushing Bellcrank Washer 13/32 x 2 x 10 Ga. Washer Stried 5/16 ID x 1.0 x .125 Bracket Shift Mount Hub Tapered Flange Shift LT Washer 29/32 x 1-1/4 x 16 Ga. Bolt Rdhd Sqnk 1/4-20 Unc Bolt Hex Fin 1/4-20 Unc x 1 Gr. 5 Washer 5/8 x .281 x 10 Ga. Bracket Pivot Lever Screw 5/16-18 x 5/8 Bolt Shoulder 5/16-18 x .561 Plate Fastening LT Keeper Belt Transaxle Gear
171	17490608	Screw Thdrol 3/8-16 x 1/2 TY-TT


NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER AB13107B

SEAT

. .

-

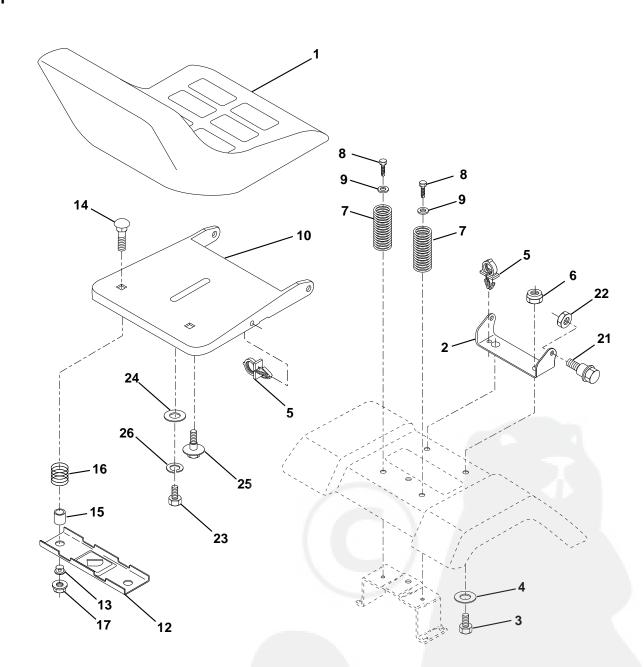


KEY NO.	PART NO.	DESCRIPTION	KEY NO.
1 2 3 4 5 6 7 8 9 10 12 13	127427 140551 74760616 19131610 145006 73800600 124181X 17490616 19131614 155925 121246X 121248X	Seat Bracket, Pivot, Seat Bolt Washer 13/32 x 1 x 10 Ga. Clip, Push-in Nut Spring, Seat Screw, Thdrol 3/8-16 x 1 Washer 13/32 x 1 x 14 Ga. Pan, Seat Bracket, Mounting, Switch, Seat Bushing, Nylon	14 72 15 13 16 12 21 14 22 73 23 74 24 19 25 12 26 10 NOTE:

KEY NO.	PART NO.	DESCRIPTION
14 15	72050412 134300	Nut, Crownlock 1/4-20 x 1-3/8 Spacer, Split
16	121250X	Spacer, Spin
17	123976X	Nut, Lock, Flange 1/4 Gr. 5
21	153236	Bolt, Shoulder 5/16-18 UNC
22	73800500	Nut
23	74780814	Bolt Fin Hex 1/2 - 13 x 7/8 Gr. 5
24	19171912	Washer 17/32 x 1-3/16 x 12 Ga.
25	127018X	Bolt Shoulder 5/16-18 x .62
26	10040800	Washer Lock Hvy Hclc Spr 1/2


NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB13107B

DECALS

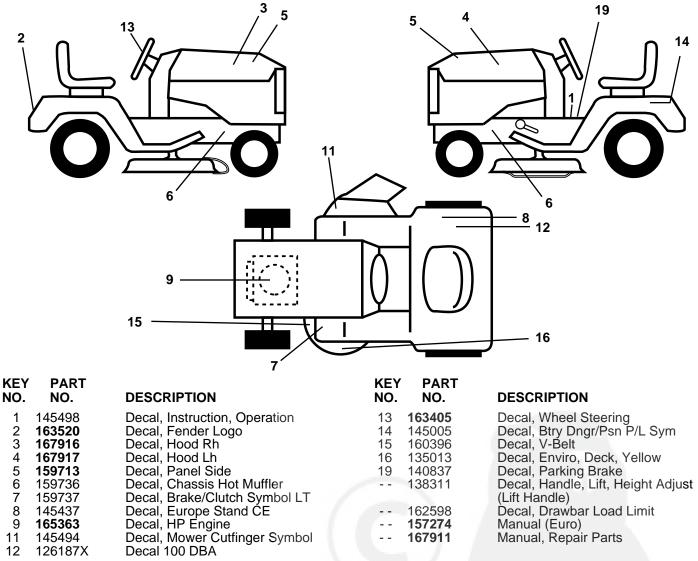

TIRES AND WHEELS

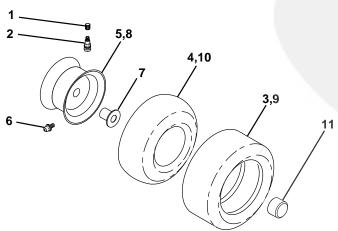


KEY NO.	PART NO.	DESCRIPTION
1 2 3 4 5 6 7 8 9	59192 65139 106222X 59904 106732X427 278H 9040H 106108X427 106268X	Cap, Valve Stem, Valve Tire Front Tube, Front (not furnished) Rim, Asm. Front Grease Fitting (rear tire only) Bearing, Flange (front tire only) Rim, Asm. Rear Tire, Rear TS. 18 x 9.5 - 9 C.
10 11	7152J 104757X 144334	Service Tube, Rear (not furnished) Cap, Axle Sealant, Tire (10 oz. Tube)
NOT	E: All compone	ent dimensions given in U.S. incl

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB13107B

STEERING WHEEL

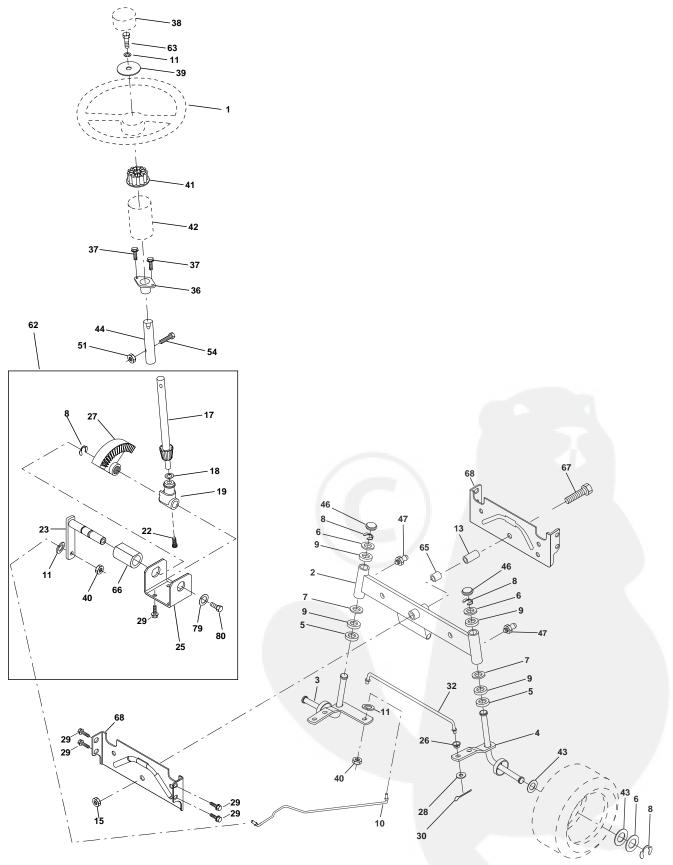

TRACTOR - - MODEL NUMBER AB13107B


STEERING WHEEL

KEY NO.	PART NO.	DESCRIPTION
25 26 27 28 29 30	133741 154427 156483 157473 6266H 121748X 19272016 1200029 3366R 156438 10040600 154779 73901000 156546 57079 160395 165857 165851 154406 126847X 136874 19131416 17490612 76020412	Wheel Steering Axle Asm Front Spindle Asm LH Spindle Asm RH Bearing, Race, Thrust Hardened Washer 25/32 X 1-5/8 X 16 Ga Washer 27/32 X 1-1/4 X 16 Ga Ring Klip Bearing Link Drag Washer Lock Hvy Hlcl Spr 3/8 Bearing Axle Stlt/Gt Locknut, Hex, Jam, w/Washer Insert 5/8-11 Unc Steering, Assembly Shaft Washer Thrust 515x 750x 033 Support Shaft Screw Hex Wsh Hd Torx Shaft Asm Pittman Bracket Steering Bushing Link Drag Blk Lr Gear Sector Washer 13/32 x 7/8 x 16 Ga. Screw Thdrol. 3/8-16x3/4 Ty-tt Pin Cotter 1/8 x 3/4 CAD
$\begin{array}{c} 36\\ 37\\ 38\\ 39\\ 40\\ 41\\ 42\\ 43\\ 44\\ 46\\ 47\\ 51\\ 54\\ 62\\ 63\\ 65\\ 66\\ 67\end{array}$	130465 155099 152927 133742 19133808 7810H 100711L 145054 121749X 153720 121232X 6855M 73800500 74780520 167902 74780616 154404 74781044 154429 19132012 74950612	Rod Connecting Bushing Steering Screw TT #10-32 X 5 x 3/8 Flange Cap Wheel Steering Washer 13/32 x 2-3/8 x 8 Ga Nut Lock Center 3/8-24 Unf Adapter Wheel Strg Boot Shaft Steering Washer 25/32 X 1 1/4 X 16 Ga Extension Steering Cap Spindle Fitting Grease Nut Lock Hex W/Ins. 5/16-18 Unc P Bolt Fin Hex 5/16-18 Unc 6 x 1-1/4 Kit Steering Asm. Service Bolt Fin Hex 3/8-16 unc x 1 Gr. 5 Spacer Axle Bearing Arm Pittman Bolt Fin Hex 5/8-11 UNC x 2-3/4 Brsce Axle Washer 13/32 x 1-1/4 x 12 Ga. Bolt Hex Nylon 3/8-16 x 3/4

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB13107B

ENGINE

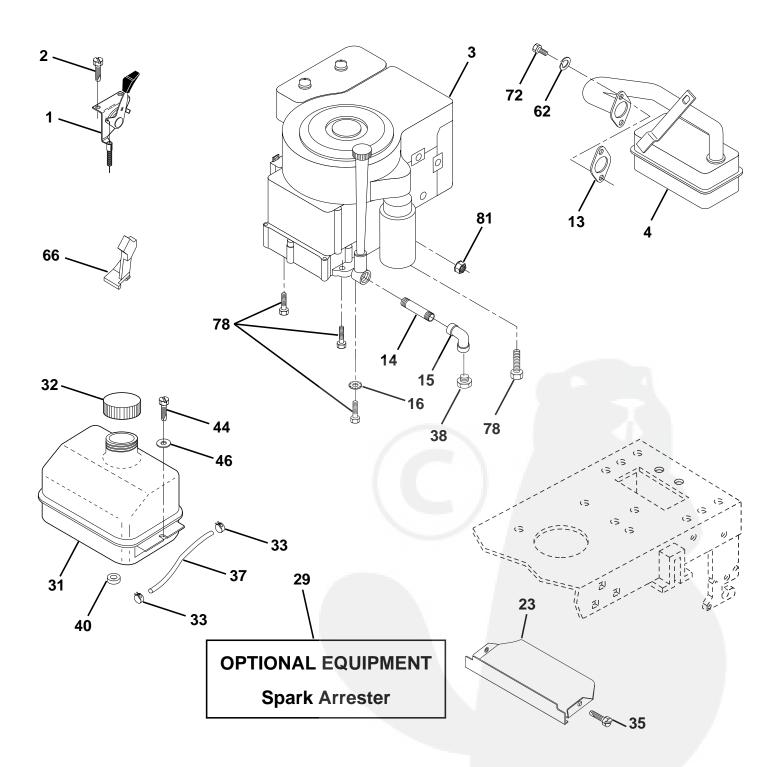

• •


TRACTOR - - MODEL NUMBER AB13107B

ENGINE

EY PART D. NO.	DESCRIPTION
1 141359	Control Th/ch
2 17720410	Screw Hex Thd Cut 1/4-20x5/8 T Engine Briggs Model No. 28R707
	Order parts from engine manufacturer
4 137348	Muffler Exhaust B&S
3 165291	Gasket Eng Tin Plated
	Nipple Pipe 3/8 Npt X 3"
	Elbow Std 90 Degree 3/8-18 Npt
	Washer Lock Ext Tooth 3/8
	Shield BRN/DBR Guard
	Kit Spark Arrestor (Flat Scrn) Tank Fuel Front 1.25
	Cap Asm Fuel
	Clamp Hose Blk
	Screw Thdrol 5/16-18 x 3/4
7 137040	Line Fuel
3	Plug Oil Drain (Order From Engine Manufacturer)
	Bushing Snap Nyl Blk Fuel Line
	Screw Hexwsh Thdrol 1/4-20x3/4
	Washer 9/32 X 7/8 X 16 Ga
	Washer 5/16
	Stop Throttle Screw 5/16-18 x 3/4
	Screw Thdrol 3/8-16x1-1/4 TYTT
	Nut Flange 1/4-20 Starter Nut
	D. NO. 1 141359 2 17720410 3 4 137348 3 165291 4 13280324 5 13200300 5 11050600 3 159880 9 137180 1 109202X 2 140527 3 123487X 5 17490512 7 137040

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

MOWER LIFT

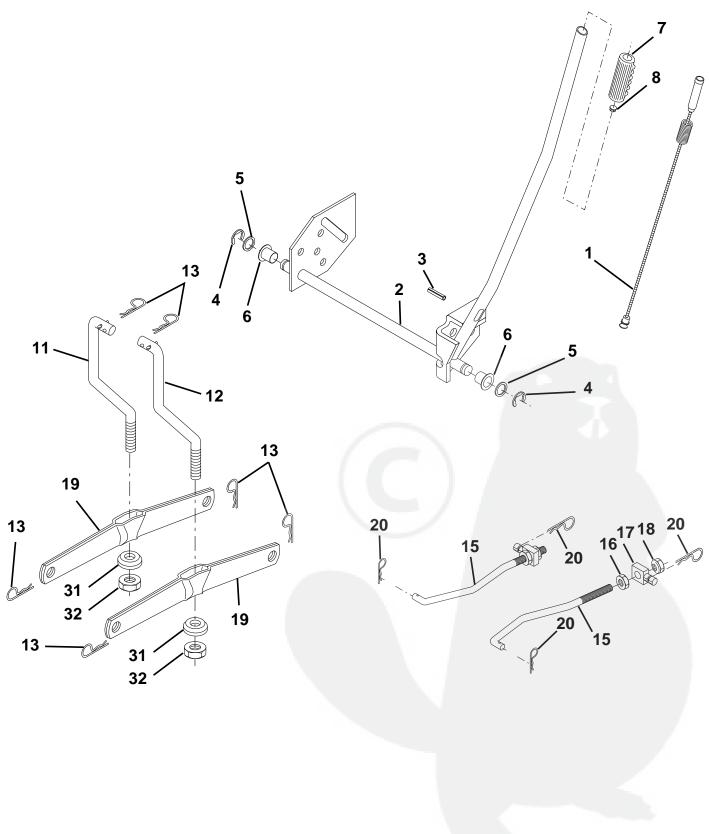

TRACTOR - - MODEL NUMBER AB13107B


MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	159460	Wire Asm. Inner/Sprg w/Plunger
2	159471 105767X 12000002 19211621	Shaft, Asm., Lift R/H
3	105767X	Pin, Groove
4	12000002	Ring, E #5133-62
5	19211621	Washer 21/32 x 1 x 21 Ga.
6	120183X	Bearing, Nylon
	109413X	Grip Handle Bicycle Matte Blk
8	122365X	Button, Plunger
11	139865	Link, Lift, Lh
12	139866	Link, Lift, Rh
13	4939M	Spring, Retainer
15	127218	Link, Front
16	73350800	Nut, Jam, Hex 1/2-13 Unc
17	130171	Trunnion
18	73680800	Nut, Crownlock 1/2-13 Unc
19	139868	Arm, Suspension, Rear
20	163552	Spring, Retainer
31	140302	Bearing, Pvt Lft
32	73540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB13107B

MOWER DECK

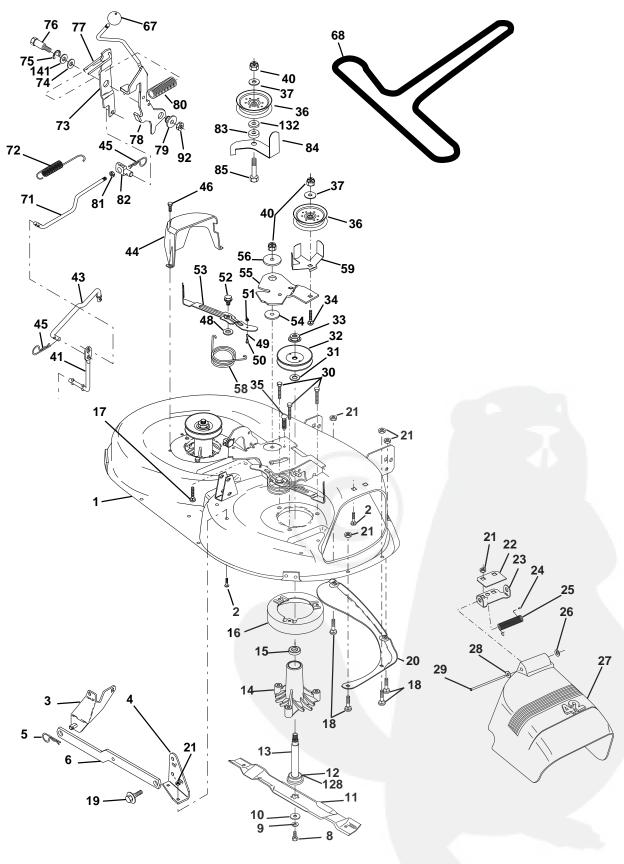

TRACTOR - - MODEL NUMBER AB13107B

MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.
$\begin{array}{c}1\\2&3&4&5&6\\8&9&0&1&1&2\\1&1&1&1&1&5&6\\1&1&1&1&2&2&2&2&2&2&2&2&2&2&3\\1&1&2&3&4&5&6&7&6&2&2&2&2&2&2&2&2&2&2&2&2&2&2&2&2&2$	164961 72140506 138017 138440 4939M 130832 850857 10030600 140296 138498 129895 137645 128774 110485X 140329 72110610 72140505 132827 159770 73680500 134753 131267 105304X 123713X 110452X 130968 19111016 131491 157722 129963 153535 137266 72110614 133835 131494 19131316 73680600 133551 140083 140083	Housing Asm MWR 42" HL MCH T- Path Bolt Rdhd Sqnk 5/16-18unc X3/4 Bracket Asm Fr Sway Bar 38/42 Bracket Asm Deck 42"sway Bar Retainer Spring Arm Suspension Rear Bolt 3/8-24x1 25 Gr8 Patched Washer Lock Hvy 3/8 Unplated Washer Hard Blade Mower Vented Blade Mower 42" High Lift Bearing Ball #6204 (Mandrel) Shaft Asm W/lower Bearing Housing Mandrel Vented(machd) Bearing Ball Mandrel Stripper Mower Round Bolt Rdhd Sqnk 3/8-16 X 1.25 Bolt Carr 5/16-18 X 5/8 Bolt Shoulder Baffle Vortex 42 Nut Crown Lock 5/16-18 Stiffener Bracket 42"deck Bracket Deflector Mower 42" Cap Sleeve 80x 112 Blk Mower Spring Torsion Deflector 2 52 Nut Push Phos & Oil Shield Deflector Mower 42" Blk Washer 11/32 X 5/8 X 16 Ga Rod Hinge 42"6 75 Wlg Screw Thdrol Washer Hd Washer Spacer Mower Vented Pulley Mandrel 42/44/50" Nut 9/16top Lock Flng Bolt Rdhd 3/8-16uncx1-3/4 Gr5 Fastner Christmas Tree Pulley Idler Flat 3 060 Washer 13/32 x 13/16 x 16 Ga. Nut Crownlock 3/8-16 Unc Rod Pivot W/nibs Rod Clutch Secondary W/nibs Guard Mandrel LH Black	45 46 48 49 50 51 52 53 54 55 56 58 59 67 68 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 92 128 132 141 NOTE

KEY NO.	PART NO.	DESCRIPTION
45 448 49 55 55 55 55 55 55 55 55 55 55 55 55 55	4497H 137729 133944 155066 131340 69180 139888 131845 133943 155046 122052X 140086 141043 162132 144200 142427 131870 127847 121748X 12000029 128903 127845 160570 127498 153701 73350600 142028 153701 73350600 142028 120958X 156084 72140620 73800600 153390 19132203 6266H 130794	Spring Retainer 1" Zinc/cad Screw Hex Thd Cut 1/4-24 UNC Washer Hardened Smaller Roller Asm Cam Follower 42"dec Bolt Shidr 10-24 Zinc Gr 5 42" Nut Lock #10-24 Unc Bolt Shoulder 5/16-18 Unc Blkz Arm Asm Pad Brake Washer Hardened Arm Idler 42" mower Spacer Retainer Pm Mower Spring Torsion Brakes 42" Guard TUV Idler Knob Rd 7/16-14 Pastic Thds Blk V-Belt Mower Rod Clutch Primary 38/42 Spring Return Arm Clutch Secondary Washer 25/32 X 1-5/8 X 16 Ga Ring Klip #t5304-75 Bolt Shoulder 3/8-16 Unc 1 44 Keeper Spring 4 000 Arm Clutch Primary Bushing 747 Od X 794 Lg Brass Spring Clutch Mower Nut Hex Jam 3/8-16 Trunnion Adj. Washer Sintered Keeper Belt Idler Bolt Rdhd Sq 3/8-16 UNC x 2-1/2 Nut Lock Hex w/Ins 3/8-16 UNC Washer Felt Washer 13/32 x 1-3/8 x 3 Ga. Wasehr Thrust .75 x 1.230 Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33) Deck, Std (Complete)
		, ()

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

SERVICE NOTES



SERVICE NOTES



SERVICE NOTES





Issued January 1980 Revised January 1991





LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

B. Products And Items Not Warranted

- 1. Alterations or Modifications of Power Train Components.
- 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.