LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of one (1) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- 1. This warranty does not apply to the engine, other than FHP manufactured transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
- 2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by Frigidaire Home Products.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

Frigidaire Home Products Outdoor Products Customer Service Dept. 250 Bobby Jones Expressway Augusta, GA 30909 USA In Canada contact: Frigidaire Home Products 7075 Ordan Drive Mississauga, Ontario L5T 1K6

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRAN-TIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.



REPAIR PARTS MANUAL MODEL NO. MBA14107A Lawn Tractor

Abicobs

167961 11.17.98 TR PRINTED IN U.S.A.

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product "Lawn Tractor"
- Model Number "MBA14107A"
- Part Number
- Part Description

hp/kw	km/h	cm		KG	dB (A)	Vibration Lärmpegel Vibration Vibratie Vibración Vibrazioni Vibrering Vibration Vibrasjon Tärinä m/s ²
14,0/10,4	0-6,5	107	38-102	275	100	4-8

TABLE OF CONTENTS

ELECTRICAL	4-5
CHASSIS AND ENCLOSURES	6-7
DRIVE	8-9
SEAT	10
DECALS	11
STEERING WHEEL	12-13
ENGINE	14-15
MOWER LIFT	16-17
MOWER DECK	18-19
WARRANTY	20



Issued January 1980 Revised January 1991 $\begin{array}{c} \textbf{SERVICE} \\ \textbf{POLCY} \\ \textbf{WARRANTY} \end{array}$



LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

B. Products And Items Not Warranted

- 1. Alterations or Modifications of Power Train Components.
- 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/ or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.


ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

TRACTOR - - MODEL NUMBER MBA14107A

ELECTRICAL

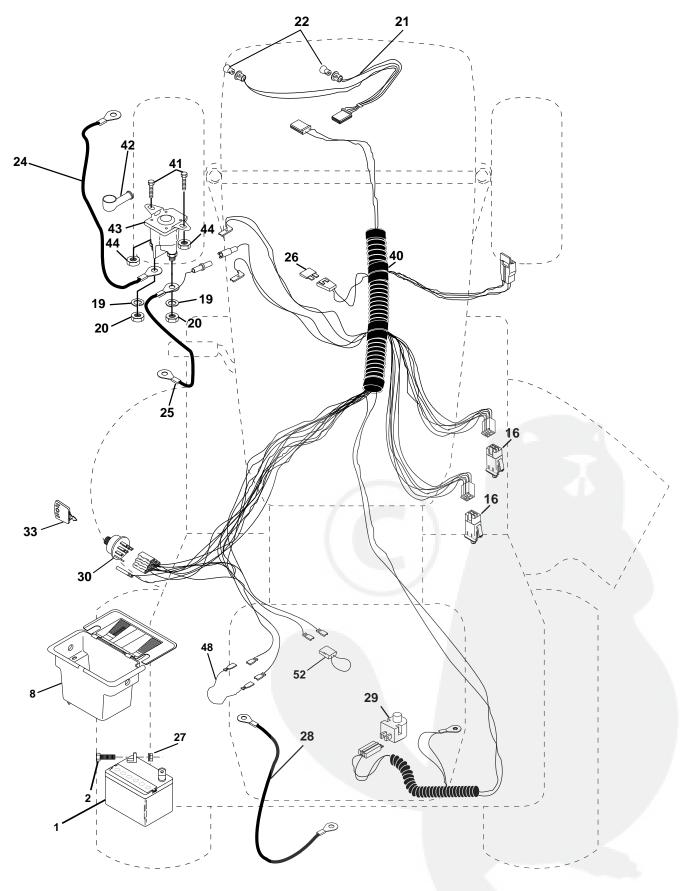

TRACTOR - - MODEL NUMBER MBA14107A


ELECTRICAL

KEY PA NO. NO	ART D. DESC	CRIPTION
$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	0412 Bolt H 17 Case 64 Switcl 0400 Wash 0400 Nut Ja 81 Harne J Bulb I 23X Cable 47 Cable 80 Fuse 0400 Nut K J Cable 05X Switcl 01 Switcl 11X Nut Ig 26 Cover 47X Key Ig 45 Harne 63 Cover 73 Solen 0400 Nut K	ry 12 Volt 25 AMP lex Hd 1/4-20unc X 3/4 Battery h Interlock Push-In ler Lock 1/4 am Hex 1/4-20 Unc less Asm Light W/4152j Light #1156 Battery Battery 6 Ga 44" red 15. AMP less Hex 1/4-20 Unc e Ground 6 Ga 12" black h Plunger Nc Gray h Ign 4 pos w/lights inition r Sw Ignition gn Modleded Generic less Ignition Blk Fin Hex 1/4 - 20 x 1/2 r Terminal Red looid leps Hex 1/4-20 Unc ter Ammeter
52 1419	40 Prote	ction Wire Loop

NOTE: All component dimensions give in U.S. inches 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER MBA14107A

CHASSIS AND ENCLOSURES

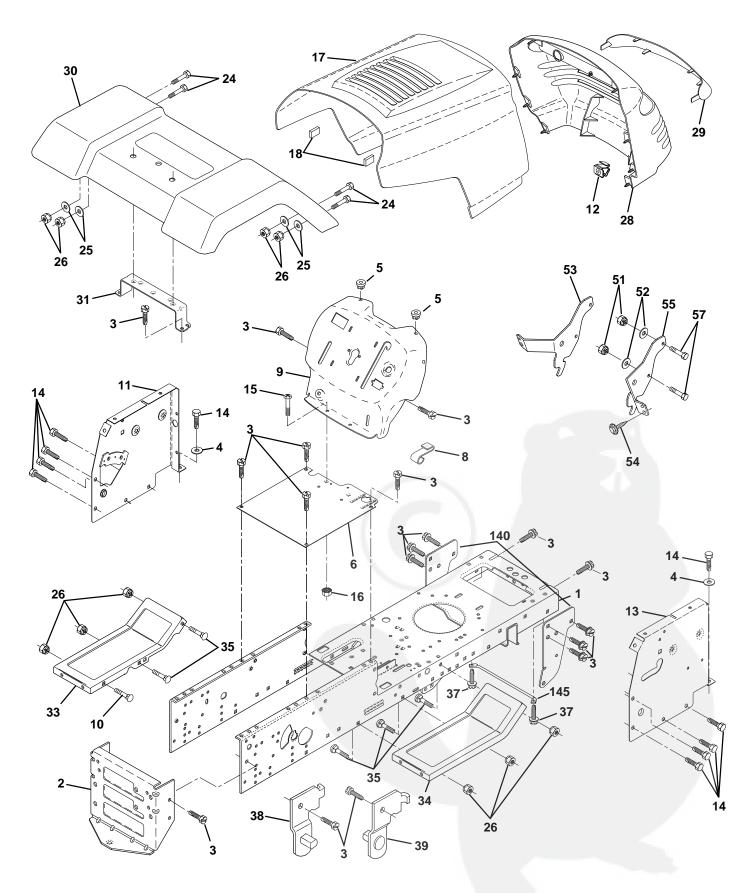

TRACTOR - - MODEL NUMBER MBA14107A


CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
$\begin{array}{c}1&2&3&4&5&6\\&&9&0&1&1&2\\&&1&1&1&1&1&1\\&&1&1&1&2&2&6\\&&&2&2&2&3&0\end{array}$	165480 140356 17490612 19131216 155272 155924 155138 161937X011 72140608 155927 145660 155934X010 159639X558 126938X 74780616 19131312 73800600 157539 150209X599 157584X558	Chassis LT Stamping Drawbar, Stretch 94 Screw, Thdrol. 3/8-16 x 3/4 Ty-TT Washer 13/32 x 3/4 x 16 Gauge Bumper Hood/Dash Saddle Flat Clip Retainer Slide-On Dash P/L Bolt, Rdhd Sqnk 3/8-16 x 1 Panel Asm.Dash LH Clip Tinnerman Grille P/L Dash, Panel RH Screw Thdrol 3/8-16 x 1/2 Ty-tt Screw Mach.Trhd 5/16-18 UNC x 3/4 Nut Keps 5/16-18 UNC Hood Pnt Stl PL Bumper Hood Bolt, Hex , Fin. 3/8-16UNC x 1 Gr. 5 Washer 13/32 x 13/16 x12 Gauge Nut Lock Hex w/Ins. 3/8-16 Unc Grille Lens Grille Fender Pnt
	136619 105476X558 105475X558 72110606 17490508 139886 139887 73800400 19091416 144697 161464 144696 74780412 150127 158418 156524 5479J	Bracket Fender Footrest Pnt., LH Footrest Pnt., RH Bolt Rdhd Sht. Sqnk 3/8-16 X 3/4 Screw Thdrol 5/16-18 x 1/2 Tyt Bracket Asm. Pvt. LH Mower Rear Bracket Asm. Pvt. RH Mower Rear Nut Lock Hex W/Ins 1/4-20 Washer 9/32 x 7/8 x 16 Ga. Bracket, Grille LH Screw Hex WSHD 8-18 x 7/8 Bracket Grille RH Bolt Fin Hex 1/4-20 x 3/4 Air Duct Engine P/L Bracket Suspension Front Rod Pivot Chassis/Hood Plug Btn Blk .359 Dia Ch/Inf

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER MBA14107A

DRIVE

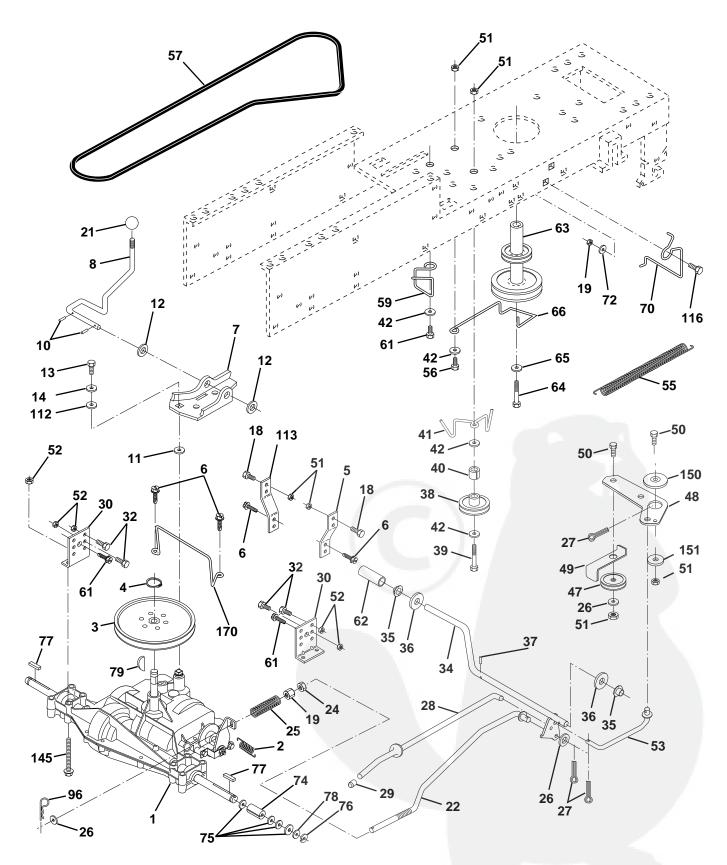


TRACTOR - - MODEL NUMBER MBA14107A

DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1		Transaxle (See Breakdown)	42	19131312	Washer 13/32 x 13/16 x 12 Gauge
		Peerless, Model 205-544C	47	127783	Pulley, Idler
		Order parts from transaxle		154407	Bellcrank Asm Clutch
2	146600	manufacturer		123205X	Retainer, Belt
2	146682 123666X	Spring, Brake Return Pulley, Transaxle	50 51	74760624 73680600	Bolt, Hex 3/8-16 x 1-1/2 Nut, Crownlock 3/8-16
3 4	12000028	Ring, Retainer		73680500	Nut, Crownlock 5/16-18
5	121520X	Strap, Torque		105710X	Link, Clutch
6	17490512	Screw, Hex, Washer, Thread		105709X	Spring, Return, Clutch
Ũ		Rolling 5/16-18 x 3/4		74760620	Bolt, Fin, Hex 3/8-16unc x 1-1/2
7	162240	Bracket, T/A, Saddle Shift	57		V-Belt, Drive
8	131679	Rod, Shifter	59	140312	Retainer, Belt
10	76020416	Pin, Cotter 1/8 x 1	61	17490612	Screw, Hex Washer Head, Thd.,
11	105701X	Washer, Shift Plate		_	Roll. 3/8-16 x 3/4
12	19151216	Washer 15/32 x 3/4 x 16		8883R	Cover, Foot Pedal
	74550412	Bolt 1/4-28 UNF Gr. 8 w/Patch		140186	Pulley, Engine
14	10040400	Washer Lock		71170764	Bolt, Hex 7/16-20 x 4 Gr. 5
	74780616	Bolt, Fin Hex 3/8-16 Unc x 1 Gr. 5		10040700 154778	Washer, Lock Hvy Hicl Spr 7/16
21	73800600 106933X	Locknut 3/8-16 Knob		134683	Keeper, Belt Engine F-Proof Guide Belt Mower Drive RH
22	130804	Rod, Brake		19132012	Washer 13/32 x 1-1/4 x 12 Ga.
24	73350600	Nut, Hex Jam 3/8-16		137057	Spacer, Split
25	106888X	Spring, Rod, Brake		121749X	Washer 25/32 x 1-1/4 x 16 Ga.
	19131316	Washer 13/32 x 13/16 x 16 Gauge		12000001	E-Ring
27	76020412	Pin, Cotter 1/8 x 3/4		123583X	Key Square
28	145204	Rod, Brake, Park		121748X	Washer 25/32 x 1-5/8 x 16 Ga.
29	71673	Cap, Plunger		2228M	Key Woodruff #9 3/16 x 3/4
30	130807	Bracket, Transaxle, L.H.		4497H	Retainer Spring 1" Ziinc/Cad
	74760512	Bolt Hex Hd 5/16-18 UNC x 3/4		19091210	Washer 9/32 x 3/4 x 10 Ga.
	155071	Shaft, Foot Pedal		127285X	Strap Torque L.H. Lt
35 36	120183X	Bearing Nylon		72110610 74490540	Bolt, RdHd Sq Neck 3/8-16 x 1.25
30	19211616 1572H	Washer 21/32 x 1 x 16 Gauge Pin,Roll 3/16 x 1		165850	Bolt, Hex Flghd 5/16-18 Gr. 5 Bushing, Bellcrank Grd Dr.
	131494	Idler, Flat	150	19133210	Washer $13/32 \times 2 \times 10$ Ga.
	74760644	Bolt, Hex 3/8-16 x 2-3/4	170	165849	Keeper, Belt, Transaxle GD.
40	4470J	Spacer			
41	165838	Keeper, Belt	NOT		nent dimensions give in U.S. inches.
	-	· · ·		1 inch = 25	0.4 [[][]].

TRACTOR - - MODEL NUMBER MBA14107A


SEAT

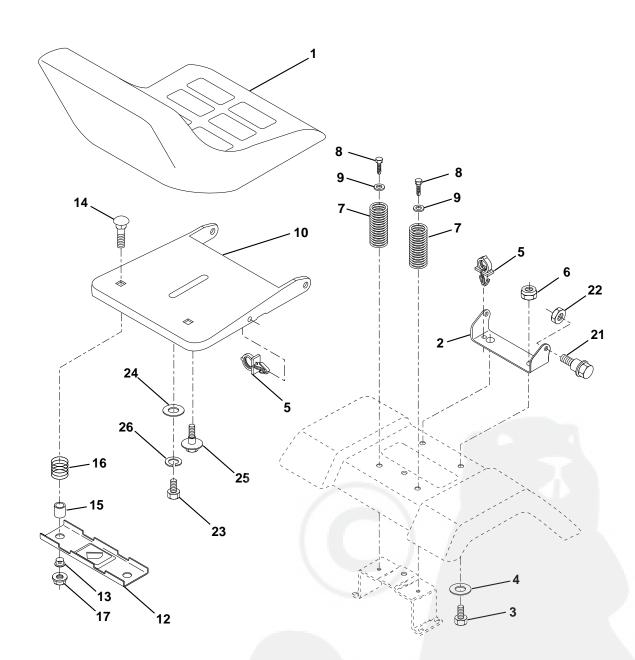


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 3 4 5	140116 140551 74760616 19131610 145006	Seat Bracket, Pivot, Seat Bolt Washer 13/32 x 1 x 10 Ga. Clip, Push-in	14 15 16 17 21	72050412 134300 121250X 123976X 153236	Nut, Crownlock 1/4-20 x 1-3/8 Spacer, Split Spring Nut, Lock, Flange 1/4 Gr. 5 Bolt, Shoulder 5/16-18 UNC
6 7 9 10 12 13	73800600 124181X 17490616 19131614 155925 121246X 121248X	Nut Spring, Seat Screw, Thdrol 3/8-16 x 1 Washer 13/32 x 1 x 14 Ga. Pan, Seat Bracket, Mounting, Switch, Sea Bushing, Nylon	22 23 24 25 26 NOT		Nut Bolt Fin Hex 1/2 - 13 x 7/8 Gr. 5 Washer 17/32 x 1-3/16 x 12 Ga. Bolt Shoulder 5/16-18 x .62 Washer Lock Hvy Hclc Spr 1/2 nponent dimensions given in U.S. inches = 25.4 mm

TRACTOR - - MODEL NUMBER MBA14107A

DECALS

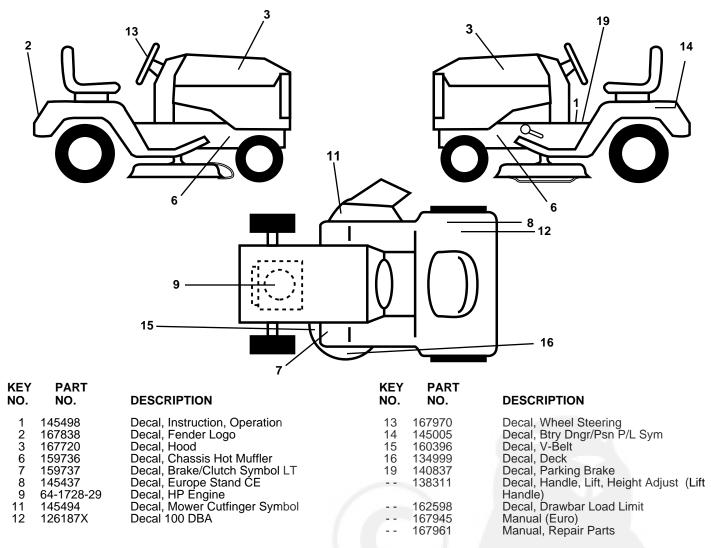

TIRES AND WHEELS

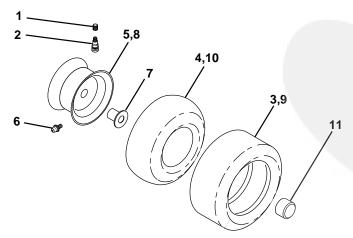


KEY NO.	PART NO.	DESCRIPTION
	59192 65139 106222X 59904 106732X427 278H 9040H 106108X427 124635X 7152J 104757X 144334	Cap, Valve Stem, Valve Tire Front Tube, Front (not furnished) Rim, Asm. Front Grease Fitting (rear tire only) Bearing, Flange (front tire only) Rim, Asm. Rear Tire, Rear Tube, Rear (not furnished) Cap, Axle Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER MBA14107A

STEERING WHEEL

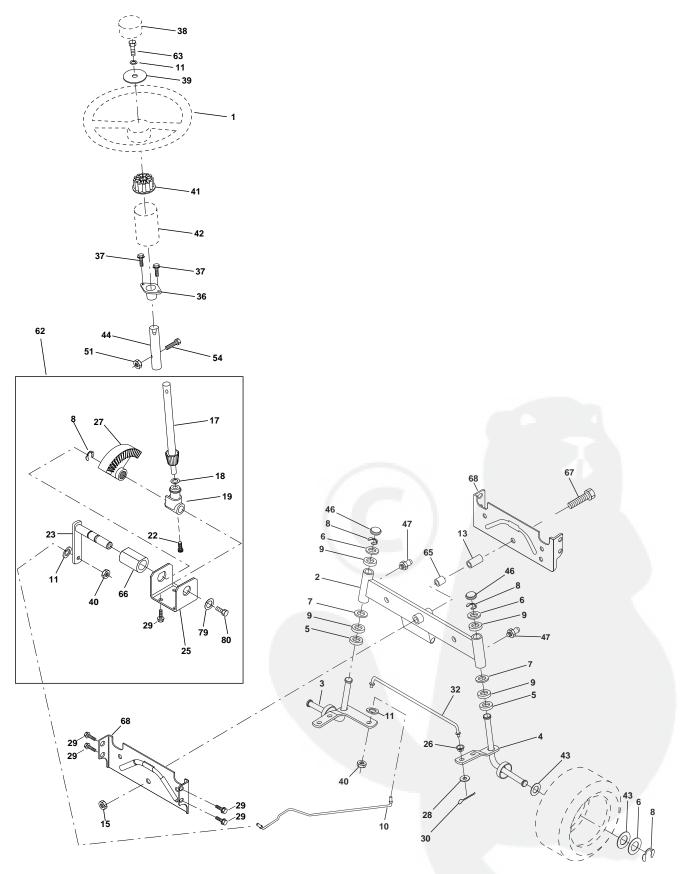

TRACTOR - - MODEL NUMBER MBA14107A


STEERING WHEEL

KEY NO.	PART NO.	DESCRIPTION
$\begin{array}{c}1\\2\\3\\4\\5\\6\\7\\8\\9\\10\\11\\13\\15\\7\\18\\9\\22\\23\\26\\27\\28\\9\\32\\36\\32\\32\\36\\32\\32\\32\\32\\32\\32\\32\\32\\32\\32\\32\\32\\32\\$	139768 154427 156483 157473 6266H 121748X 19272016 12000029 3366R 156438 10040600 154779 73901000 156546 57079 160395 126684X 165857 165851 154406 126847X 136874 19131416 17490612 76020412 130465 155099	Wheel Steering Axle Asm Front Spindle Asm LH Spindle Asm RH Bearing, Race, Thrust Hardened Washer 25/32 X 1-5/8 X 16 Ga Washer 25/32 X 1-1/4 X 16 Ga Ring Klip Bearing Link Drag Washer Lock Hvy HIcl Spr 3/8 Bearing Axle Stlt/Gt Locknut, Hex, Jam, w/Washer Insert 5/8-11 Unc Steering, Assembly Shaft Washer Thrust 515x 750x 033 Support Shaft Washer Shim 1/4 X 5/8 X .062 Screw Hex WSHHD Torx Shaft Asm Pittman Bracket Steering Bushing Link Drag Blk Lr Gear Sector Washer 13/32 x 7/8 x 16 Ga. Screw Thdrol. 3/8-16x3/4 Ty-tt Pin Cotter 1/8 x 3/4 CAD Rod Connecting Bushing Steering
37	152927	Screw TT #10-32 X 5 x 3/8 Flange
38	140175	Cap Wheel Steering
39	19133808	Washer 13/32 x 2-3/8 x 8 Ga
40	7810H	Nut Lock Center 3/8-24 Unf
41	100711L	Adapter Wheel Strg
42	145054	Boot Steering
43	121740X	Washer 25/22 X 1 1/4 X 16 Co
43	121749X	Washer 25/32 X 1 1/4 X 16 Ga
44	153720	Extension Steering
46	121232X	Cap Spindle
47	6855M	Fitting Grease
51	73800500	Nut Lock Hex W/Ins. 5/16-18 Unc P
54	74780520	Bolt Fin Hex 5/16-18 Unc 6 x 1-1/4
62	167902	Kit Steering Asm. Service
63	74780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	154780	Spacer Axle
66	154404	Bearing Arm Pittman
67	74781044	Bolt Fin Hex 5/8-11 UNC x 2-3/4
68	154429	Brsce Axle
79	19132012	Washer 13/32 x 1-1/4 x 12
80	74950612	Bolt, Hex Nylon 3/8-16 x 3/4

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER MBA14107A

ENGINE

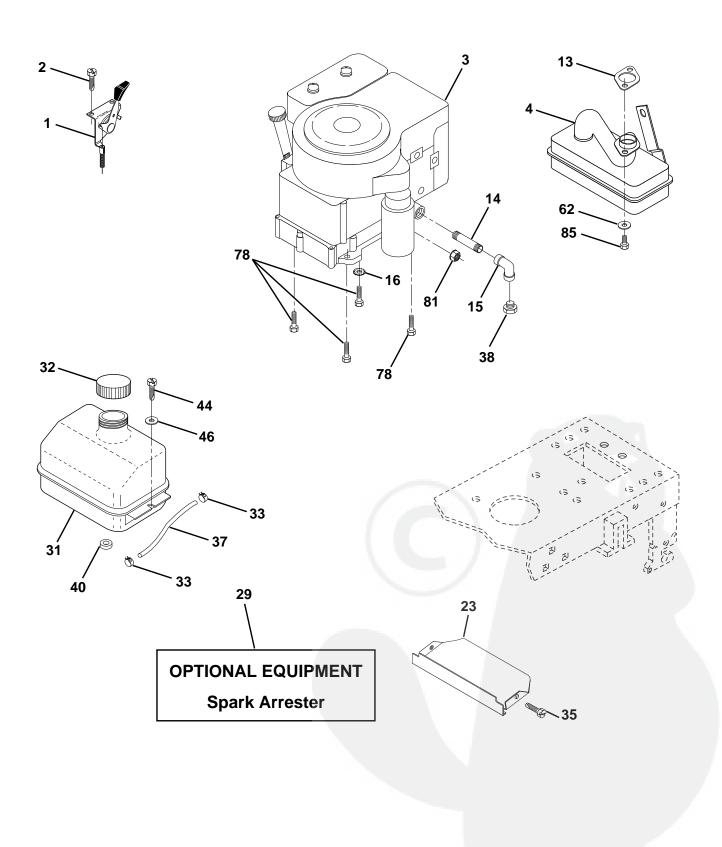

TRACTOR - - MODEL NUMBER MBA14107A


ENGINE

KEY NO.		DESCRIPTION
1 2	140310 17720410	Control Th/ch Screw Hex Thd Cut 1/4-20x5/8 T
3		Engine, Tecumseh Model OHV17 Order parts from engine manufacturer
4	137351	Muffler Exhaust
-	149272	Gasket Muffler
	13280336 13200300	Nipple Pipe Elbow Std 90 Degree 3/8-18 Npt
16	11050600	Washer Lock Ext Tooth 3/8
	159880 137180	Shield BRN/DBR Guard Kit Spark Arrestor (Flat Scrn)
31	109202X	Tank Fuel Front
	140527	Cap Asm Fuel
	123487X 17490512	Clamp Hose Blk Screw Thdrol 5/16-18 x 3/4
37	137040	Line Fuel
38 40	124028X	Plug Oil Drain (Order From Engine Manufacturer) Bushing Snap Nyl Blk Fuel Line
	17490412	Screw Hexwsh Thdrol 1/4-20x3/4
	19091416	Washer 9/32 X 7/8 X 16 Ga
	10040500 17490620	Washer 5/16 Screw Thdrol 3/8-16x1-1/4 TYTT
81	128861	Nut Flange 1/4-20 Starter Nut
85	123528X	Bolt, Hex Hd Phillips

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER MBA14107A

MOWER LIFT

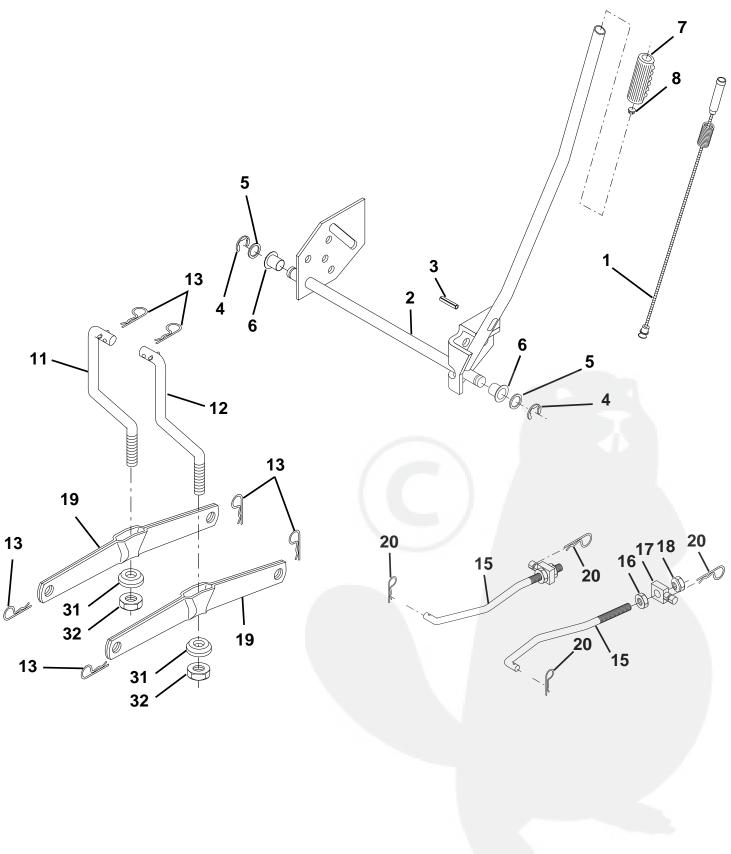

TRACTOR - - MODEL NUMBER MBA14107A


MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
8 11 12 13 15 16 17 18 19 20	139865 139866 4939M 127218 73350800 130171 73680800	Wire Asm. Inner/Sprg w/Plunger Shaft, Asm., Lift R/H Pin, Groove Ring, E #5133-62 Washer 21/32 x 1 x 21 Ga. Bearing, Nylon Grip Handle Bicycle Matte Blk Button, Plunger Link, Lift, Lh Link, Lift, Rh Spring, Retainer Link, Front Nut, Jam, Hex 1/2-13 Unc Trunnion Nut, Crownlock 1/2-13 Unc Arm, Suspension, Rear Spring, Retainer Zinc Bearing, Pvt Lft
32	73540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER MBA14107A

MOWER DECK

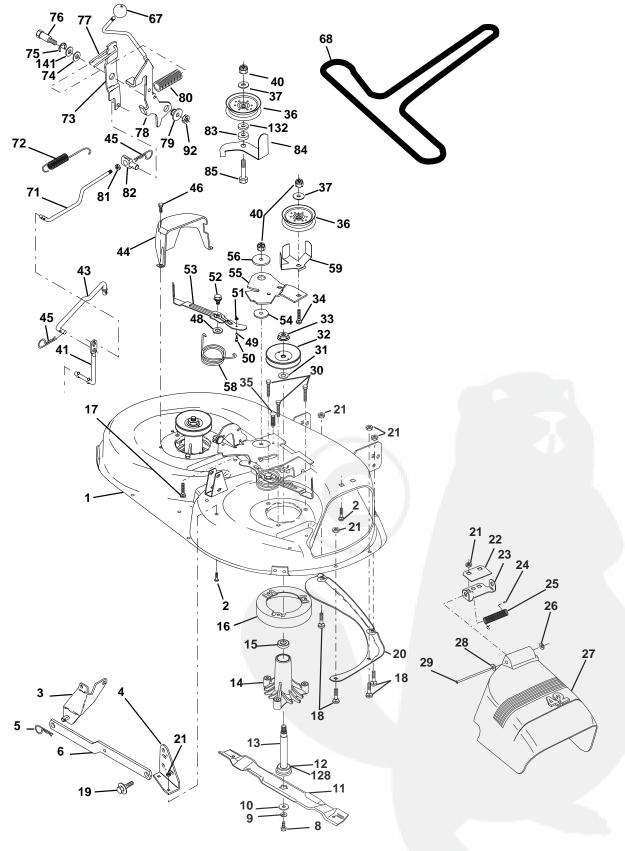

TRACTOR - - MODEL NUMBER MBA14107A

MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
$1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 4\ 5\ 6\ 8\ 9\ 0\ 1\ 1\ 2\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\ 3\$	164961 72140506 138017 138440 4939M 130832 850857 10030600 140296 138498 129895 137645 128774 110485X 140329 72110610 72140505 132827 159770 73680500 134753 131267 105304X 123713X 110452X 130968 19111016 131491 157722 129963 153535 137266 72110614 133835 131494 19131316 73680600 133551 140083 140083	Housing Asm MWR 42" Path Bolt Rdhd Sqnk 5/16-18unc X3/4 Bracket Asm Fr Sway Bar 38/42 Bracket Asm Deck 42"sway Bar Retainer Spring Arm Suspension Rear Bolt 3/8-24x1 25 Gr8 Patched Washer Lock Hvy 3/8 Unplated Washer Hard Blade Mower Vented Blade Mower 42" High Lift Bearing Ball #6204 (Mandrel) Shaft Asm W/lower Bearing Housing Mandrel Vented(machd) Bearing Ball Mandrel Stripper Mower Round Bolt Rdhd Sqnk 3/8-16 X 1.25 Bolt Carr 5/16-18 X 5/8 Bolt Shoulder Baffle Vortex 42 Nut Crown Lock 5/16-18 Stiffener Bracket 42"deck Bracket Deflector Mower 42" Cap Sleeve 80x 112 Blk Mower Spring Torsion Deflector 2 52 Nut Push Phos & Oil Shield Deflector Mower 42" Blk Washer 11/32 X 5/8 X 16 Ga Rod Hinge 42"6 75 Wlg Screw Thdrol Washer Hd Washer Spacer Mower Vented Pulley Mandrel 42/44/50" Nut 9/16top Lock Flng Bolt Rdhd 3/8-16uncx1-3/4 Gr5 Fastner Christmas Tree Pulley Idler Flat 3 060 Washer 13/32 x 13/16 x 16 Ga. Nut Crownlock 3/8-16 Unc Rod Pivot W/nibs Rod Clutch Secondary W/nibs Guard Mandrel LH Black	54 55 56 58 59 67 68 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 92 128 132 141 	4497H 137729 133944 155066 131340 69180 139888 131845 133943 155046 122052X 140086 141043 162132 144200 142427 131870 127847 121748X 12000029 128903 127845 160570 127498 153701 73350600 142028 120958X 156084 72140620 73800600 153390 19132203 6266H 130794 164962 E: All compo 1 inch = 2	Spring Retainer 1" Zinc/cad Screw Hex Thd Cut 1/4-24 UNC Washer Hardened Smaller Roller Asm Cam Follower 42"dec Bolt Shidr 10-24 Zinc Gr 5 42" Nut Lock #10-24 Unc Bolt Shoulder 5/16-18 Unc Blkz Arm Asm Pad Brake Washer Hardened Arm Idler 42" mower Spacer Retainer Pm Mower Spring Torsion Brakes 42" Guard TUV Idler Knob Rd 7/16-14 Pastic Thds Blk V-Belt Mower Rod Clutch Primary 38/42 Spring Return Arm Clutch Secondary Washer 25/32 X 1-5/8 X 16 Ga Ring Klip #t5304-75 Bolt Shoulder 3/8-16 Unc 1 44 Keeper Spring 4 000 Arm Clutch Primary Bushing 747 Od X 794 Lg Brass Spring Clutch Mower Nut Hex Jam 3/8-16 Trunnion Adj. Washer Sintered Keeper Belt Idler Bolt Rdhd Sq 3/8-16 UNC x2-1/2 Nut Lock Hex w/Ins 3/8-16 UNC Washer Felt Washer 13/32 x 1-3/8 x 3 Ga. Wasehr Thrust .75 x 1.230 Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33) Deck, Std (Complete)