
TBS5000 Commercial Trailer Spreader ASSEMBLY INSTRUCTIONS & PARTS LIST



01/98

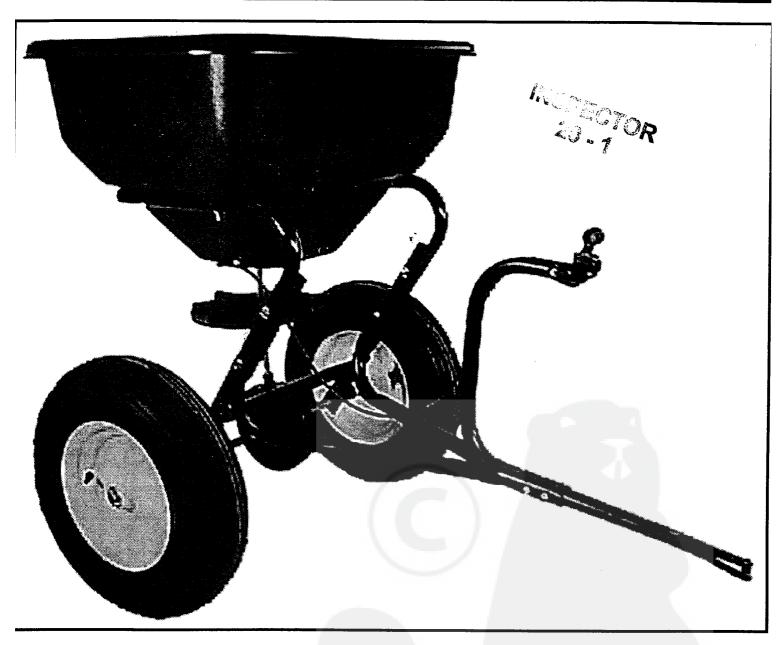


STEP 7


Place the Calibration Indicator between the Control Cable Assembly and the Tow Bar. Using the 1/4" x 2" Round Head Bolt, and Wing Nut, attach Control Cable Assembly to top portion of Tow Bar.


USING YOUR SPREADER

Settings made by loosening the Wing Nut and moving the Calibration Indicator until the desired number is aligned with the top of the Calibration indicator.

SEE APPLICATION CHART FOR SETTING INFORMATION.

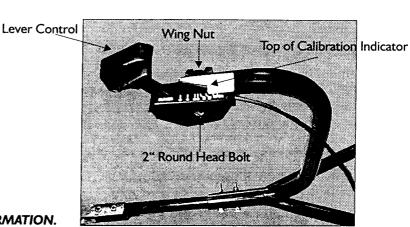

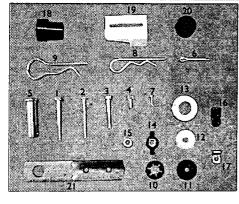

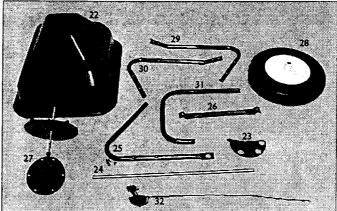

Ref No	Parts No	Description	Qty	Ref	Parts No	Description	Qty
				No			
1	1086	I/4" x 2 " Hex Hd Bolt	6	19	1097	Calibration Indicator	1
2	1655	1/4" x 2" Round Hd Bolt	1	20	3060	Tube Plug	4
3	6129	1/4" x 1-1/2" Hex Hd Bolt	8	21	1062	Clevis	2
4*	1647	I/4" x I/2" Hex Hd Bolt	1	22	5050	Hopper	1
5	1840	1/2" x 1-3/4" Clevis Pin	1	23*	1307	Slide Plate	
6	1262	1/8" x 1-1/4" Cotter Pin	2	24	6171	Axle	1
7*	5063	#6 x 3/8" Screw	2	25	5051	Hopper Support	2
3	1042	#14 Hitch Pin Clip	2	26	5053	Cross Brace	1
9	5060	Drive Wheel Clip	1	27	6122	Gear Case Assembly	1
10*	1008	3/8" Retaining Ring	1	28	5059	Wheel	2
11	6127	1/4" Rubber Washer	4	29	6155	Right Hand Hitch Arm	1
12	6143	1/4" Fender Washer	4	30	6156	Left Hand Hitch Arm	1
13	1646	5/8" Flat Washer	5	31	6225	Double Bent Tow Bar	1
14	1269	I/4" Wing Nut	1	32*	2656	Cable Assembly	1
15	1270	I/4" Hex Nut	15	-			
6*	5050C	Plastic Slide Plate Clamp	2	*ATTACHED AT FACTORY			
7*	1098	3/16" Cable Clamp	1				
18	6214	5/8" Plastic Bushing	2				

PLEASE DO NOT RETURN THIS MERCHANDISE TO THE STORE. CALL US AND WE WILL TAKE CARE OF ANY PROBLEM YOU MIGHT HAVE WITH THIS PRODUCT.

HOW TO ORDER

When ordering parts always give model number, part number, part description and inspector number.

Send To: Parts Division

P.O. Box 2546 Springfield, IL 62708 Phone (800) 225 - 5891

(217) 528 - 1311 FAX (217) 523 - 6701

LIMITED WARRANTY

This unit is warranted against defects in materials and workmanship to the original purchaser, under normal use and service, for a period of ninety (90) days from date of sale. During the Warranty Period, we will repair or replace at our option free of charge to the original purchaser, any part of the Unit that our examination shows to be defective in workmanship or materials. This Warranty **Does Not** apply to damage caused by misuse, abuse, neglect, accident, normal wear, or alterations by unauthorized persons.

